



- KEY**
- 01 MULTIPLE CONNECTORS
  - 02 -
  - 03 START-UP RELAY
  - 04 CLUTCH SWITCH
  - 05 LIGHT LOGIC RELAY
  - 06 RIGHT LIGHT SWITCH
  - 07 SAFETY DIODE
  - 08 HORN
  - 09 LEFT LIGHT SWITCH
  - 10 AMBIENT AIR TEMPERATURE SENSOR
  - 11 INSTRUMENT PANEL
  - 12 INSTRUMENT PANEL DIAGNOSIS
  - 13 KEY SWITCH
  - 14 FRONT STOP SWITCH
  - 15 REAR RIGHT TURN INDICATOR
  - 16 REAR LIGHT ASSEMBLY
  - 17 LEFT RIGHT TURN INDICATOR
  - 18 LICENSE PLATE LIGHT BULB
  - 19 REAR STOP SWITCH
  - 20 ECU DIAGNOSIS
  - 21 AUXILIARY FUSES
  - 22 MAIN FUSES
  - 23 STARTER MOTOR
  - 24 BATTERY
  - 25 VOLTAGE REGULATOR
  - 26 FLYWHEEL
  - 27 MAIN INJECTION RELAY
  - 28 INJECTION DIODE
  - 29 SECONDARY INJECTION RELAY
  - 30 OIL PRESSURE SENSOR
  - 31 NEUTRAL SENSOR
  - 32 LAMBDA PROBE
  - 33 SIDE STAND SWITCH
  - 34 FUEL LEVEL SENSOR
  - 35 FUEL PUMP
  - 36 INTAKE AIR TEMPERATURE SENSOR
  - 37 ENGINE TEMPERATURE SENSOR
  - 38 -
  - 39 THROTTLE POSITION SENSOR
  - 40 RIGHT CYLINDER INNER SPARK PLUG
  - 41 RIGHT CYLINDER OUTER SPARK PLUG
  - 42 LEFT CYLINDER INNER SPARK PLUG
  - 43 LEFT CYLINDER OUTER SPARK PLUG
  - 44 RIGHT CYLINDER DOUBLE COIL
  - 45 LEFT CYLINDER DOUBLE COIL
  - 46 RIGHT CYLINDER INJECTOR
  - 47 LEFT CYLINDER INJECTOR
  - 48 VEHICLE SPEED SENSOR
  - 49 -
  - 50 PICK UP
  - 51 PICK UP CABLE SHIELDING
  - 52 ECU
  - 53 FRONT LEFT TURN INDICATOR
  - 54 TAIL LIGHT BULB
  - 55 LOW-BEAM/HIGH-BEAM BULB
  - 56 HEAD LIGHT ASSEMBLY
  - 57 FRONT RIGHT TURN INDICATOR
  - 58 GPS COUPLING
  - 59 ANTI-THEFT COUPLING

**COLOUR KEY**

- Ar Orange
- Az Sky blue
- B Blue
- Bi White
- G Yellow
- Gr Grey
- M Brown
- N Black
- R Red
- Ro Pink
- V Green
- Vi Purple

**DIAGRAM COLOURS - KEY**

- POWER SUPPLY
- GROUND
- ENABLING/ SIGNAL
- ENABLING/ SIGNAL

**ECU CONNECTORS - KEY**

- A Brown
- B Blue