


BREVA V1100

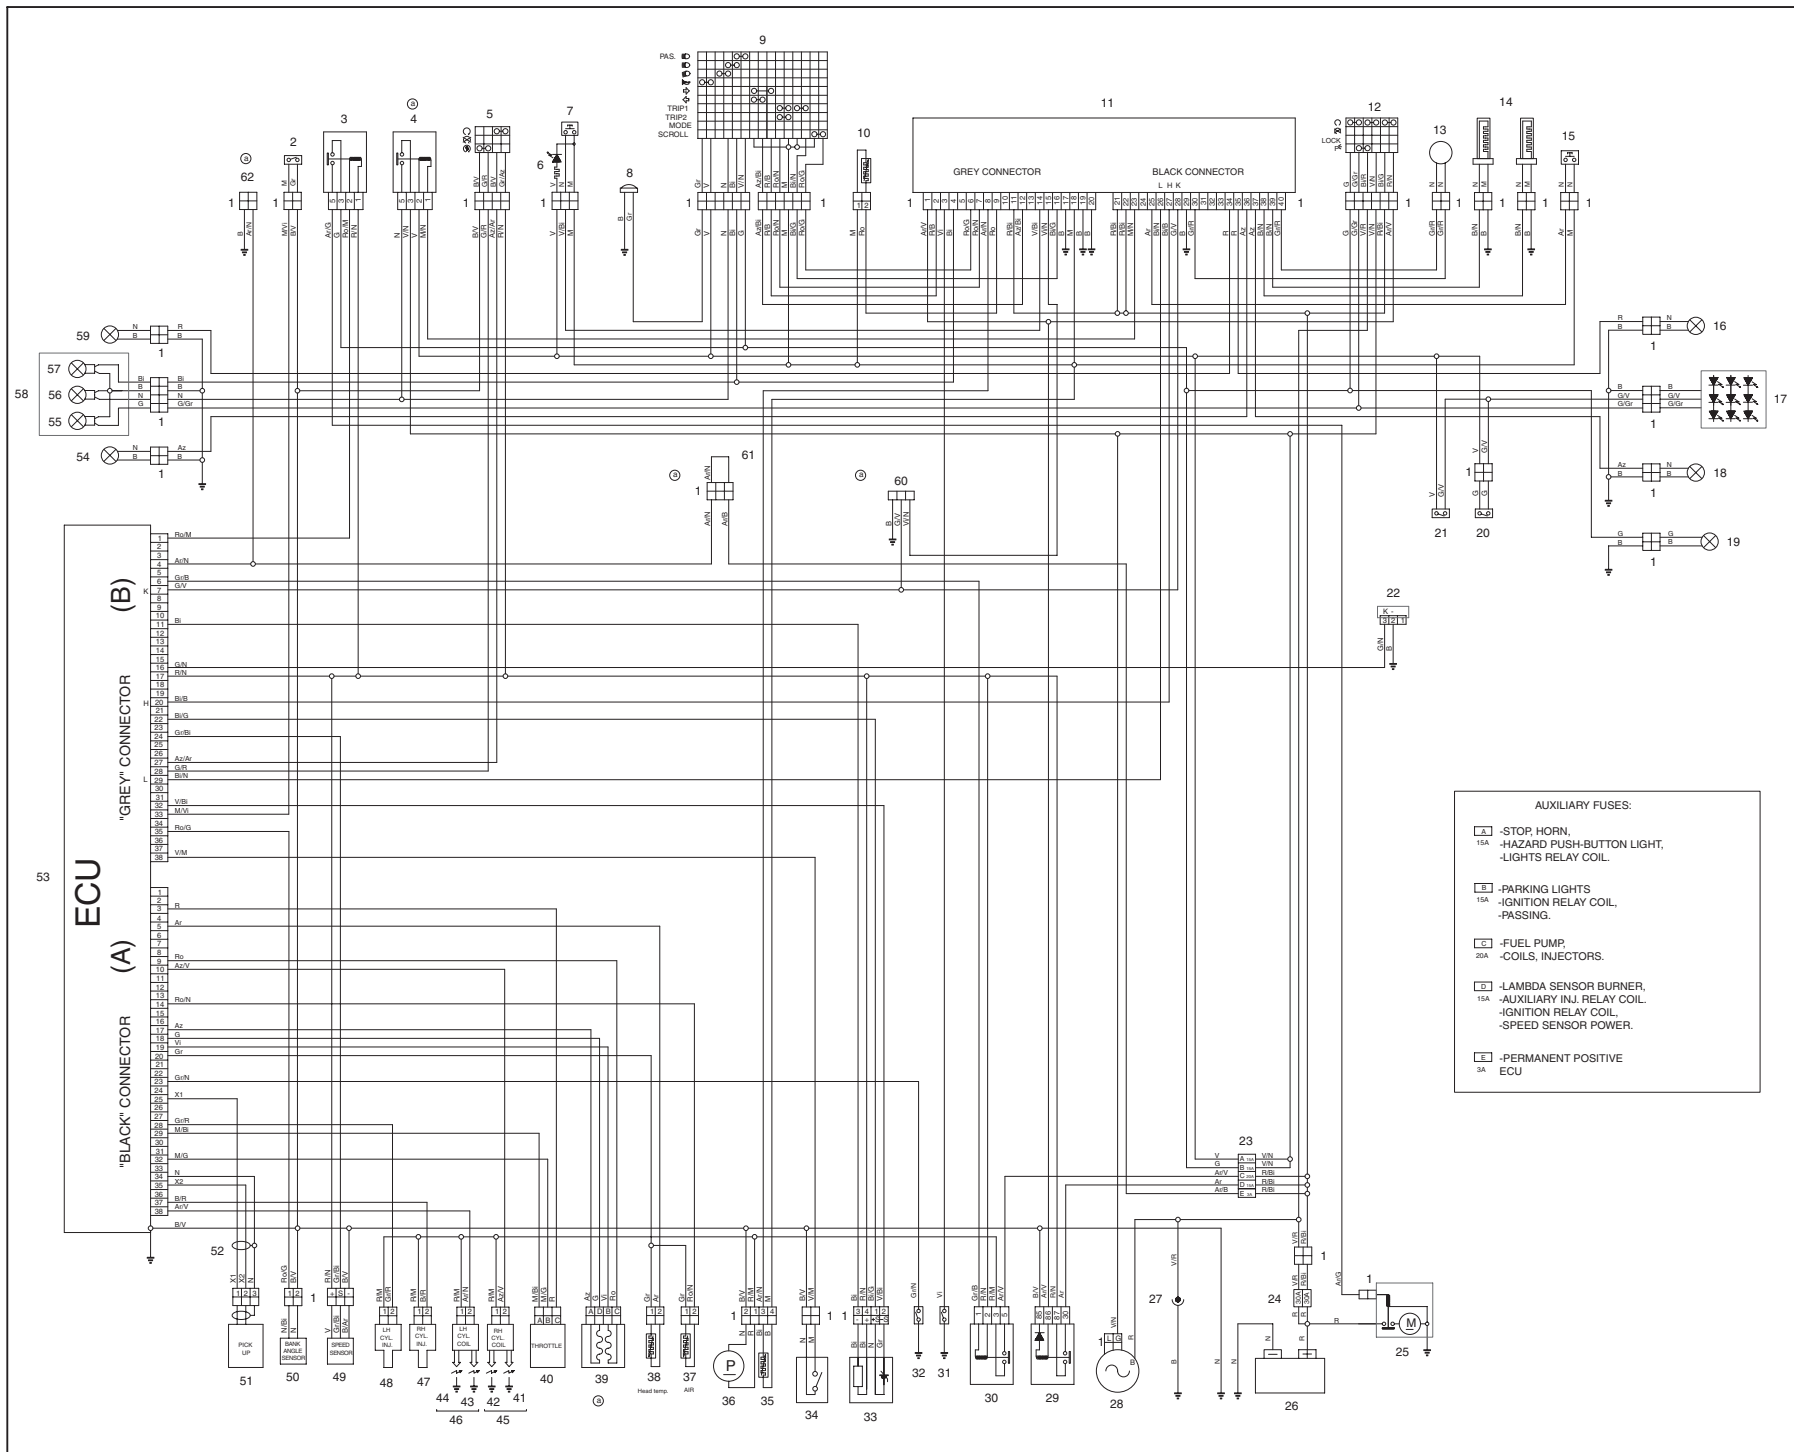

- 1 MULTIPLE CONNECTORS
- 2 CLUTCH SWITCH
- 3 IGNITION SWITCH
- 4 LIGHTS RELAY
- 5 RH DIP SWITCH
- 6 HAZARD PUSH-BUTTON LED
- 7 HAZARD PUSH-BUTTON
- 8 HORN
- 9 LH DIP SWITCH
- 10 INSTRUMENT PANEL AIR TEMP THERMISTOR
- 11 INSTRUMENT PANEL
- 12 IGNITION SWITCH
- 13 IMMOBILIZER ANTENNA
- 14 HEATED HANDGRIPS
- 15 HEATED HANDGRIPS COMMAND
- 16 RH REAR DIRECTION INDICATOR
- 17 TAIL LIGHT (LED)
- 18 LH REAR DIRECTION INDICATOR
- 19 NUMBER PLATE LIGHT
- 20 REAR STOP SWITCH
- 21 FRONT STOP SWITCH
- 22 DIAGNOSIS CONNECTOR
- 23 AUXILIARY FUSES
- 24 MAIN FUSES
- 25 STARTER MOTOR
- 26 BATTERY
- 27 POWER OUTLET
- 28 GENERATOR
- 29 MAIN INJECTION RELAY
- 30 AUXILIARY INJECTION RELAY
- 31 OIL PRESSURE GAUGE
- 32 NEUTRAL SWITCH
- 33 LAMBDA SENSOR
- 34 SIDE STAND SWITCH
- 35 FUEL LEVEL SENSOR
- 36 FUEL PUMP
- 37 INTAKE AIR TEMP THERMISTOR
- 38 HEAD TEMP THERMISTOR
- 39 AUTOMATIC AIR
- 40 THROTTLE SENSOR
- 41 RH CYL. INNER SPARK PLUG
- 42 RH CYL. OUTER SPARK PLUG
- 43 LH CYL. INNER SPARK PLUG
- 44 LH CYL. OUTER SPARK PLUG
- 45 RH CYLINDER TWIN COIL
- 46 LH CYLINDER TWIN COIL
- 47 RH CYL. INJECTOR
- 48 LH CYL. INJECTOR
- 49 SPEED SENSOR
- 50 BANK ANGLE SENSOR
- 51 PICKUP SENSOR
- 52 PICKUP CABLE SHIELD
- 53 ECU
- 54 LH FRONT DIRECTION INDICATOR
- 55 PARKING LIGHT BULB
- 56 LOW BEAM BULB
- 57 HIGH BEAM BULB
- 58 HEADLIGHT
- 59 RH FRONT DIRECTION INDICATOR
- 60 INSTRUMENT PANEL DIAG.
- 61 DIODE PRE-SETTING
- 62 CONDENSER PRE-SETTING

AUXILIARY FUSES:

- | | |
|----------|--|
| A | -STOP, HORN,
-HAZARD PUSH-BUTTON LIGHT,
-LIGHTS RELAY COIL. |
| B | -PARKING LIGHTS
-IGNITION RELAY COIL,
-PASSING. |
| C | -FUEL PUMP,
-COILS, INJECTORS. |
| D | -LAMBDA SENSOR BURNER,
-AUXILIARY INJ. RELAY COIL,
-IGNITION RELAY COIL,
-SPEED SENSOR POWER. |
| E | -PERMANENT POSITIVE
ECU |

CABLE COLOURS

- | | |
|---------------|-----------|
| Ar ORANGE | M BROWN |
| Az LIGHT BLUE | N BLACK |
| B BLUE | R Red |
| Bi WHITE | V GREEN |
| G YELLOW | Vi VIOLET |
| Gr GREY | Ro PINK |