


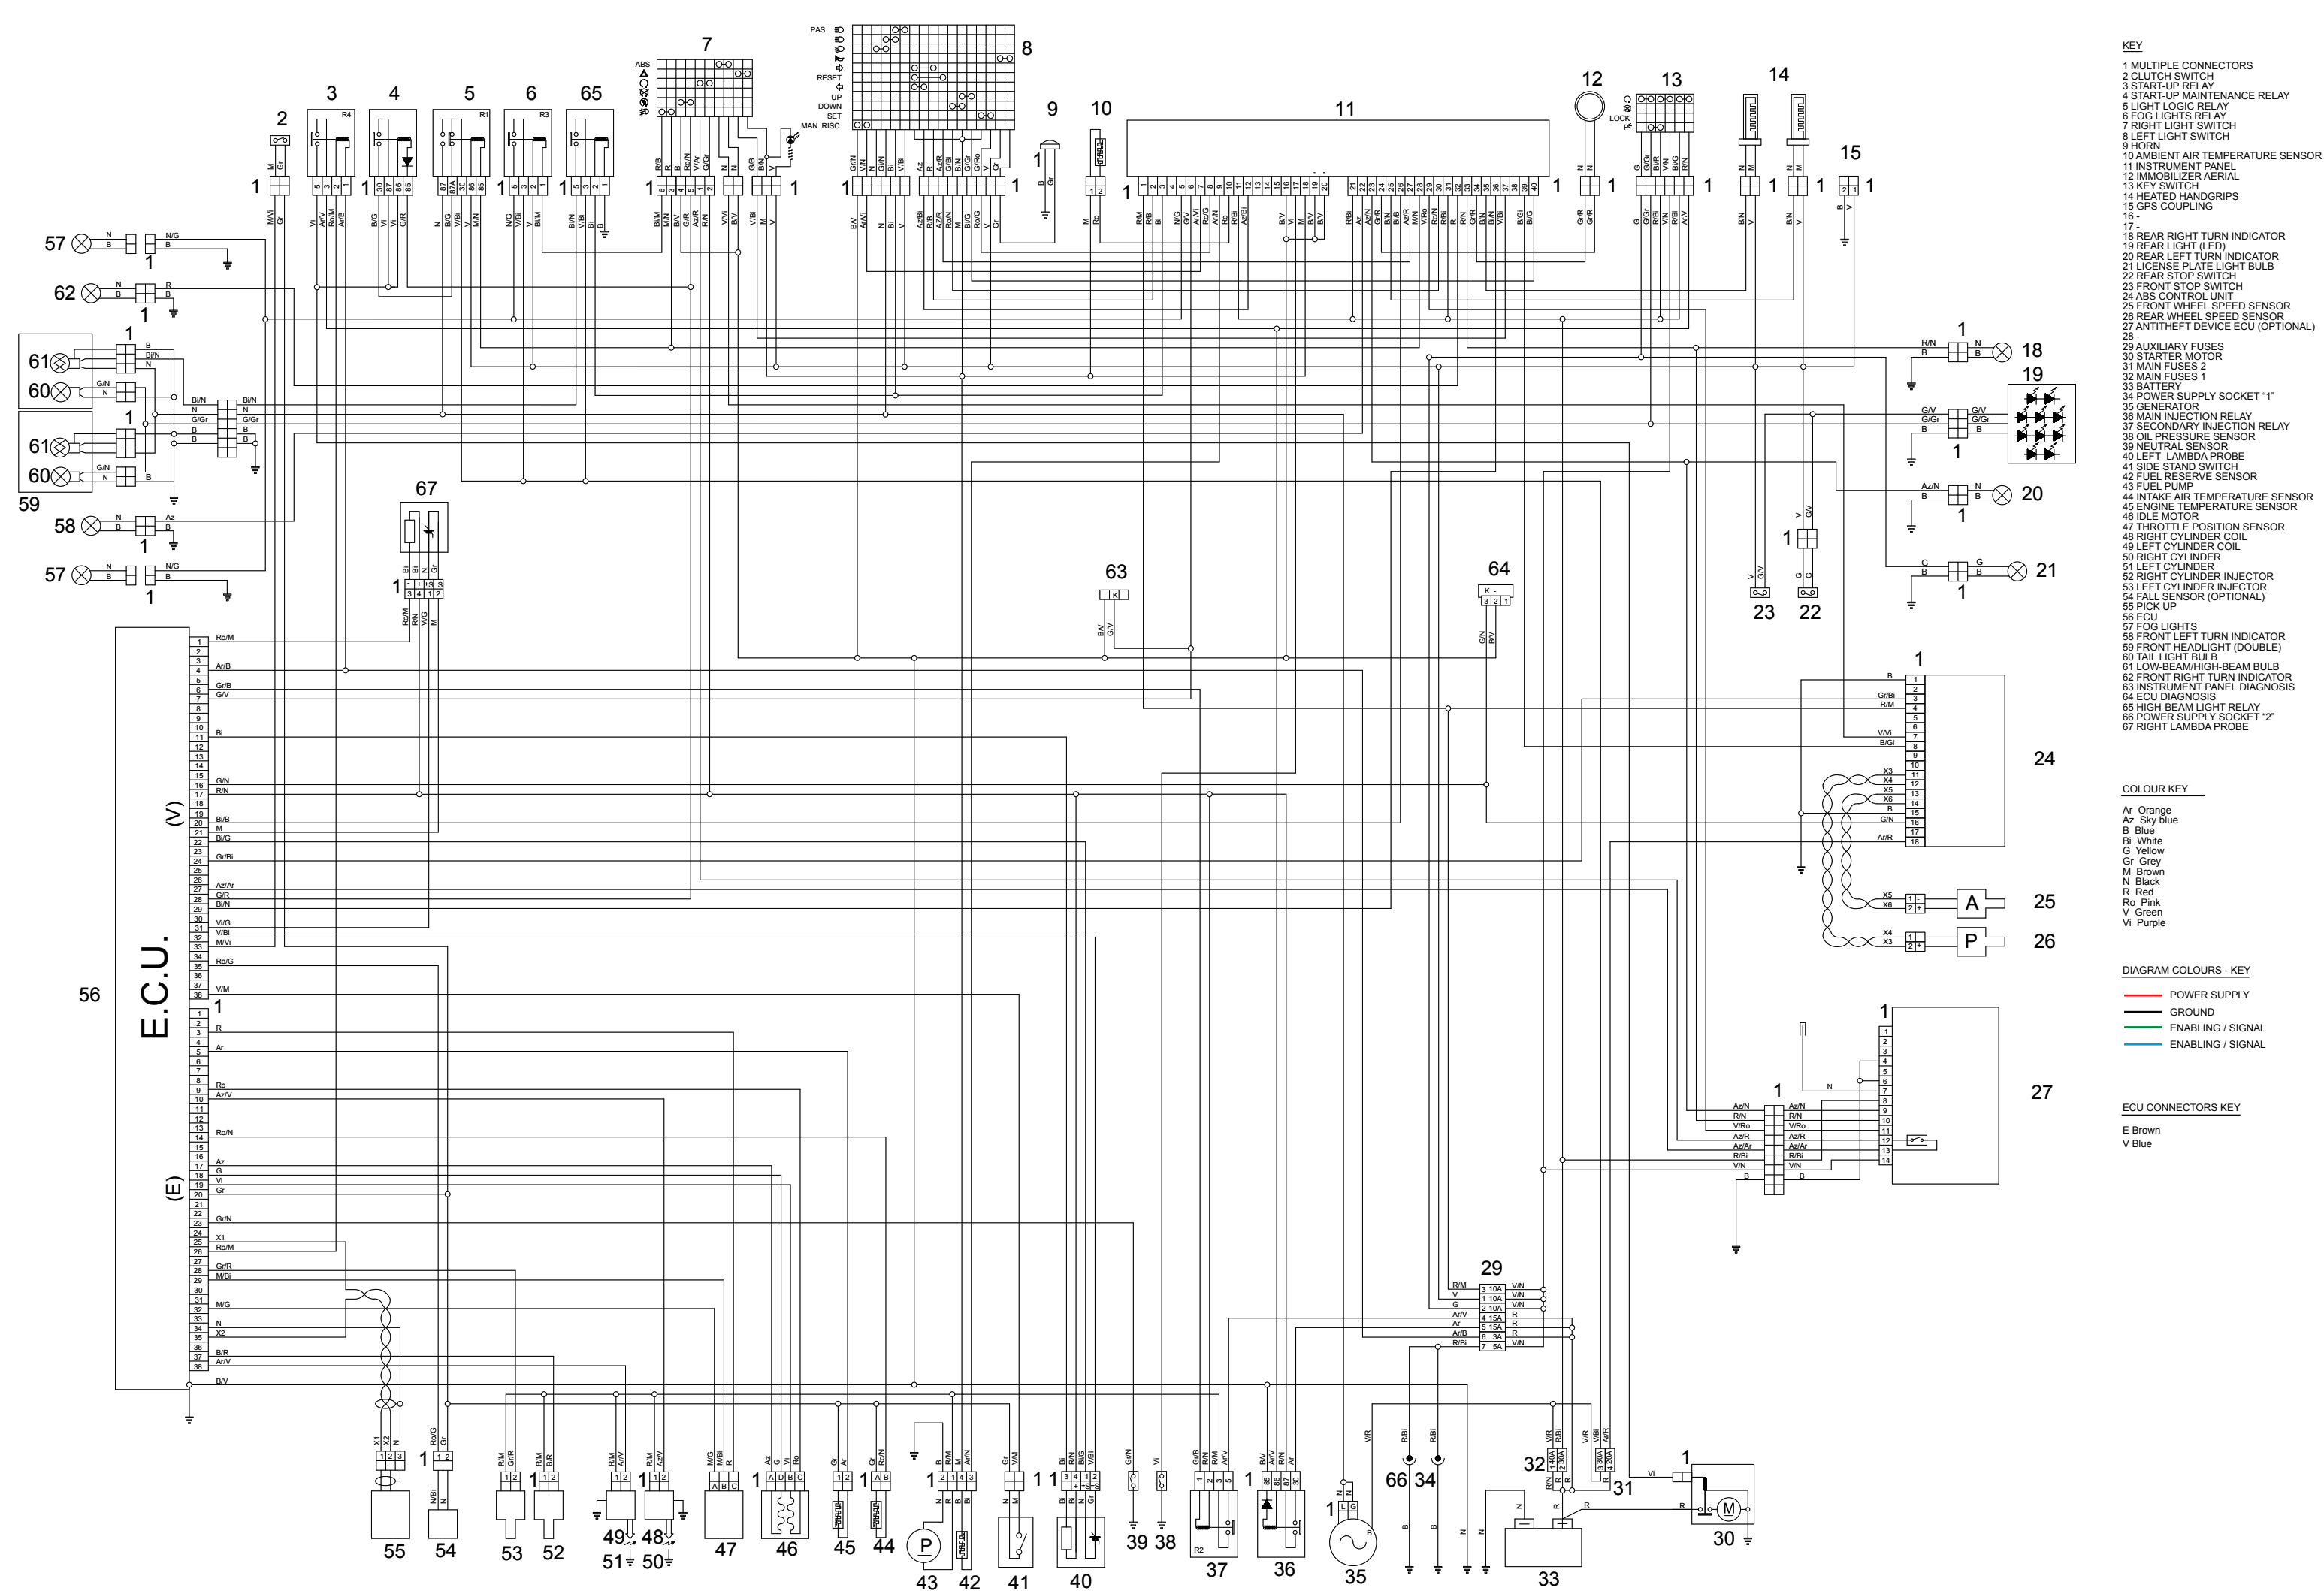

- KEY**
- 1 MULTIPLE CONNECTORS
 - 2 CLUTCH SWITCH
 - 3 START-UP RELAY
 - 4 START-UP MAINTENANCE RELAY
 - 5 LIGHT LOGIC RELAY
 - 6 FOG LIGHTS RELAY
 - 7 RIGHT LIGHT SWITCH
 - 8 LEFT LIGHT SWITCH
 - 9 HORN
 - 10 AMBIENT AIR TEMPERATURE SENSOR
 - 11 INSTRUMENT PANEL
 - 12 IMMOBILIZER AERIAL
 - 13 KEY SWITCH
 - 14 HEATED HANDGRIPS
 - 15 GPS COUPLING
 - 16 -
 - 17 -
 - 18 REAR RIGHT TURN INDICATOR
 - 19 REAR LIGHT (LED)
 - 20 REAR LEFT TURN INDICATOR
 - 21 LICENSE PLATE LIGHT BULB
 - 22 REAR STOP SWITCH
 - 23 FRONT STOP SWITCH
 - 24 ABS CONTROL UNIT
 - 25 FRONT WHEEL SPEED SENSOR
 - 26 REAR WHEEL SPEED SENSOR
 - 27 ANTITHEFT DEVICE ECU (OPTIONAL)
 - 28 -
 - 29 AUXILIARY FUSES
 - 30 STARTER MOTOR
 - 31 MAIN FUSES 2
 - 32 MAIN FUSES 1
 - 33 BATTERY
 - 34 POWER SUPPLY SOCKET "1"
 - 35 GENERATOR
 - 36 MAIN INJECTION RELAY
 - 37 SECONDARY INJECTION RELAY
 - 38 OIL PRESSURE SENSOR
 - 39 NEUTRAL SENSOR
 - 40 LEFT LAMBDA PROBE
 - 41 SIDE STAND SWITCH
 - 42 FUEL RESERVE SENSOR
 - 43 FUEL PUMP
 - 44 INTAKE AIR TEMPERATURE SENSOR
 - 45 ENGINE TEMPERATURE SENSOR
 - 46 IDLE MOTOR
 - 47 THROTTLE POSITION SENSOR
 - 48 RIGHT CYLINDER COIL
 - 49 LEFT CYLINDER COIL
 - 50 RIGHT CYLINDER
 - 51 LEFT CYLINDER
 - 52 RIGHT CYLINDER INJECTOR
 - 53 LEFT CYLINDER INJECTOR
 - 54 FALL SENSOR (OPTIONAL)
 - 55 PICK UP
 - 56 ECU
 - 57 FOG LIGHTS
 - 58 FRONT LEFT TURN INDICATOR
 - 59 FRONT HEADLIGHT (DOUBLE)
 - 60 TAIL LIGHT BULB
 - 61 LOW-BEAM/HIGH-BEAM BULB
 - 62 FRONT RIGHT TURN INDICATOR
 - 63 INSTRUMENT PANEL DIAGNOSIS
 - 64 ECU DIAGNOSIS
 - 65 HIGH-BEAM LIGHT RELAY
 - 66 POWER SUPPLY SOCKET "2"
 - 67 RIGHT LAMBDA PROBE

COLOUR KEY

- Ar Orange
- Az Sky blue
- B Blue
- Bi White
- G Yellow
- Gr Grey
- M Brown
- N Black
- R Red
- Ro Pink
- V Green
- Vi Purple

DIAGRAM COLOURS - KEY

- POWER SUPPLY
- GROUND
- ENABLING / SIGNAL
- ENABLING / SIGNAL

ECU CONNECTORS KEY

- E Brown
- V Blue