



SERVICE STATION MANUAL

898983



V7 Racer



SERVICE STATION MANUAL

V7 Racer

THE VALUE OF SERVICE

Only the mechanics of the Official Moto Guzzi Service Network know this vehicle well, thanks to constant technical professional development and Moto Guzzi specific training programmes, and have the tools needed to carry out maintenance and repair operations correctly.

The reliability of the vehicle also depends on its mechanical conditions. Checking the vehicle before riding it, carrying out routine maintenance and using only Moto Guzzi Original Spare parts is fundamental!

For information about the nearest Official Dealer and/or Service Centre, consult the Yellow Pages or search directly on the inset map in our Official Website:

www.motoguzzi.it

Only by purchasing Moto Guzzi Original Spare Parts will you get a product designed and tested during the bike designing phase. Moto Guzzi Original Spare Parts are subject to systematic quality control procedures so that their reliability and performance over time is guaranteed.

The descriptions and illustrations given in this publication are not binding; While the basic features as described and illustrated in this booklet remain unchanged, Moto Guzzi reserves the right, at any time and without being required to update this publication beforehand, to make any changes to components, parts or accessory supplies, which it deems necessary to improve the product or which are required for manufacturing or commercial reasons.

Not all versions/models shown in this publication are available in all countries. The availability of individual versions should be checked with the Official Moto Guzzi sales network.

© Copyright 2010- Moto Guzzi. All rights reserved. Reproduction of this publication in whole or in part is prohibited. Moto Guzzi - After sales service.

The Moto Guzzi trademark is the property of Piaggio & C. S.p.A.

SERVICE STATION MANUAL

V7 Racer

This manual provides the main information to carry out regular maintenance operations on your scooter. This manual is intended to **Moto Guzzi Dealers** and their qualified mechanics; several concepts have been deliberately omitted as they are considered unnecessary. As it is not possible to include complete mechanical notions in this manual, users should have basic mechanical knowledge or minimum knowledge about the procedures involved when repairing scooters. Without this knowledge, repairing or checking the vehicle may be inefficient or even dangerous. As the vehicle repair and check procedures are not described in detail, be extremely cautious so as not to damage components or injure individuals. In order to optimise customer satisfaction when using our vehicles, **Moto Guzzi s.p.a.** commits itself to continually improve its products and the relative documentation. The main technical modifications and changes in repair procedures are communicated to all **Moto Guzzi Sales Outlets and its International Subsidiaries**. These changes will be introduced in the subsequent editions of the manual. In case of need or further queries on repair and check procedures, consult **Moto Guzzi CUSTOMER DEPARTMENT**, which will be prepared to provide any information on the subject and any further communications on updates and technical changes related to the vehicle.

NOTE Provides key information to make the procedure easier to understand and carry out.

CAUTION Refers to specific procedures to carry out for preventing damages to the vehicle.

WARNING Refers to specific procedures to carry out to prevent injuries to the repairer.



Personal safety Failure to completely observe these instructions will result in serious risk of personal injury.



Safeguarding the environment Sections marked with this symbol indicate the correct use of the vehicle to prevent damaging the environment.



Vehicle intactness The incomplete or non-observance of these regulations leads to the risk of serious damage to the vehicle and sometimes even the invalidity of the guarantee



INDEX OF TOPICS

CHARACTERISTICS

CHAR

SPECIAL TOOLS

S-TOOLS

MAINTENANCE

MAIN

ELECTRICAL SYSTEM

ELE SYS

ENGINE FROM VEHICLE

ENG VE

POWER SUPPLY

P SUPP

SUSPENSIONS

SUSP

CHASSIS

CHAS

BODYWORK

BODYW

PRE-DELIVERY

PRE DE

INDEX OF TOPICS

CHARACTERISTICS

CHAR

Rules

Safety rules

Carbon monoxide

If you need to keep the engine running while working on the vehicle, please ensure that you do so in an open or very well ventilated area. Never let the engine run in an enclosed area. If you do work in an enclosed area, make sure to use a fume extraction system.

CAUTION



EXHAUST EMISSIONS CONTAIN CARBON MONOXIDE, A POISONOUS GAS WHICH CAN CAUSE LOSS OF CONSCIOUSNESS AND EVEN DEATH.

Fuel

CAUTION



THE FUEL USED TO POWER INTERNAL COMBUSTION ENGINES IS HIGHLY FLAMMABLE AND MAY BE EXPLOSIVE UNDER CERTAIN CONDITIONS. IT IS THEREFORE RECOMMENDED TO CARRY OUT REFUELLING AND MAINTENANCE PROCEDURES IN A VENTILATED AREA WITH THE ENGINE SWITCHED OFF. DO NOT SMOKE DURING REFUELLING OR NEAR FUEL VAPOUR. AVOID ANY CONTACT WITH NAKED FLAME, SPARKS OR OTHER HEAT SOURCES WHICH MAY CAUSE IGNITION OR EXPLOSION.

DO NOT ALLOW FUEL TO DISPERSE INTO THE ENVIRONMENT.

KEEP OUT OF THE REACH OF CHILDREN.

Hot components

The engine and the exhaust system components become very hot and remain hot for some time after the engine has been switched off. Before handling these components, make sure that you are wearing insulating gloves or wait until the engine and the exhaust system have cooled down.

Used engine oil and transmission oil

CAUTION



IT IS ADVISABLE TO WEAR LATEX GLOVES WHEN SERVICING THE VEHICLE.

THE ENGINE OR GEARBOX OIL MAY CAUSE SERIOUS INJURIES TO THE SKIN IF HANDLED FOR PROLONGED PERIODS OF TIME AND ON A REGULAR BASIS.

WASH YOUR HANDS CAREFULLY AFTER HANDLING OIL.

HAND THE OIL OVER TO OR HAVE IT COLLECTED BY THE NEAREST USED OIL RECYCLING COMPANY OR THE SUPPLIER.

DO NOT DISPOSE OF OIL IN THE ENVIRONMENT

KEEP OUT OF THE REACH OF CHILDREN.

Brake and clutch fluid



BRAKE AND CLUTCH FLUIDS CAN DAMAGE THE PLASTIC OR RUBBER PAINTED SURFACES. WHEN SERVICING THE BRAKING OR THE CLUTCH SYSTEM PROTECT THESE COMPONENTS WITH A CLEAN CLOTH. ALWAYS WEAR PROTECTIVE GOGGLES WHEN SERVICING THESE SYSTEMS. BRAKE AND CLUTCH FLUIDS ARE EXTREMELY HARMFUL FOR YOUR EYES. IN THE EVENT OF ACCIDENTAL CONTACT WITH THE EYES, RINSE THEM IMMEDIATELY WITH PLENTY OF COLD, CLEAN WATER AND SEEK MEDICAL ADVICE. KEEP OUT OF THE REACH OF CHILDREN.

Battery electrolyte and hydrogen gas

CAUTION



THE BATTERY ELECTROLYTE IS TOXIC, CORROSIVE AND, AS IT CONTAINS SULPHURIC ACID, MAY CAUSE BURNING IF IT COMES INTO CONTACT WITH THE SKIN. WHEN HANDLING BATTERY ELECTROLYTE, WEAR TIGHT-FITTING GLOVES AND PROTECTIVE APPAREL. IN THE EVENT OF SKIN CONTACT WITH THE ELECTROLYTIC FLUID, RINSE WELL WITH PLENTY OF CLEAN WATER. IT IS PARTICULARLY IMPORTANT TO PROTECT YOUR EYES BECAUSE EVEN TINY AMOUNTS OF BATTERY ACID MAY CAUSE BLINDNESS. IN THE EVENT OF CONTACT WITH THE EYES, RINSE WITH PLENTY OF WATER FOR FIFTEEN MINUTES AND CONSULT AN EYE SPECIALIST IMMEDIATELY. IF THE FLUID IS ACCIDENTALLY SWALLOWED, DRINK LARGE QUANTITIES OF WATER OR MILK, FOLLOWED BY MILK OF MAGNESIA OR VEGETABLE OIL AND SEEK MEDICAL ADVICE IMMEDIATELY. THE BATTERY RELEASES EXPLOSIVE GASES; KEEP IT AWAY FROM FLAMES, SPARKS, CIGARETTES OR ANY OTHER HEAT SOURCES. ENSURE ADEQUATE VENTILATION WHEN SERVICING OR RECHARGING THE BATTERY.

KEEP OUT OF THE REACH OF CHILDREN.

BATTERY LIQUID IS CORROSIVE. DO NOT POUR IT OR SPILL IT, PARTICULARLY ON PLASTIC COMPONENTS. ENSURE THAT THE ELECTROLYTIC ACID IS COMPATIBLE WITH THE BATTERY BEING ACTIVATED.

Maintenance rules

GENERAL PRECAUTIONS AND INFORMATION

When repairing, dismantling and reassembling the vehicle follow the recommendations reported below carefully.

BEFORE REMOVING COMPONENTS

- Before dismantling components, remove dirt, mud, dust and foreign bodies from the vehicle. Use the special tools designed for this bike, as required.

COMPONENTS REMOVAL

- Do not loosen and/or tighten screws and nuts using pliers or any other tools than the specific wrench.
- Mark the positions on all connection joints (pipes, cables, etc.) before separating them, and identify them with different distinctive symbols.
- Each component needs to be clearly marked to enable identification during reassembly.
- Clean and wash the dismantled components carefully using a low-flammability detergent.

- Keep mated parts together since they have "adjusted" to each other due to normal wear.
- Some components must be used together or replaced altogether.
- Keep away from heat sources.

REASSEMBLY OF COMPONENTS

CAUTION

BEARINGS MUST BE ABLE TO ROTATE FREELY, WITHOUT JAMMING AND/OR NOISE: OTHERWISE, THEY NEED TO BE REPLACED.

- Only use ORIGINAL Moto Guzzi SPARE PARTS.
- Comply with lubricant and consumables use guidelines.
- Lubricate parts (whenever possible) before reassembling them.
- When tightening nuts and screws, start from the ones with the largest section or from the internal ones, moving diagonally. Tighten nuts and screws in successive steps before applying the tightening torque.
- Always replace self-locking nuts, washers, sealing rings, circlips, O-rings (OR), split pins and screws with new ones if their tread is damaged.
- When assembling the bearings, make sure to lubricate them well.
- Check that each component is assembled correctly.
- After a repair or routine maintenance procedure, carry out pre-ride checks and test the vehicle on private grounds or in an area with low traffic density.
- Clean all coupling surfaces, oil guard rims and gaskets before refitting them. Smear a light layer of lithium-based grease on the oil guard rims. Reassemble oil guards and bearings with the brand or lot number facing outward (visible side).

ELECTRIC CONNECTORS

Electric connectors must be disconnected as described below; failure to comply with this procedure causes irreparable damage to both the connector and the cable harness:

Press the relevant safety hooks, if any.

- Grip the two connectors and disconnect them by pulling them in opposite directions.
- If any signs of dirt, rust, moisture, etc. are noted, clean the inside of the connector carefully with a jet of compressed air.
- Ensure that the cables are correctly fastened to the internal connector terminals.
- Then connect the two connectors, ensuring that they couple correctly (if fitted with clips, you will hear them "click" into place).

CAUTION

TO DISCONNECT THE TWO CONNECTORS, DO NOT PULL THE CABLES.

NOTE

THE TWO CONNECTORS CONNECT ONLY FROM ONE SIDE: CONNECT THEM THE RIGHT WAY ROUND.

TIGHTENING TORQUES

CAUTION

IN THE EVENT THAT A SELFBRAKING NUT IS UNSCREWED, IT IS NECESSARY TO REPLACE IT WITH A NEW ONE.

CAUTION

DO NOT FORGET THAT THE TIGHTENING TORQUES OF ALL FASTENING ELEMENTS ON WHEELS, BRAKES, WHEEL BOLTS AND ANY OTHER SUSPENSION COMPONENTS PLAY A KEY ROLE IN ENSURING VEHICLE SAFETY AND MUST COMPLY WITH SPECIFIED VALUES. CHECK THE TIGHTENING TORQUES OF FASTENING PARTS ON A REGULAR BASIS AND ALWAYS USE A TORQUE WRENCH TO REASSEMBLE THESE COMPONENTS. FAILURE TO COMPLY WITH THESE RECOMMENDATIONS MAY CAUSE ONE OF THESE COMPONENTS TO GET LOOSE AND EVEN DETACHED, THUS BLOCKING A WHEEL, OR OTHERWISE COMPROMISE VEHICLE HANDLING. THIS CAN LEAD TO FALLS, WITH THE RISK OF SERIOUS INJURY OR DEATH.

Running-in

Engine run-in is essential to ensure engine long life and correct operation. Twisty roads and gradients are ideal to run in engine, brakes and suspensions effectively. Vary your riding speed during the run-in. This ensures that components operate under both "loaded" and "unloaded" conditions, allowing the engine components to cool.

CAUTION

THE CLUTCH MAY EMIT A SLIGHT BURNING SMELL WHEN FIRST USED. THIS PHENOMENON SHOULD BE CONSIDERED NORMAL AND WILL DISAPPEAR AS SOON AS THE CLUTCH DISCS GET ADAPTED.

IT IS IMPORTANT TO STRAIN ENGINE COMPONENTS DURING RUN-IN, HOWEVER, MAKE SURE NOT TO OVERDO THIS.

CAUTION

THE FULL PERFORMANCE OF THE VEHICLE IS ONLY AVAILABLE AFTER THE SERVICE AT THE END OF THE RUNNING IN PERIOD.

Follow the guidelines detailed below:

- Do not twist the throttle grip abruptly and completely when the engine is working at a low revs, either during or after run-in.
- During the first 100 Km (62 miles) use the brakes gently, avoiding sudden or prolonged braking. That is to permit the adequate adjustment of the pad friction material to the brake discs.



AFTER THE SPECIFIED MILEAGE, TAKE THE VEHICLE TO AN OFFICIAL Moto Guzzi DEALER FOR THE CHECKS INDICATED IN THE "AFTER RUN-IN" TABLE IN THE SCHEDULED MAINTENANCE SECTION TO AVOID INJURING YOURSELF, OTHERS AND /OR DAMAGING THE VEHICLE.

Vehicle identification

SERIAL NUMBER LOCATION

These numbers are necessary for vehicle registration.

NOTE

ALTERING IDENTIFICATION NUMBERS MAY BE SERIOUSLY PUNISHABLE BY LAW. IN PARTICULAR, MODIFYING THE CHASSIS NUMBER IMMEDIATELY VOIDS THE WARRANTY.

This number consists of numbers and letters, as in the example shown below.

ZGULWB0009MXXXXXX

KEY:

ZGU: WMI (World manufacturer identifier) code;

LW: model;

B00: version variation;

0: free digit

9: variable year of manufacture (9 - for 2009)

M: production plant (M= Mandello del Lario);

XXXXXX: serial number (6 digits);


CHASSIS NUMBER

The chassis number is stamped on the right hand side of the headstock.



ENGINE NUMBER

The engine number is stamped on the left side, close to the engine oil level check cap.

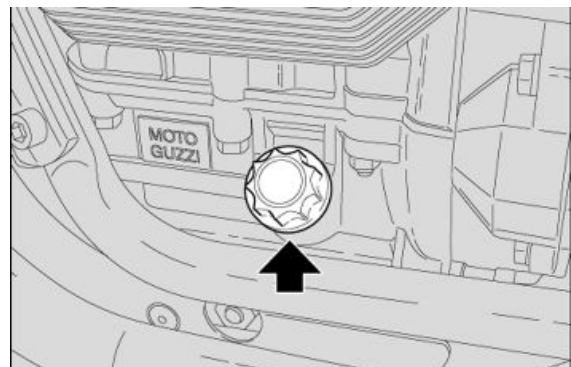

Dimensions and mass

WEIGHT AND DIMENSIONS

Specification	Desc./Quantity
Max. length	2185 mm (86 in)
Max. width	28.74 in (730 mm)
Max. height	1115 mm (43.9 in)
Saddle height	805 mm (31.69 in)
Wheelbase	1435 mm (56.5 in)
Minimum ground clearance	182 mm (7.16 in)
Kerb weight	198 kg (436 lb)

Engine

ENGINE

Specification	Desc./Quantity
Type	traverse-mounted twin-cylinder four-stroke V 90°
No. of cylinders	2
Engine capacity	744 cm³ (45.40 cu.in)
Bore / stroke	80x74 mm (3.14x2.91 in)
Compression ratio	9.6 : 1

Specification	Desc./Quantity
Electric	Electric starter
Engine idle speed	1100 +/- 100 rpm
Intake valve clearance	0.15 mm (0.0059 in)
Exhaust valve clearance	0.20 mm (0.0079 in)
Clutch	dry single-disc clutch with flexible coupling
Lubrication	Pressure-fed, controlled by valves and trochoidal pump
Air filter	cartridge-type dry filter
Cooling	air

Transmission

TRANSMISSION

Specification	Desc./Quantity
Gearbox / Type	mechanical, 5 speeds with foot lever on the left-hand side of the engine.
Primary drive	with gears, ratio: 16 / 21 = 1 : 1.3125
Gear ratios, 1st gear	11 / 26 = 1 : 2.3636
Gear ratios, 2nd gear	14 / 23 = 1 : 1.6429
Gear ratios, 3rd gear	18 / 23 = 1 : 1.2778
Gear ratios, 4th gear	18 / 19 = 1 : 1.0556
Gear ratios, 5th gear	22 / 25 = 1 : 0.9
Final drive	with cardan shaft, ratio: 8 / 33 = 1 : 4.825

Capacities

CAPACITY

Specification	Desc./Quantity
Fuel (reserve included)	15 l (3.30 UKgal; 3.96 USgal)
Fuel reserve	2.5 l (0.55 UK gal; 0.66 USgal)
Engine oil	oil change and oil filter replacement: 1780 cm ³ (108.62 cu.in)
Gearbox oil	1 l (0.26 USgal)
Transmission oil	170 cm ³ (10.37 cu.in)
Seats	1*
Maximum carrying load	203 kg (447 lb) (rider + passenger + luggage)
*	2, if the vehicle is equipped with the long, two-seater saddle and passenger footpegs. In this case, the user is required to contact the relevant local authorities for information concerning the actions necessary to amend the vehicle registration documents appropriately.

Electrical system

ELECTRICAL SYSTEM

Specification	Desc./Quantity
Battery	12V - 12 Ah
Fuses	3- 15- 30 A
Generator (alternator + rectifier)	12V - 350 W

SPARK PLUGS

Specification	Desc./Quantity
Standard	NGK BR8ES
Alternatively:	NGK BR9ES
Spark plug electrode gap	0.6 - 0.7 mm (0.024 - 0.027 in)
Resistance	5 kOhm

BULBS

Specification	Desc./Quantity
Low/high beam light (halogen)	12 V - 55 W / 60 W H4
Front daylight running light	12V - 5W
Turn indicator light	12 V - 10 W (orange RY 10 W bulb)
tail light /stop lights	12 V - 5 / 21 W
Dashboard lighting	LED

WARNING LIGHTS

Specification	Desc./Quantity
Gear in neutral	LED
Turn indicators	LED
Fuel reserve	LED
High beam light	LED
Engine oil pressure	LED
Injection check warning light	LED

Frame and suspensions**CHASSIS**


Specification	Desc./Quantity
Type	Modular double cradle, high strength steel tubular chassis
Steering rake	27.5°
Trail	138 mm (5.43 in)

SUSPENSIONS

Specification	Desc./Quantity
Front	hydraulic telescopic fork, Ø 40 mm (1.57 in)
Travel	130 mm (5.12 in)
Rear	die-cast light alloy swingarm with 2 adjustable shock absorbers
Wheel travel	100 mm (3.93 in)

SIZES A AND B

Specification	Desc./Quantity
Size A	692 mm (27.24 in)
Size B	186 mm (7.32 in)

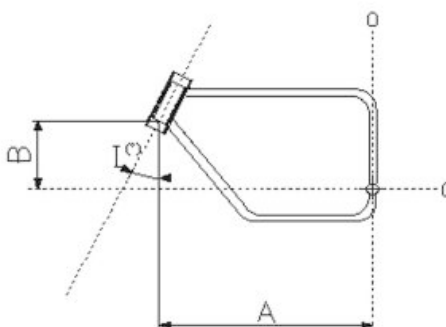**Brakes****BRAKES**

Specification	Desc./Quantity
Front	stainless steel floating disc, Ø 320 mm (12.59 in), callipers with 4 different and counteracting plungers

Specification	Desc./Quantity
Rear	260 mm (10.24 in) diam. stainless steel disc

Wheels and tyres

WHEEL RIMS

Specification	Desc./Quantity
Type	with spokes, for tyres with inner tubes
Front	2.5"x18"
Rear	3.50 x 17"

TYRES

Specification	Desc./Quantity
Front tyre (standard)	PIRELLI SPORT DEMON
Front tyre (alternative)	METZELER LASERTEC
Front (size)	100 / 90 - 18 56H TL
Front (inflation pressure)	2.2 bar (220 kPa) (31.90 PSI)
Front (inflation pressure with passenger)	2.5 bar (250 kPa) (36.3 PSI)
Rear tyre (standard)	PIRELLI SPORT DEMON
Rear tyre (alternative)	METZELER LASERTEC
Rear (size)	130 / 80 - 17 65H TL
Rear (inflation pressure)	2.2 bar (220 kPa) (31.90 PSI)
Rear (inflation pressure with passenger)	2.5 bar (250 kPa) (36.3 PSI)

Supply



FUEL SYSTEM

Specification	Desc./Quantity
Type	electronic injection (Weber - Marelli)
Diffuser	Ø 36 mm (1.42 in)
Fuel	Premium unleaded petrol, minimum octane rating of 95 (NORM) and 85 (NOMM)

Tightening Torques

Chassis


Front side

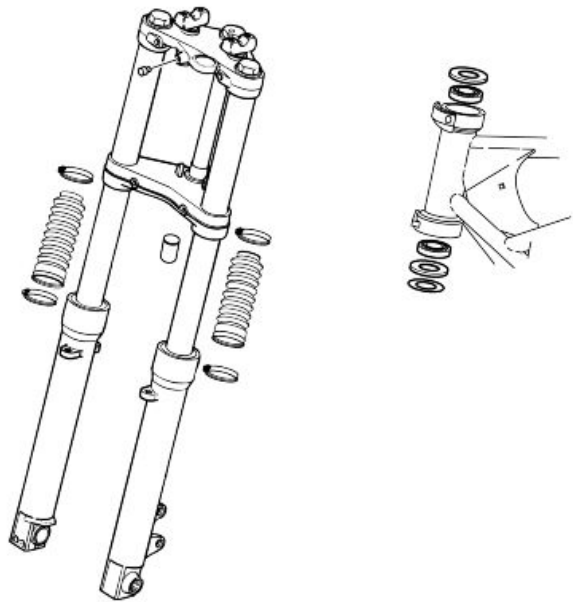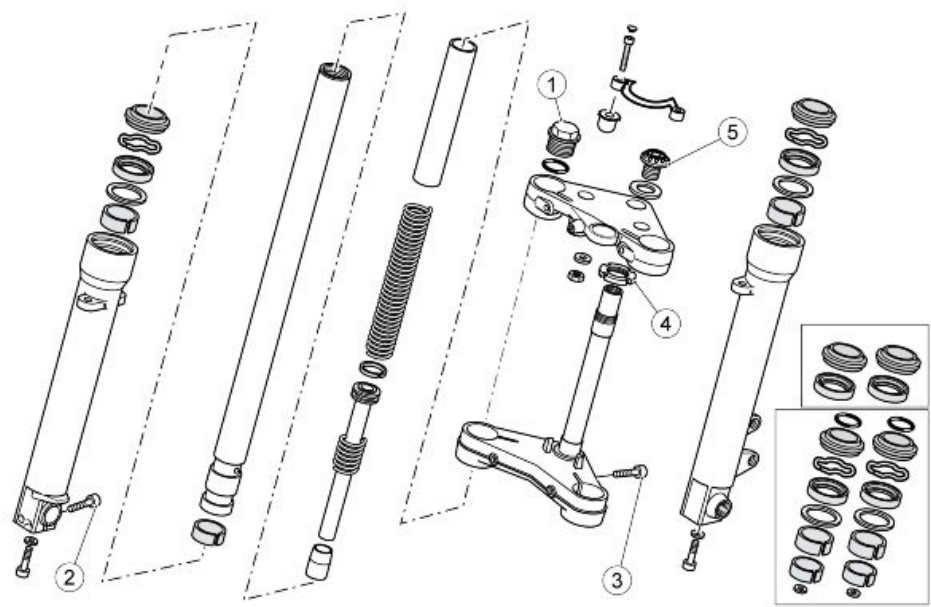

FRONT SUSPENSION - STEERING


pos.	Description	Type	Quantity	Torque	Notes
1	Stanchion cap	-	2	50 Nm (36.88 lbf ft)	-
2	Screw fixing wheel axle to right fork leg	M6x30	2	10 Nm (7.37 lbf ft)	Tighten using a 1-2-1 sequence
3	Screw fixing stanchions to upper and lower plate	M10x40	4	50 Nm (36.88 lbf ft)	-
4	Headstock ring nut	M25x1	1	7 Nm (5.16 lbf ft)	The fork must fall to one side by itself

pos.	Description	Type	Quantity	Torque	Notes
5	Headstock bushing	M23x1	1	50 Nm (36.88 lbf ft)	-

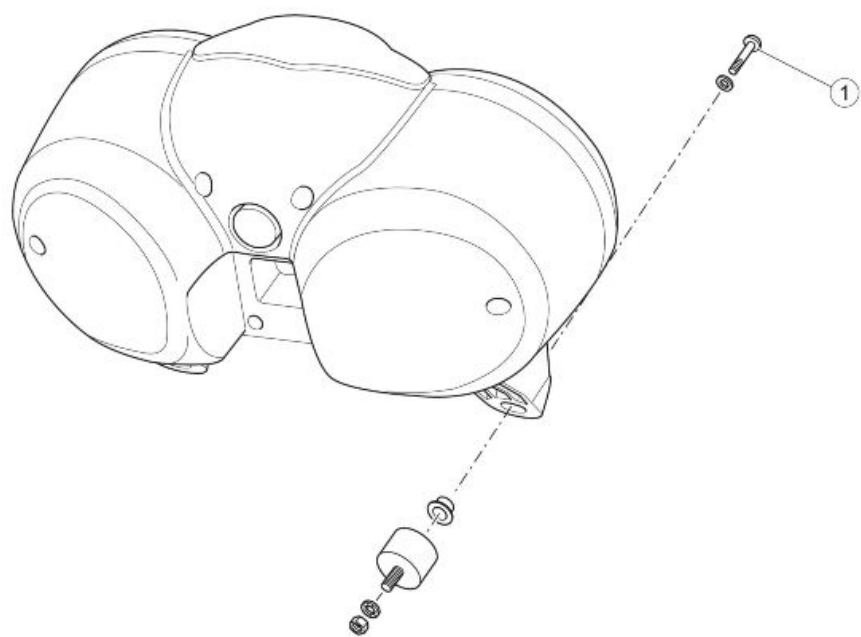


INSTRUMENT PANEL

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing instrument panel to headlamp support	M6x10	3	10 Nm (7.37 lbf ft)	-

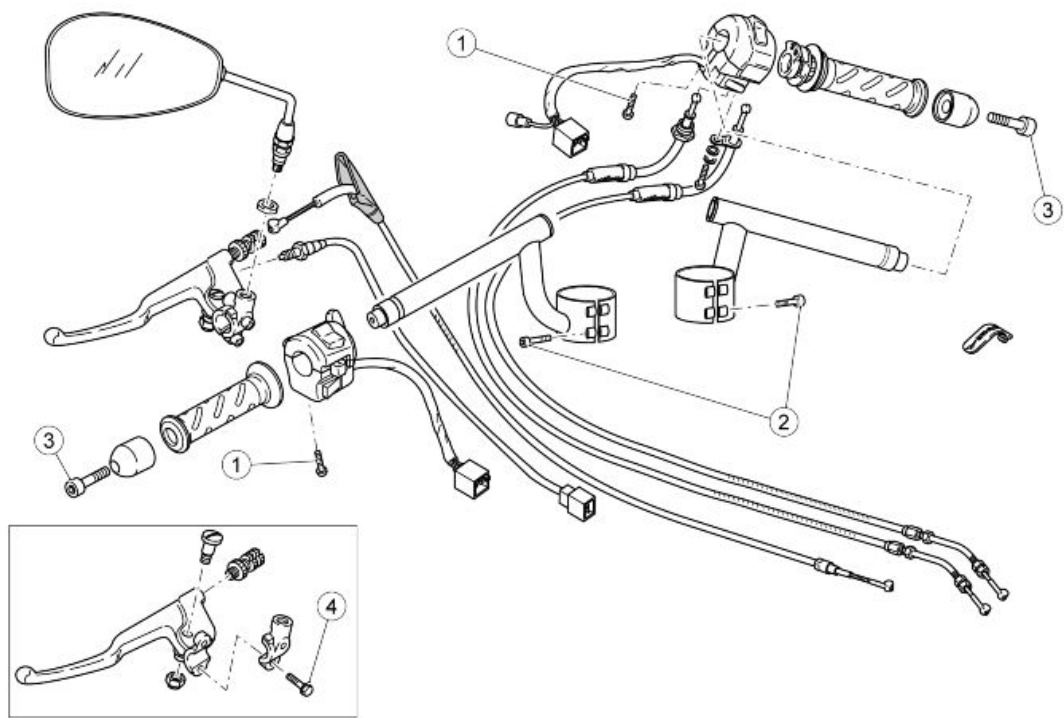


HANDLEBAR AND CONTROLS

Pos.	Description	Type	Quantity	Torque	Notes
1	Switch fastener screw	M5	1+1	1.5 Nm (1.11 lb ft)	Tighten using a 1-2-1 sequence
2	Semi-handlebar fixing screw	M6x25	4	10 Nm (7.37 lb ft)	Tighten using a 1-2-1 sequence
3	Counterweight fixing screw	M6	2	10 Nm (7.37 lb ft)	Loctite 243
4	Screw fastening the clutch control U-bolt to the semi-handlebar	M6x25	2	10 Nm (7.37 lb ft)	Tighten using a 1-2-1 sequence

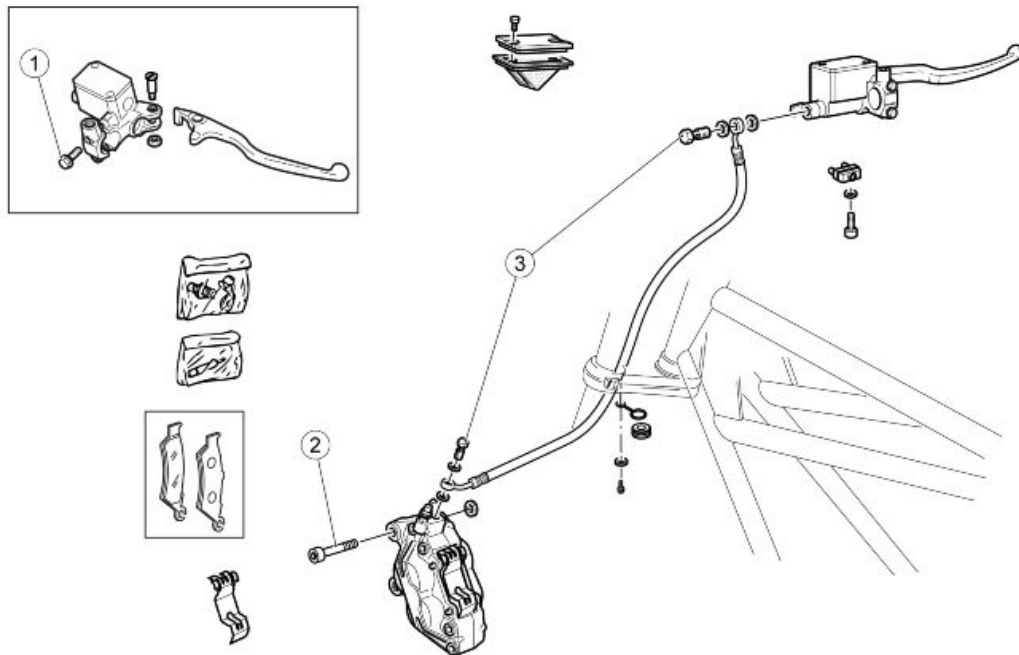
**FRONT BRAKE SYSTEM**

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening the brake pump U-bolt to the semi-handlebar	M6	2	10 Nm (7.37 lbf ft)	Tighten using a 1-2-1 sequence
2	Front brake calliper fixing screw	M10x30	2	50 Nm (36.88 lb ft)	-
3	Drilled screw for brake fluid pipe on pump and calliper	-	2	25 Nm (18.44 lb ft)	-

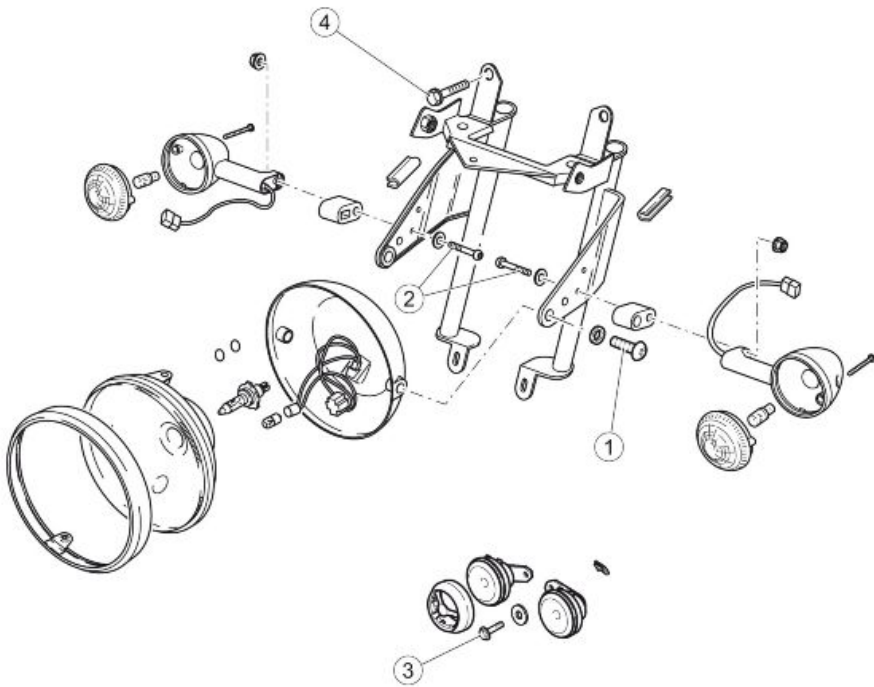


FRONT LIGHTS

pos.	Description	Type	Quantity	Torque	Notes
1	Headlamp fixing screw	M8x30	2	15 Nm (11.06 lb ft)	-
2	Front turn indicator fixing screw	M6	2	5 Nm (3.69 lb ft)	-
3	Horn fixing screw	M6x16	2	10 Nm (7.37 lb ft)	-
4	Headlamp support bracket fixing screw	M10x40	2	50 Nm (36.88 lb ft)	-

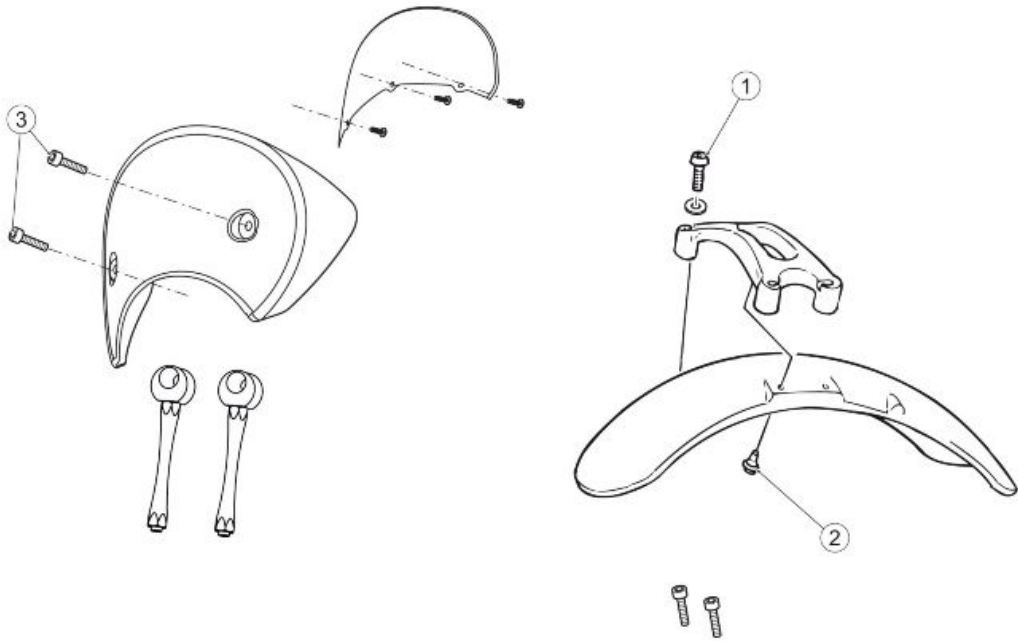


BODYWORK - FRONT SECTION

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening stabiliser plate to fork	M8x40	4	15 Nm (11.06 lbf ft)	Loctite 243
2	Screw fastening mudguard to stabiliser plate	M6x11	4	10 Nm (7.37 lbf ft)	Loctite 243
3	Top fairing fixing screw	M6	2	10 Nm (7.37 lbf ft)	

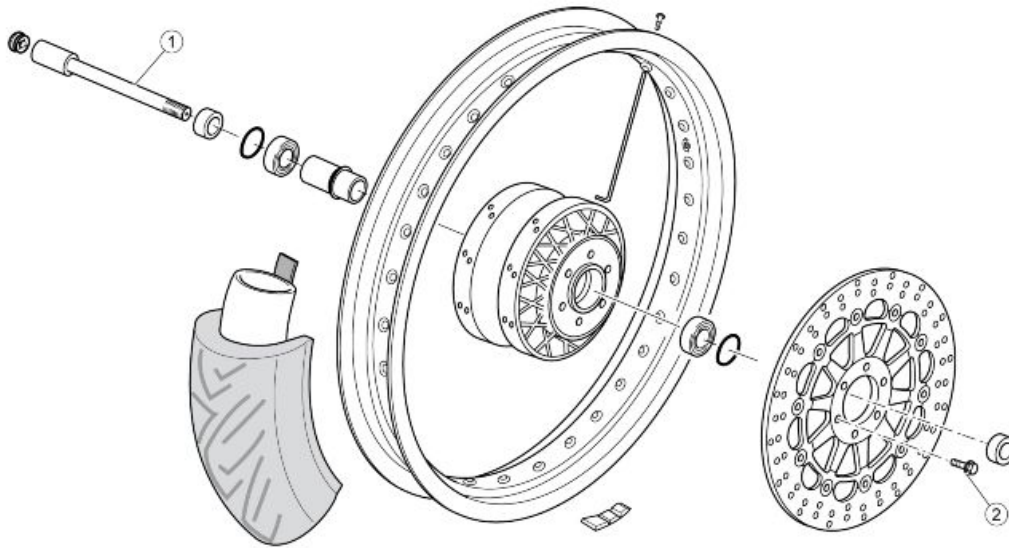**FRONT WHEEL**


pos.	Description	Type	Quantity	Torque	Notes
1	Front wheel axle	M18x1.5	1	80 Nm (59.00 lbf ft)	-
2	Front brake disc fixing screw	M8x20	6	25 Nm (18.44 lbf ft)	Loctite 243

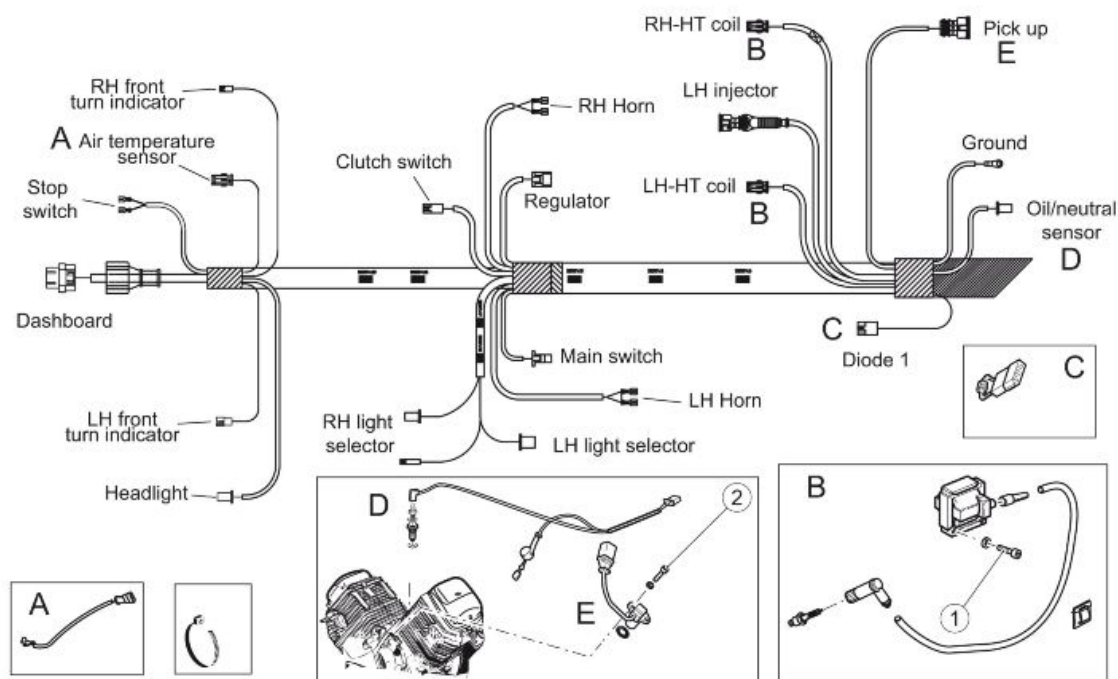

ELECTRICAL SYSTEM (FRONT)


pos.	Description	Type	Quantity	Torque	Notes
1	HV coil fastener screw	M4x25	4	3 Nm (2.21 lbf ft)	-
2	Timing sensor fastener screw	M5x12	2	6 Nm (4.42 lbf ft)	-

Central part

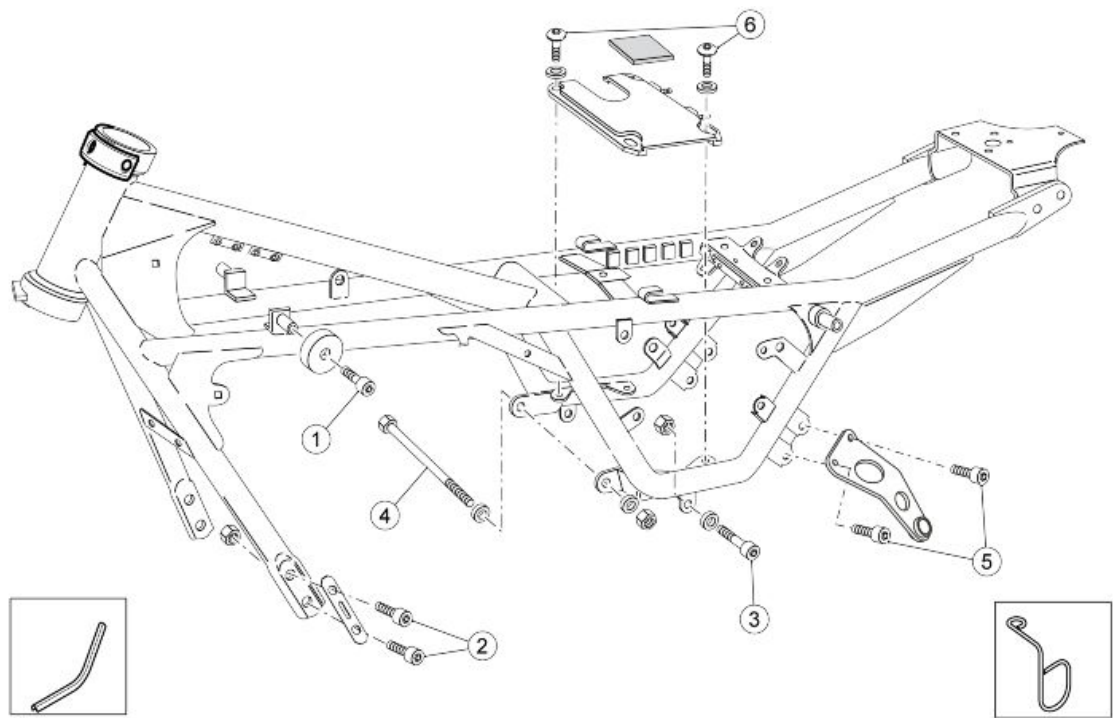


FRAME

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing tank mounting rubber blocks to frame	M8x14	2	25 Nm (18.44 lbf ft)	-
2	Cradle front fixing screw	M10x30	4	50 Nm (36.88 lbf ft)	-
3	Screw fastening gearbox to frame	M10x55	2	50 Nm (36.88 lbf ft)	-
4	Pin fixing engine/gearbox to chassis	M10x205	1	50 Nm (36.88 lbf ft)	-
5	Screw fixing exhaust silencer mounting to frame	M8x16	4	25 Nm (18.44 lbf ft)	Loctite 243
6	Battery supporting plate fixing screw	M8x16	4	25 Nm (18.44 lbf ft)	-

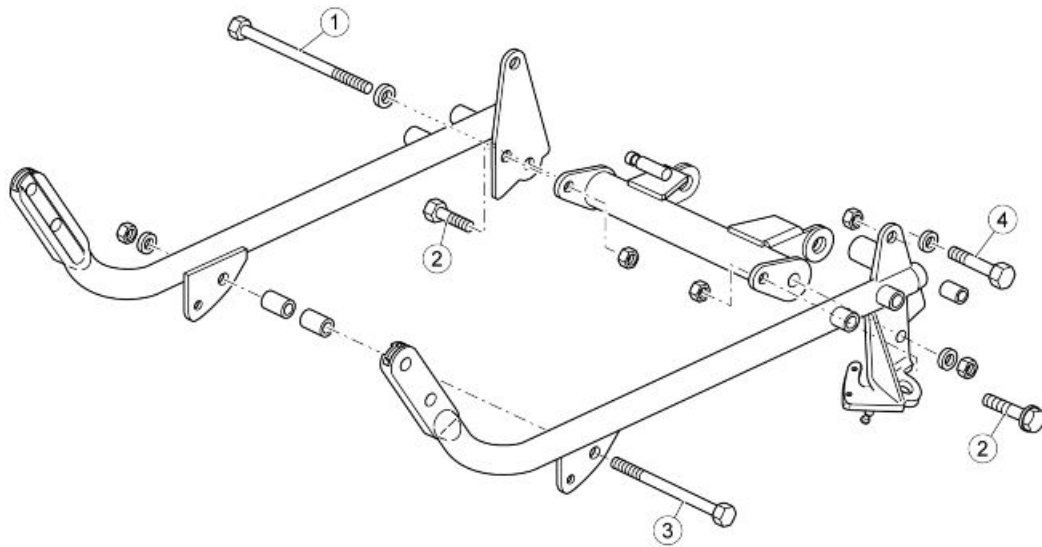
**FRAME CRADLES**

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing stand beam to cradle	M10x260	1	50 Nm (36.88 lbf ft)	-
2	Screw fixing stand beam to cradle	M8	1+1	25 Nm (18.44 lbf ft)	-
3	Pin fixing engine/gearbox to chassis	M10x250	1	50 Nm (36.88 lbf ft)	-
4	Screw fastening cradle to frame	M10x65	2	50 Nm (36.88 lbf ft)	-

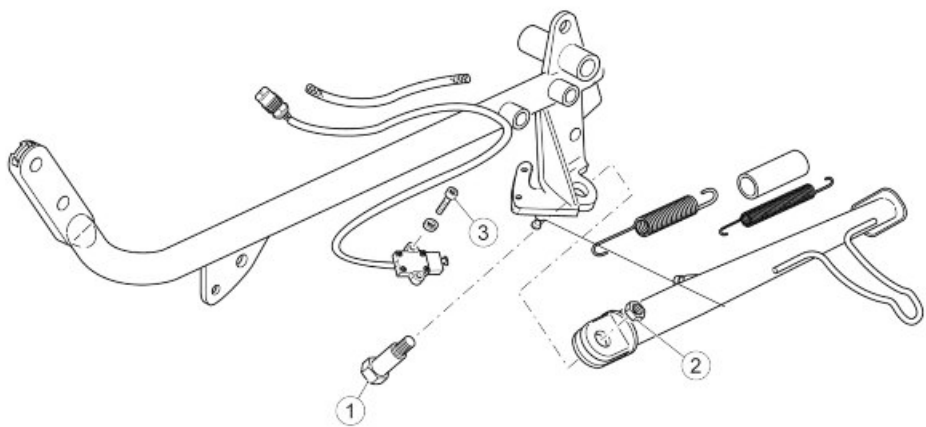


SIDE STAND

pos.	Description	Type	Quantity	Torque	Notes
1	Side stand retainer pin	M10x1.2 5	1	10 Nm (7.38 lb ft)	-
2	Lock nut for stand bolt	M10x1.2 5	1	30 Nm (22.13 lb ft)	-
3	Switch fixing screw	M5x16	2	6 Nm (4.42 lb ft)	-

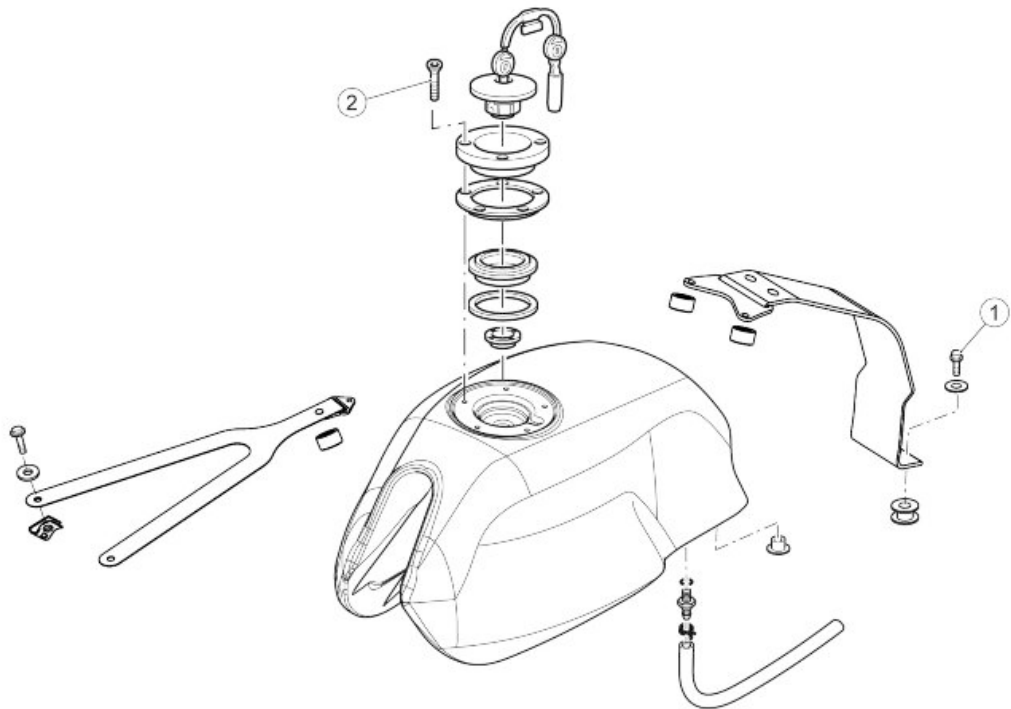


FUEL TANK

pos.	Description	Type	Quantity	Torque	Notes
1	Rear tank fixing screw	M8x45	1	25 Nm (18.44 lb ft)	-
2	Screw fastening cap flange to tank	M5x12	2+3	4 Nm (2.95 lb ft)	-

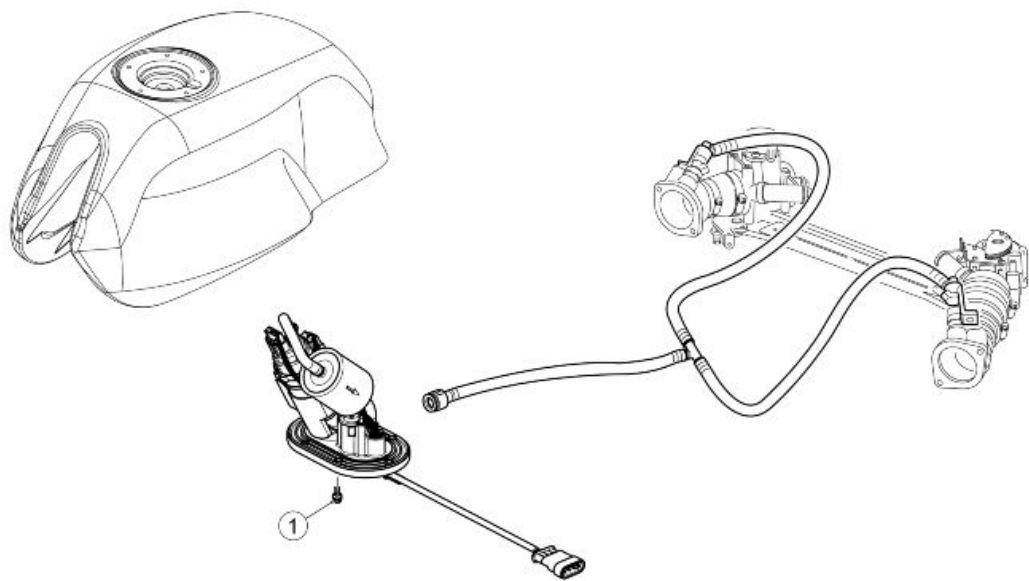

FUEL SUPPLY SYSTEM


pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing fuel pump mounting to tank	M5x16	6	6 Nm (4.43 lbf ft)	-

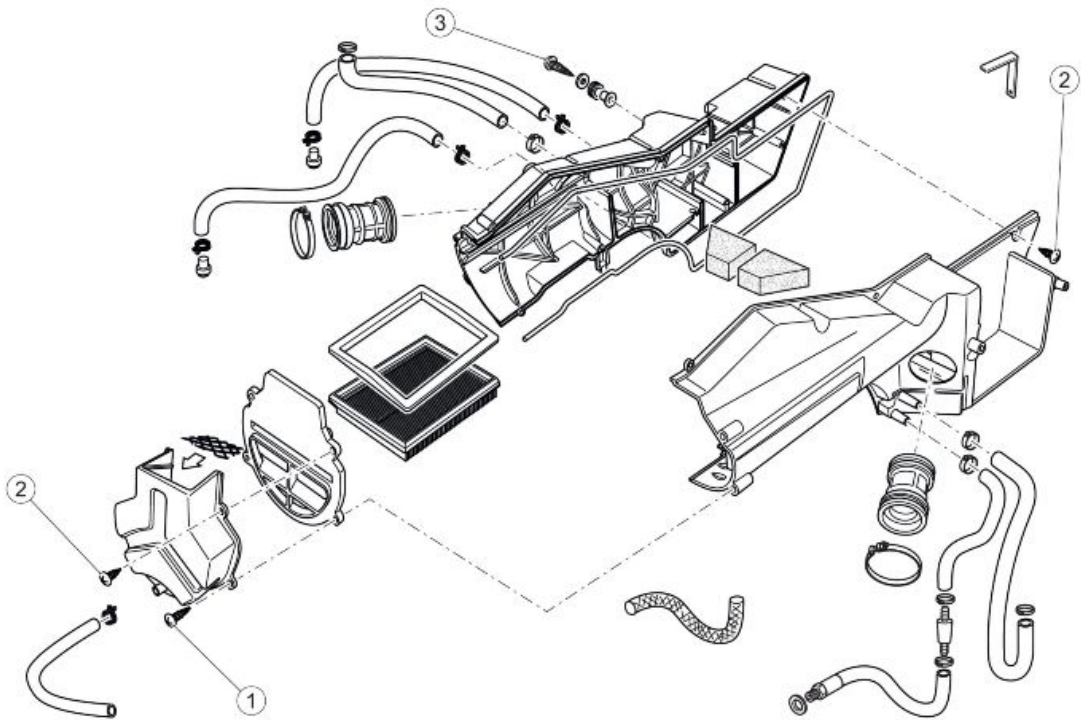

AIR FILTER


pos.	Description	Type	Quantity	Torque	Notes
1	Air filter box cover fastening screw	SWP M5x20	3	3 Nm (2.21 lbf ft)	-

pos.	Description	Type	Quantity	Torque	Notes
2	Air filter box half-shells and cover fastening screw	Self-tapp. 3.9x14	12	3 Nm (2.21 lbf ft)	-
3	Screw fastening air filter box to frame	SWP M5x20	3	3 Nm (2.21 lbf ft)	-

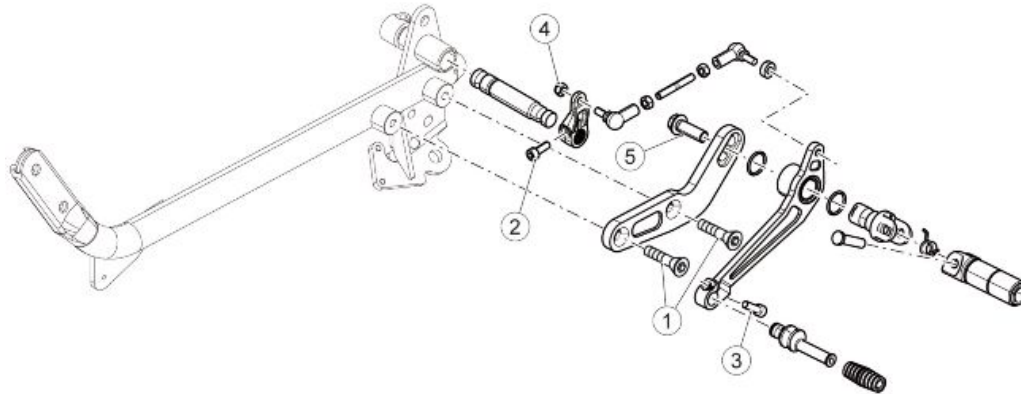


GEAR SHIFT

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening left hand rider footrest mounting plate to cradle	M8x20	2	25 Nm (18.44 lb ft)	Loctite 243
2	Preselector lever fixing screw	M6x20	1	10 Nm (7.37 lb ft)	-
3	Gearbox lever fixing screws	M6x20	1	10 Nm (7.37 lb ft)	Loctite 243
4	Gearbox control rod fixing nut	M6x1	1	10 Nm (7.37 lb ft)	-
5	Screw fastening rider footrest mounting to plate	M8	1	20 Nm (14.75 lb ft)	Loctite 243

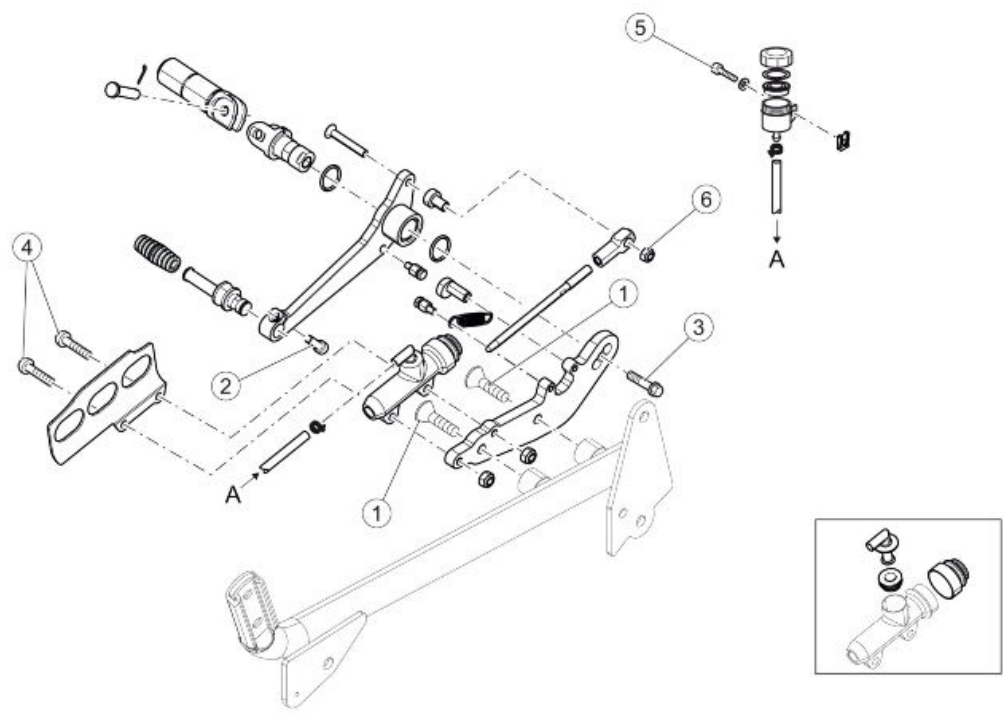


REAR BRAKE LEVER

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening right hand rider foot-rest mounting plate to cradle	M8x20	2	20 Nm (14.75 lb ft)	Loctite 243
2	Rear brake lever fixing screw	M6x20	1	10 Nm (7.37 lb ft)	Loctite 243
3	Screw fastening rider footrest mounting to plate	M8	1	25 Nm (18.44 lb ft)	Loctite 243
4	Rear brake pump fixing screw	M6x25	2	8 Nm (5.90 lb ft)	Loctite 243
5	Rear brake fluid reservoir fixing screw	M5x15	1	6 Nm (4.43 lb ft)	-
6	Nut fastening rod terminal on brake lever	M6	1	10 Nm (7.37 lb ft)	-

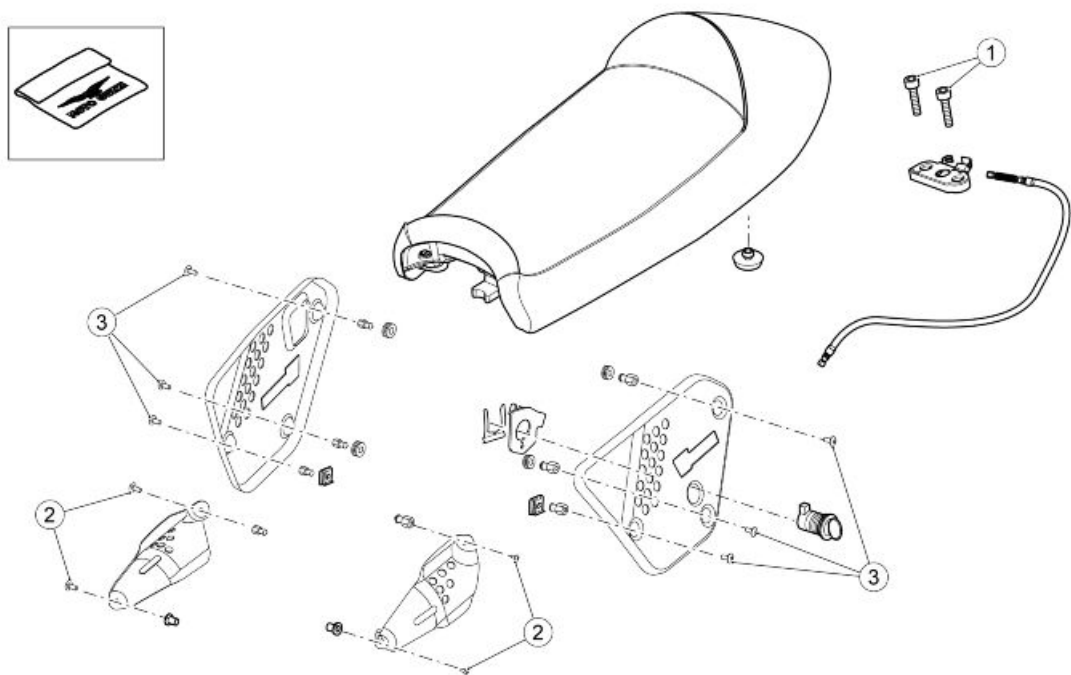


BODYWORK CENTRAL SECTION - SADDLE

pos.	Description	Type	Quantity	Torque	Notes
1	Saddle release block fixing screw	M6x25	2	10 Nm (2.37 lb ft)	-
2	Throttle body cover fastener screw	M5x14	4	4 Nm (2.95 lb ft)	-
3	Side fairing fixing screw	M5x9	6	4 Nm (2.95 lb ft)	-

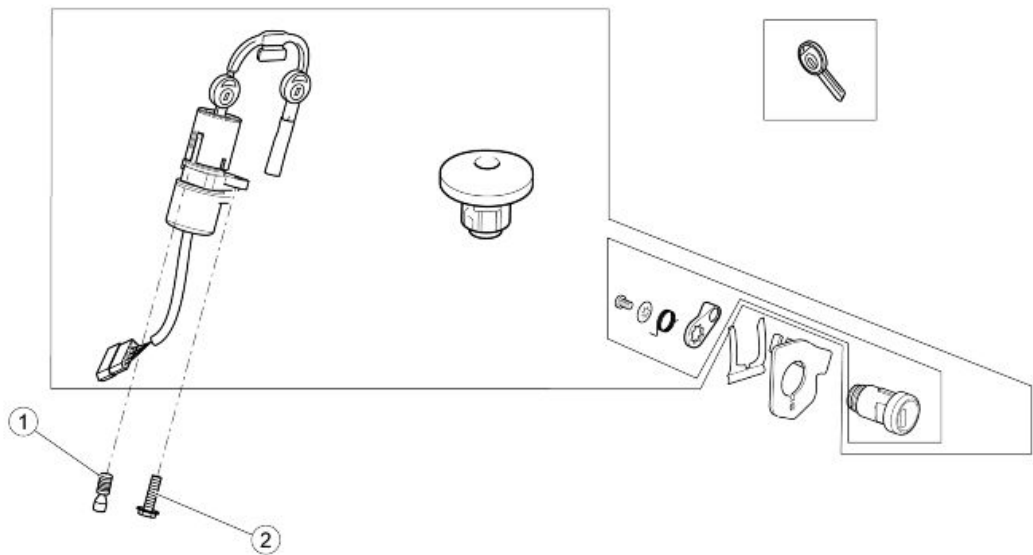


LOCK KIT

pos.	Description	Type	Quantity	Torque	Notes
1	(Shear head) screw fixing ignition lock	M8x15	1	-	At the point of failure
2	Ignition lock fixing screw	M8x16	1	25 Nm (18.44 lb ft)	-

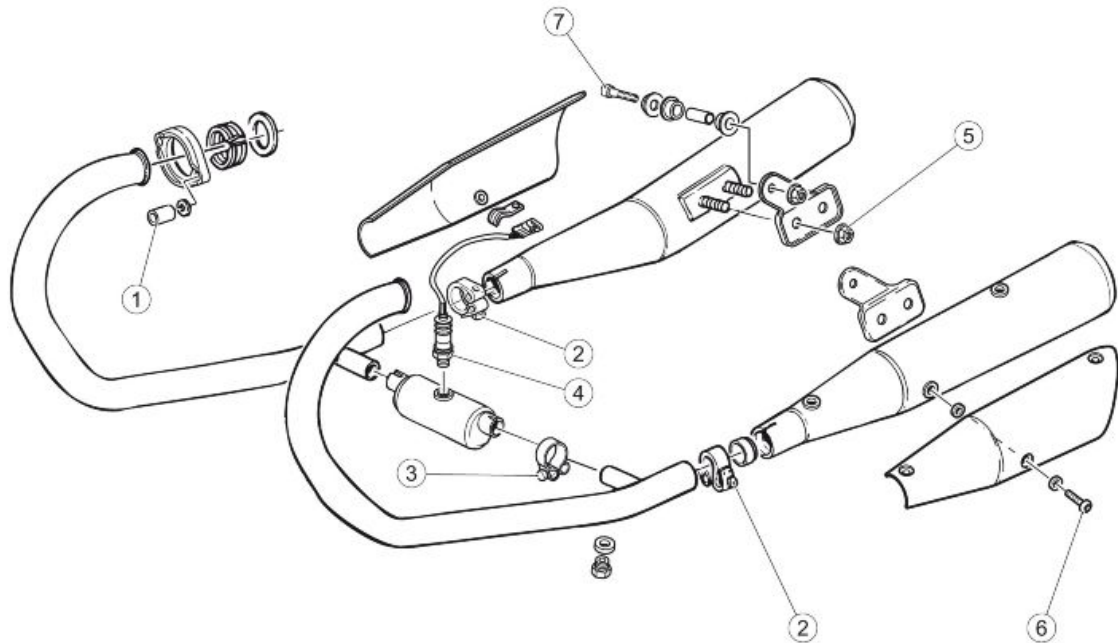**EXHAUST SYSTEM**


Pos.	Description	Type	Quantity	Torque	Notes
1	Exhaust pipe fixing nut to the engine	M6	4	10 Nm (7.37 lb ft)	-
2	Exhaust pipe fixing clamp screw to the compensator	M6	1+1	10 Nm (7.37 lb ft)	-
3	Compensator fixing clamp screw to the silencer	M6	2	10 Nm (7.37 lb ft)	-
4	Lambda probe on compensator	M18x1.5	1	38 Nm (28.03 lb ft)	-
5	Nut fastening silencer to mounting plate	M8	4	25 Nm (18.44 lb ft)	-
6	Heat shield fixing screw	M6x12	6	10 Nm (7.37 lb ft)	Loctite 270
7	Screw fixing silencer mounting plate to frame	M8x40	2	25 Nm (18.44 lb ft)	-

Back side

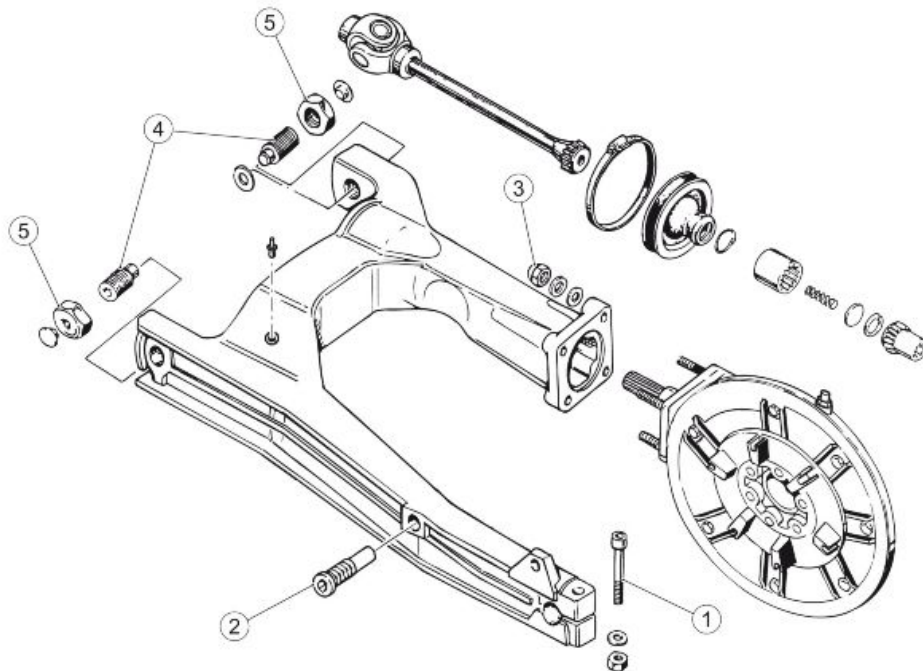


REAR TRANSMISSION - SWINGARM

pos.	Description	Type	Quantity	Torque	Notes
1	Swingarm clamp retaining screw	M10x45	1	30 Nm (22.13 lbf ft)	-
2	Pin fixing the rear calliper holding plate to swingarm	M16x1	1	25 Nm (18.44 lbf ft)	-
3	Nut fixing gearcase to swingarm	M8	4	25 Nm (18.44 lbf ft)	Hold the stud bolt
4	Pin fixing swingarm to gearbox	M20x1	2	-	Fully home with no preload
5	Lock nut on swingarm pin	M20x1	2	50 Nm (36.88 lbf ft)	Hold the pin

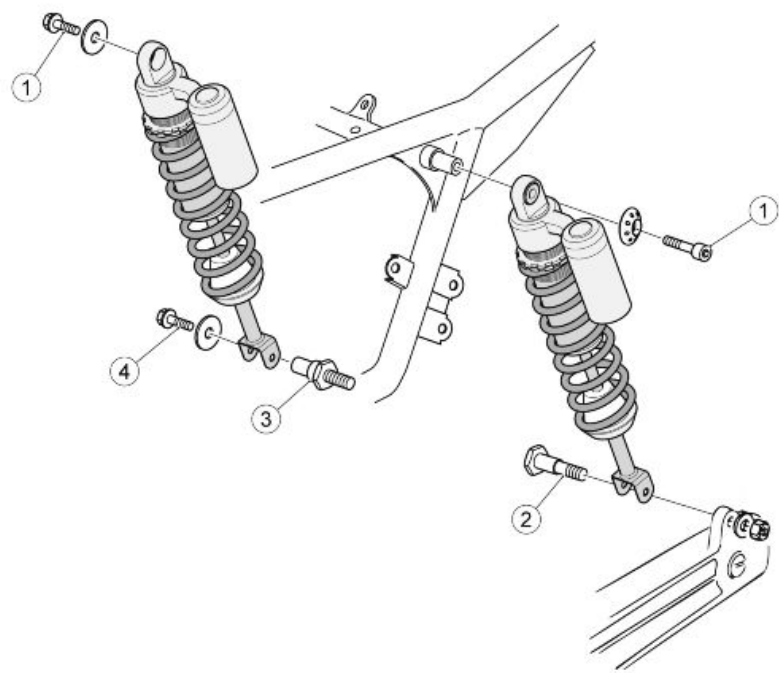


REAR SUSPENSION

pos.	Description	Type	Quantity	Torque	Notes
1	Upper screw fastening shock absorber to frame	M6x35	2	10 Nm (7.37 lbf ft)	Loctite 243
2	Lower pin fastening left shock absorber to swingarm	M10x1.5	1	35 Nm (25.81 lbf ft)	
3	Stud bolt fixing right shock absorber to rear box	M12x1.5	1	35 Nm (25.81 lbf ft)	-
4	Screw fastening right shock absorber to stud bolt	M6x16	1	10 Nm (7.37 lbf ft)	Loctite 243

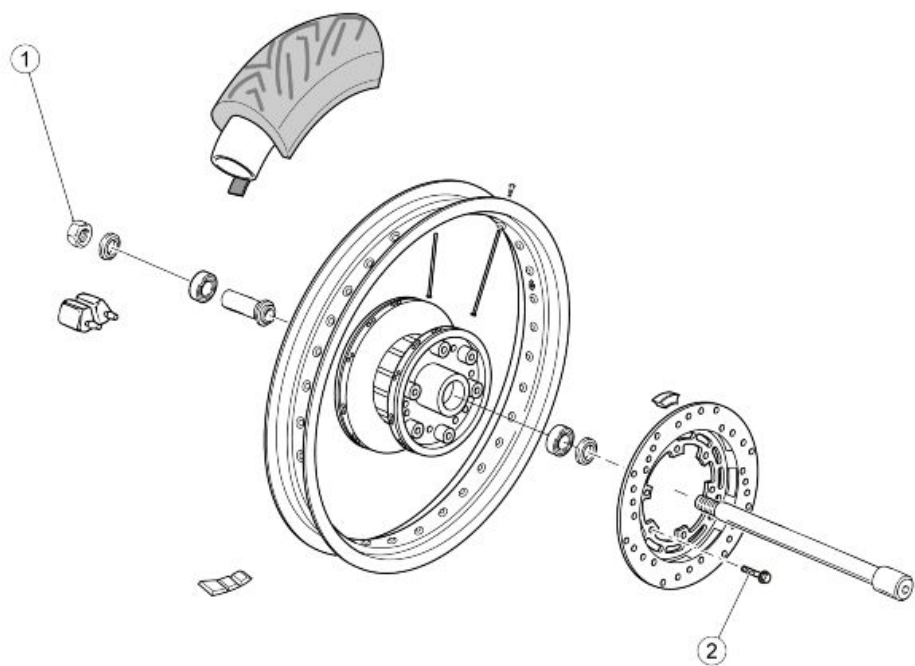

REAR WHEEL


pos.	Description	Type	Quantity	Torque	Notes
1	Rear wheel axle nut	M16x1.5	1	120 Nm (88.51 lb ft)	-
2	Rear brake disc fixing screw	M8x25	6	25 Nm (18.44 lb ft)	Loctite 243

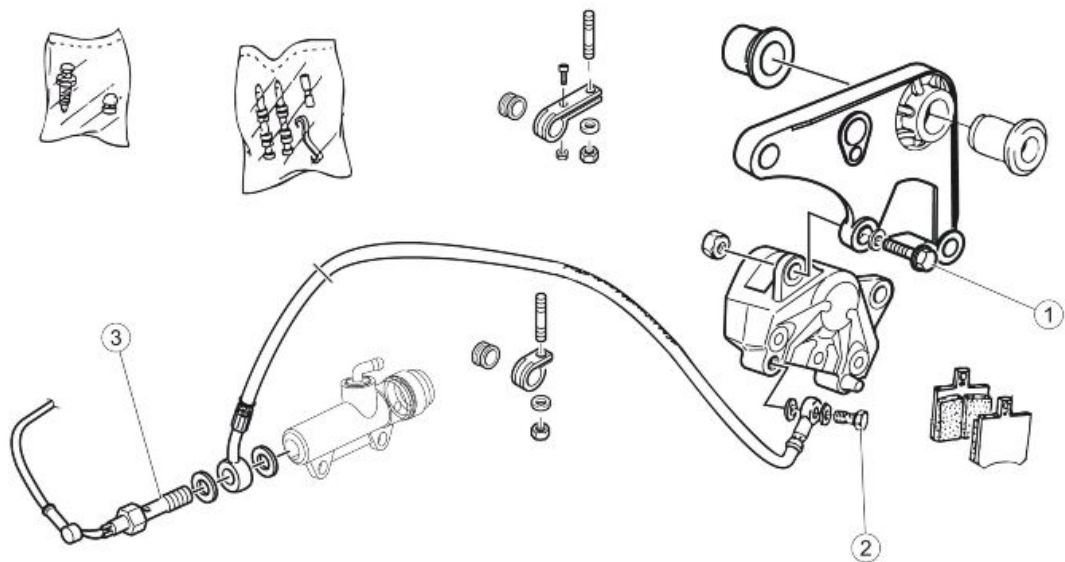

REAR BRAKE SYSTEM


pos.	Description	Type	Quantity	Torque	Notes
1	Rear brake calliper fixing screw	M8x35	2	25 Nm (18.44 lbf ft)	-

pos.	Description	Type	Quantity	Torque	Notes
2	Drilled screw for brake pipe on caliper	-	1	25 Nm (18.44 lb ft)	-
3	Stud bolt fixing right shock absorber to rear box	-	1	25 Nm (18.44 lbf ft)	-

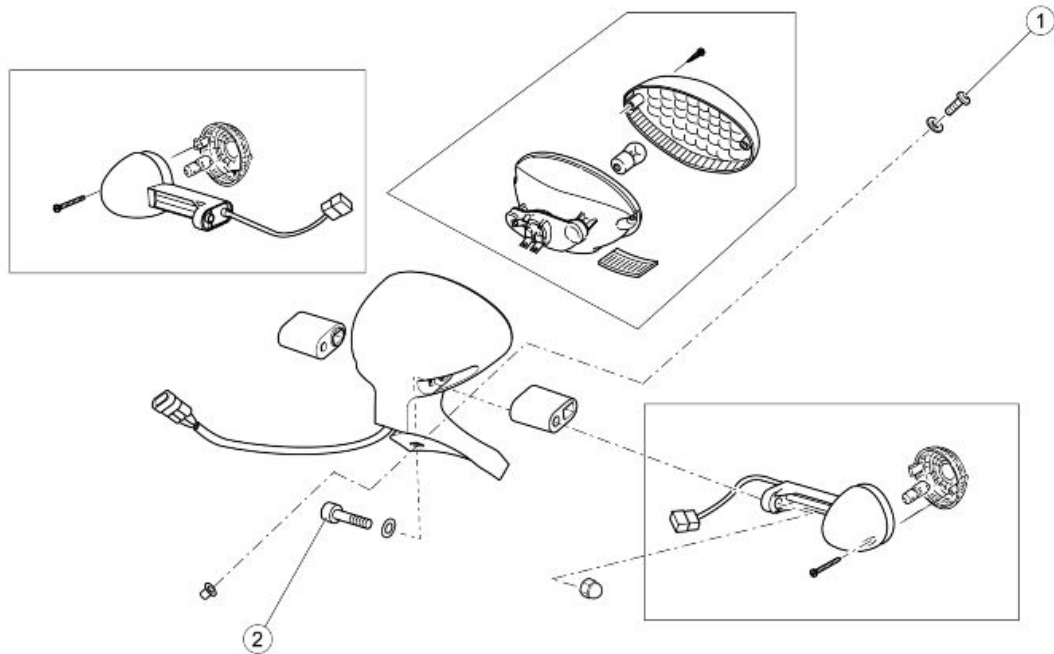


REAR LIGHTS

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening taillight support to mudguard	M5x14	3	4 Nm (2.95 lbf ft)	-
2	Rear turn indicator fixing screw	M6	2	5 Nm (3.69 lbf ft)	-

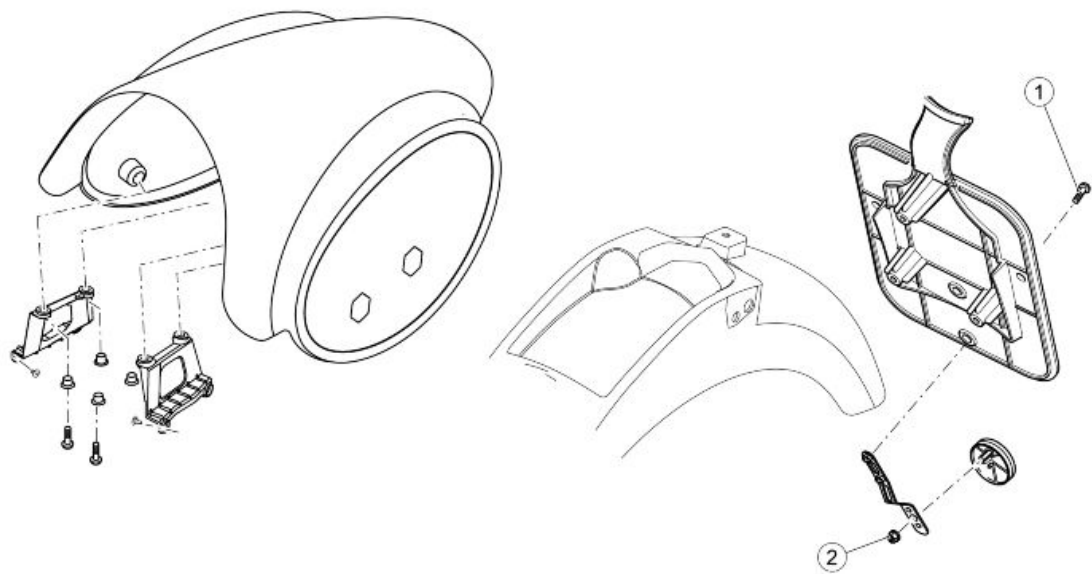


REAR SECTION BODYWORK - LICENSE PLATE MOUNTING

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening retroreflector mounting to license plate mounting	M5x10	2	4 Nm (2.95 lbf ft)	-
2	Nut fixing retroreflector to mounting	M5	1	4 Nm (2.95 lbf ft)	-

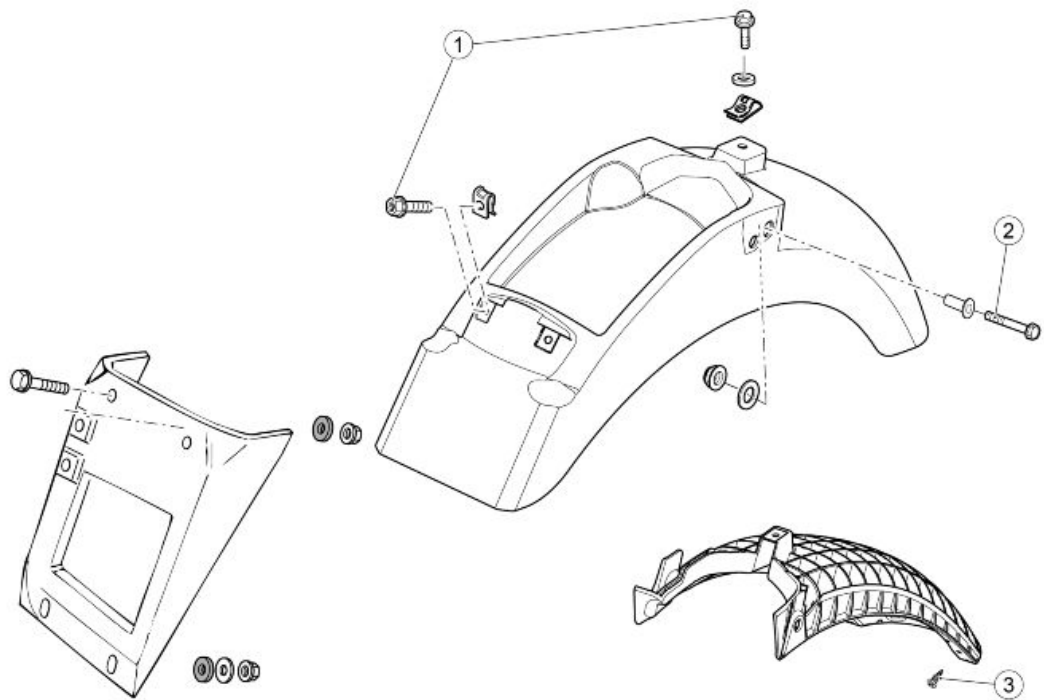


REAR MUDGUARD

pos.	Description	Type	Quantity	Torque	Notes
1	Rear mudguard front and central fixing screw	M6	2+1	10 Nm (7.37 lb ft)	
2	Rear mudguard side fixing screw	M8x30	2	25 Nm (18.44 lb ft)	
3	Screw fixing license plate holder to mudguard reinforcement	SWP M5x20	3	3 Nm (2.21 lb ft)	

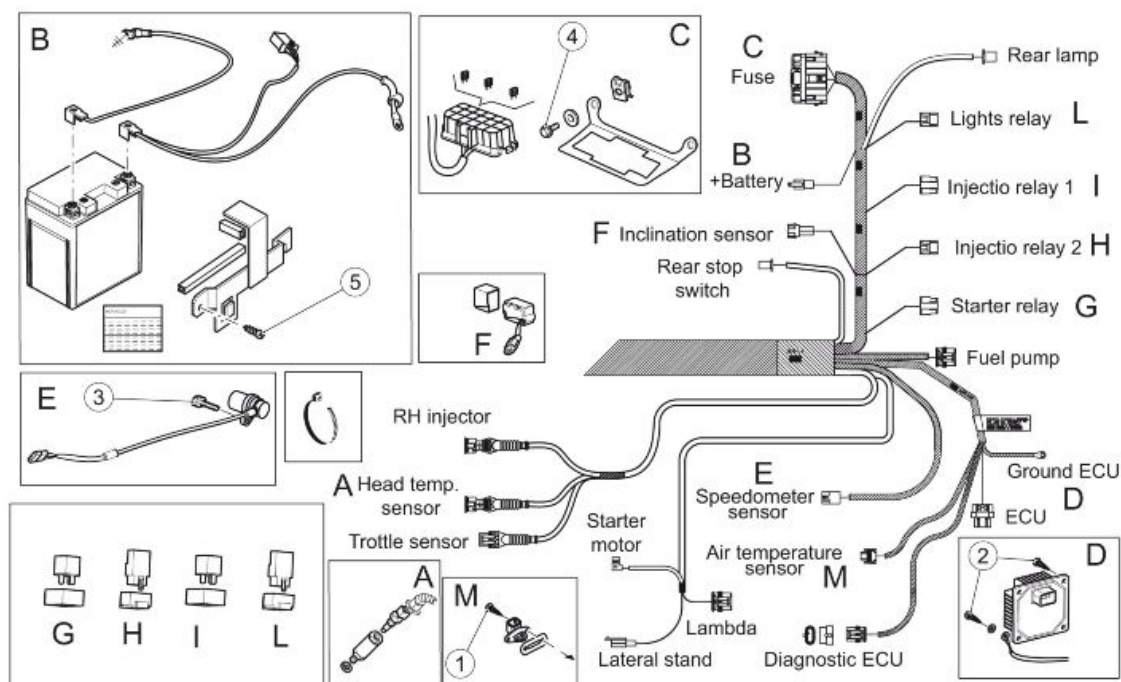**ELECTRICAL SYSTEM (REAR)**

pos.	Description	Type	Quantity	Torque	Notes
1	Air temperature sensor fastener screw	Self-tapp. 2.9x12	2	2 Nm (1.47 lbf ft)	-
2	Electronic control unit fixing screw	SWP M5x20	4	3 Nm (2.21 lbf ft)	-
3	Speedometer sensor fastener screw	M6x12	1	10 Nm (7.37 lbf ft)	-
4	Fuse box bracket fixing screw	M5x12	2	4 Nm (2.95 lbf ft)	-
5	Battery mount bracket fixing screw	SWP M5x20	3	3 Nm (2.21 lbf ft)	-

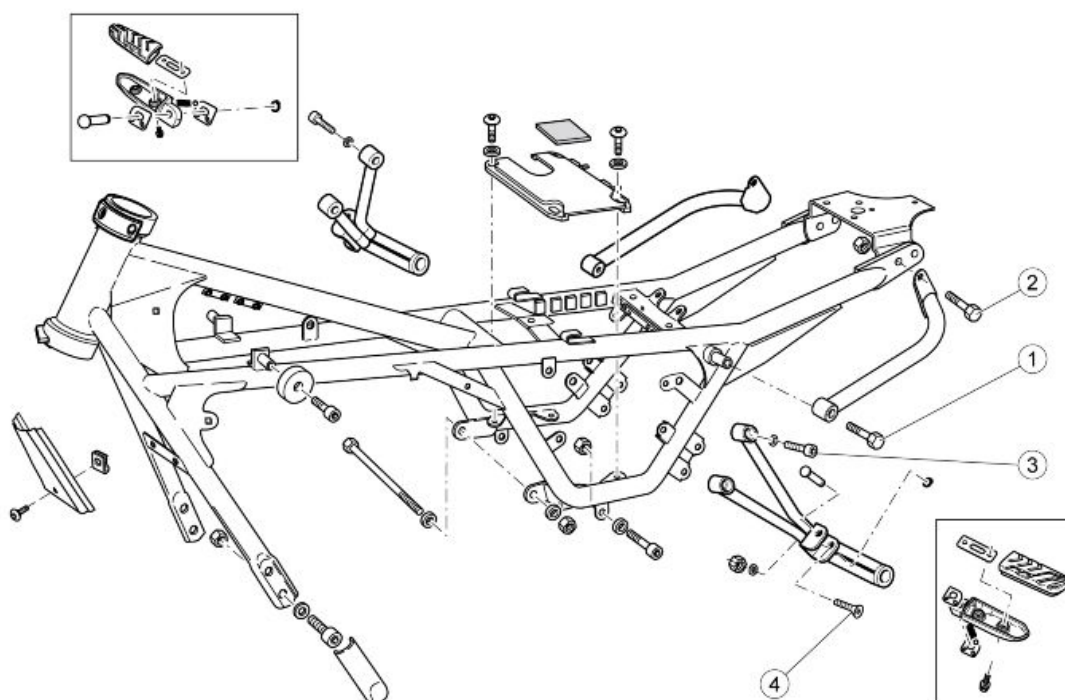**TWO SEATER VERSION**

pos.	Description	Type	Quantity	Torque	Notes
1	Passenger handgrip front fixing screw	M6	2	10 Nm (7.37 lbf ft)	-
2	Passenger handgrip rear fixing nut	M8	2	25 Nm (18.44 lbf ft)	-
3	Passenger footrest mounting bracket fixing screw	M8x16	4	25 Nm (18.44 lbf ft)	Loctite 243
4	Countersunk-head Allen screw	M8	2	25 Nm (18.44 lbf ft)	-

Recommended products chart**PRODOTTI CONSIGLIATI**

Product	Description	Specifications
ENI i-RIDE PG RACING 10W-60	Engine oil	SAE 10W - 60. As an alternative for recommended oils, top-branded oils that meet or exceed the requirements of CCMC G-4 A.P.I. SG specifications can be used.
AGIP GEAR MG SAE 85W-140	Transmission oil	-
AGIP GEAR MG/S SAE 85 W-90	Gearbox oil	-
AGIP FORK 7.5W	Fork oil	SAE 5W / SAE 20W
AGIP GREASE SM 2	Gray black smooth-textured lithium grease, containing molybdenum disulfide.	-
Neutral grease or petroleum jelly.	BATTERY POLES	
AGIP BRAKE 4	Brake fluid.	Synthetic fluid SAE J 1703 -FMVSS 116 - DOT 3/4 - ISO 4925 - CUNA NC 956 DOT 4
AGIP BRAKE 5.1	Clutch fluid	FMVSS 116 - DOT 5.1 Non-silicone synthetic fluid

NOTE



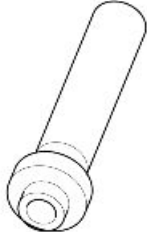
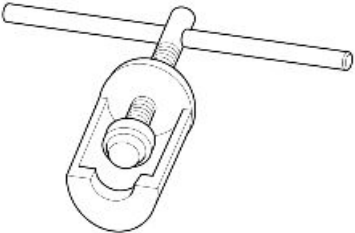


USE ONLY NEW BRAKE FLUID. DO NOT MIX DIFFERENT BRANDS OR TYPES OF OIL WITHOUT CHECKING THEIR BASE COMPATIBILITY.




INDEX OF TOPICS

SPECIAL TOOLS

S-TOOLS

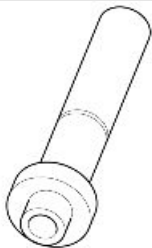SPECIAL TOOLS

Stores code	Description	
19.92.61.00	Punch for seal ring of bevel gear set pinion	
19.92.88.00	Bevel gear set alignment pre-fitting tool	
19.92.60.00	Punch for gearcase sealing ring	
19.90.70.00	Extractor for internal ring on drilled bolt	
19.92.75.00	Extractor for external ring of gearcase bearing	
19.92.62.00	Punch for bearing on bevel gear set pinion	

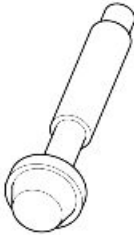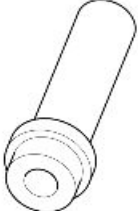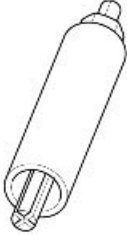Stores code	Description	
19.92.64.00	Punch for external ring of tapered bearing on bevel gear set pinion holding body	
19.92.65.00	Punch for external ring of gearcase bearing	
19.92.76.00	Extractor for swinging arm holder bearing on gearbox cover	

INDEX OF TOPICS

MAINTENANCE

MAIN

Maintenance chart

NOTE

CARRY OUT MAINTENANCE OPERATIONS AT HALF THE INTERVALS SPECIFIED IF THE VEHICLE IS USED IN PARTICULAR RAINY OR DUSTY CONDITIONS, OFF ROAD OR FOR TRACK USE.

NOTE

THE TIMES LISTED ON THE SCHEDULED MAINTENANCE TABLE INCLUDE TIME DEDICATED TO MANAGEMENT ACTIVITIES.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

V: CHECK AND CLEAN, ADJUST AND REPLACE IF NECESSARY

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

(1) Check and clean, adjust or replace, if necessary, every 1,000 Km (621 mi)

(2) Replace every 2 years or 20000 Km (12427 mi).

(3) Replace every 4 years.

(4) At each engine start.

(5) Check every month.

ROUTINE MAINTENANCE TABLE

km x 1,000	1	7.5	15	22.5	30	37.5	45	52.5	60
Spark plugs		R	R	R	R	R	R	R	R
Carburetion at idle (CO)		I	I	I	I	I	I	I	I
Transmission cables and controls	I	I	I	I	I	I	I	I	I
Steering bearings and steering clearance	I	I	I	I	I	I	I	I	I
Wheel bearings		I	I	I	I	I	I	I	I
Brake discs	I	I	I	I	I	I	I	I	I
Air filter		I	R	I	R	I	R	I	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Fork	I		I		I		I		I
Lights operation / aiming		I	I	I	I	I	I	I	I
Vehicle general operation	I	I	I	I	I	I	I	I	I
Braking systems	I	I	I	I	I	I	I	I	I
Light circuit	I	I	I	I	I	I	I	I	I
Safety switches	I	I	I	I	I	I	I	I	I
Brake fluid (2)	I	I	I	I	I	I	I	I	I
Gearbox oil	R	R	R	R	R	R	R	R	R
Fork oil / oil seals		R		R			R		
Engine oil	R	R	R	R	R	R	R	R	R
Final drive oil	R	R	R	R	R	R	R	R	R
Tyres - pressure/wear (5)	I	I	I	I	I	I	I	I	I
Engine idle speed	A	A	A	A	A	A	A	A	A
Valve clearance adjustment	A	A	A	A	A	A	A	A	A
Wheels	I	I	I	I	I	I	I	I	I
Bolts and nuts tightening	I	I	I	I	I	I	I	I	I
Battery terminals tightening	I								
Head screws tightening	A								
Cylinder synchronisation	I	I	I	I	I	I	I	I	I
Suspension and setting	I		I		I		I		I
Engine oil pressure warning light (4)									
Fuel lines (3)		I	I	I	I	I	I	I	I
Brake lines (3)		I	I	I	I	I	I	I	I
Clutch wear		I	I	I	I	I	I	I	I
Brake pad wear (1)	V	V	V	V	V	V	V	V	V
Labour time (minutes)	130	190	130	190	130	130	190	130	130

Transmission fluid

Check

- Keep the vehicle upright with both wheels on the ground.
- Unscrew and remove the cap/dipstick (1).
- The level is correct if the oil is close to the hole of the cap/dipstick (1).
- If the oil is lower than specified, top-up until it reaches the cap/dipstick hole (1).



CAUTION



DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

Replacement

CAUTION

THE UNIT MUST BE HOT WHEN THE OIL IS CHANGED AS UNDER SUCH CONDITIONS OIL IS FLUID AND THEREFORE EASY TO DRAIN.

NOTE

RIDE SOME km (miles) TO WARM UP ENGINE OIL

- Place a container with + 400 cm³ (25 cu in) capacity under the drainage plug (3).
- Unscrew and remove the drainage plug (3).
- Unscrew and remove the breather cap (2).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washer of drainage plug (3).
- Remove any metal scrap attached to the drainage plug (3) magnet.
- Screw and tighten the drainage plug (3).
- Pour new oil through the fill opening (1) until it reaches the cap/dipstick hole (1).

CAUTION

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

- Screw and tighten the caps (1 - 2).



Engine oil

Check

CAUTION

ENGINE MUST BE WARM TO CHECK ENGINE OIL LEVEL

NOTE

DO NOT LET THE ENGINE IDLE WITH THE VEHICLE AT STANDSTILL TO WARM UP THE ENGINE AND REACH THE OPERATING TEMPERATURE OF ENGINE OIL. OIL IS BEST CHECKED AFTER RUNNING FOR ABOUT 15 KM (10 miles).

- Switch off the engine and wait at least five minutes to allow the lubricant to drain back into the sump.
- Keep the vehicle upright with both wheels on the ground.
- Unscrew and remove the cap with dipstick.
- Clean dipstick.
- Refit the cap with dipstick into its hole without tightening.
- Remove the cap with dipstick.
- Check oil level by means of the oil dipstick.
- The oil level is correct when it close to the "MAX" mark.

MAX = maximum level


MIN = minimum level

Add engine oil if required:



- Unscrew and remove the cap with dipstick.
- Top-up with engine oil until it goes above the minimum level marked "MIN".

CAUTION

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE OIL. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

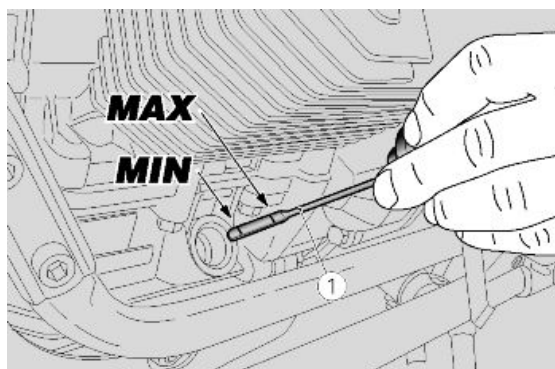**Replacement**

- Place a container with + 2000 cm³ (122 cu.in) capacity under the drainage plugs (1).
- Unscrew and remove the drainage plugs (1).
- Unscrew and remove the filler cap (2).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washers of drainage plugs (1).
- Remove any metal scrap attached to the magnet of drainage plugs (1).
- Screw and tighten the drainage plugs (1).

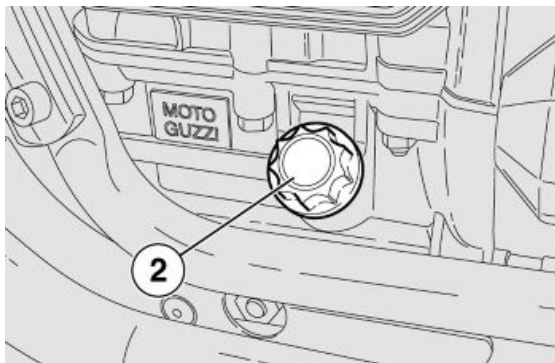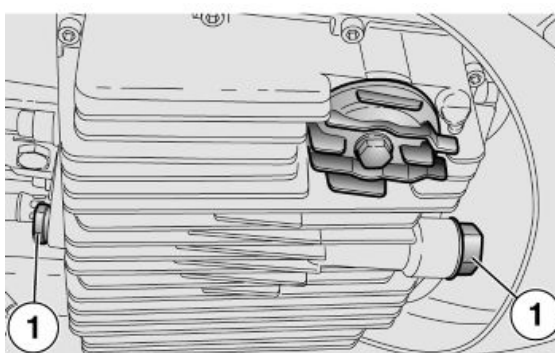

**Drainage plugs tightening torque (1): 12 Nm
(1.2 kgm)**




DO NOT DISPOSE OF OIL INTO THE ENVIRONMENT.
DISPOSE OF ENGINE OIL IN A SEALED CONTAINER AND
TAKE IT TO YOUR SUPPLIER OR TO THE NEAREST USED
OIL COLLECTION CENTRE.

Engine oil filter

- Loosen the screw (3) and remove the cover (4).
- Remove the engine oil filter (5).

NOTE


NEVER REUSE AN OLD FILTER.

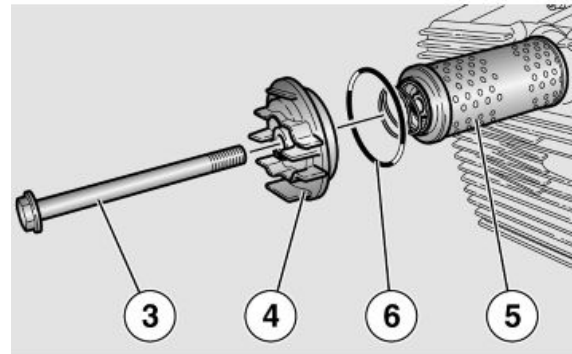

- Spread a thin layer of oil on the sealing ring (6) of the new engine oil filter.
- Fit the new engine oil filter with the spring facing downwards.
- Refit the cover (4), screw and tighten the screw (3)

Air filter


- Remove the fuel tank.
- Disconnect the two horn connectors.

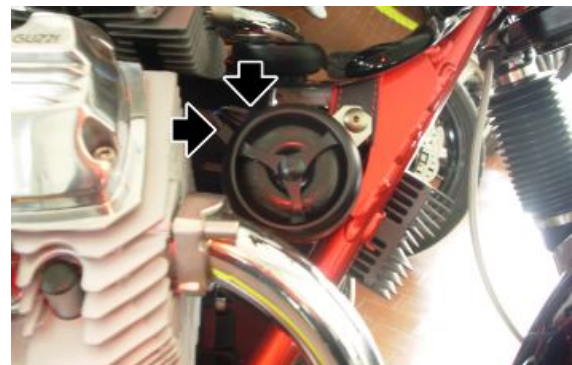

- Undo and remove the horn fixing screw.



- Working on both sides, undo and remove the two air filter casing cover screws.

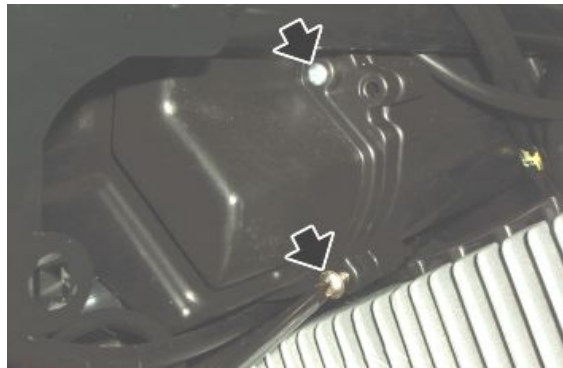

- Remove the oil breather pipe.




- Slide off the air filter casing cover from the right side of the vehicle.



- Remove the air filter.




Braking system

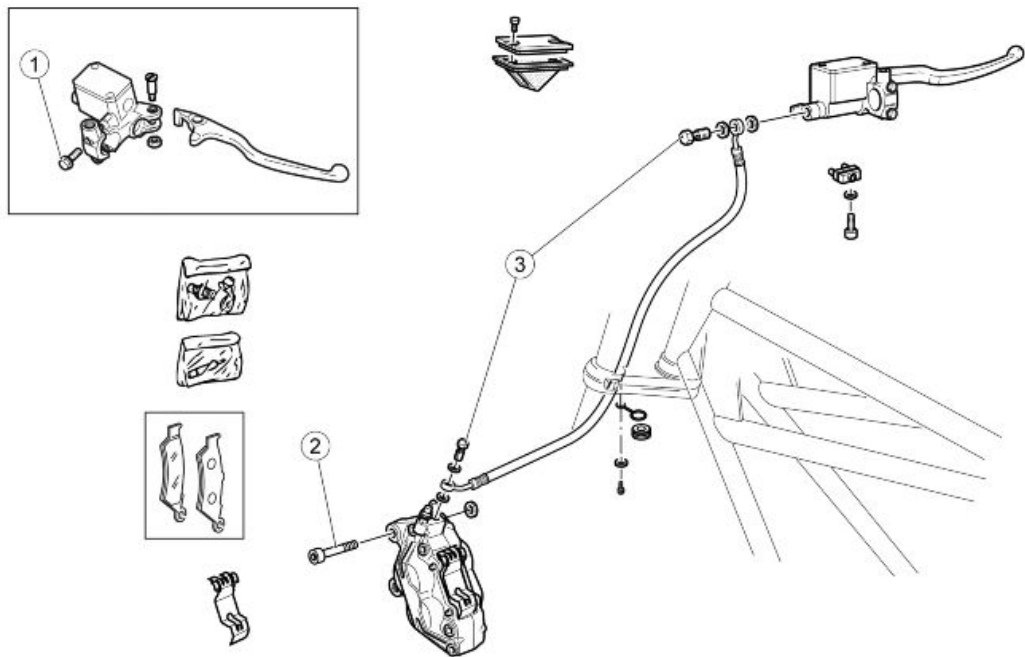

FRONT BRAKE SYSTEM

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening the brake pump U-bolt to the semi-handlebar	M6	2	10 Nm (7.37 lbf ft)	Tighten using a 1-2-1 sequence
2	Front brake calliper fixing screw	M10x30	2	50 Nm (36.88 lb ft)	-
3	Drilled screw for brake fluid pipe on pump and calliper	-	2	25 Nm (18.44 lb ft)	-

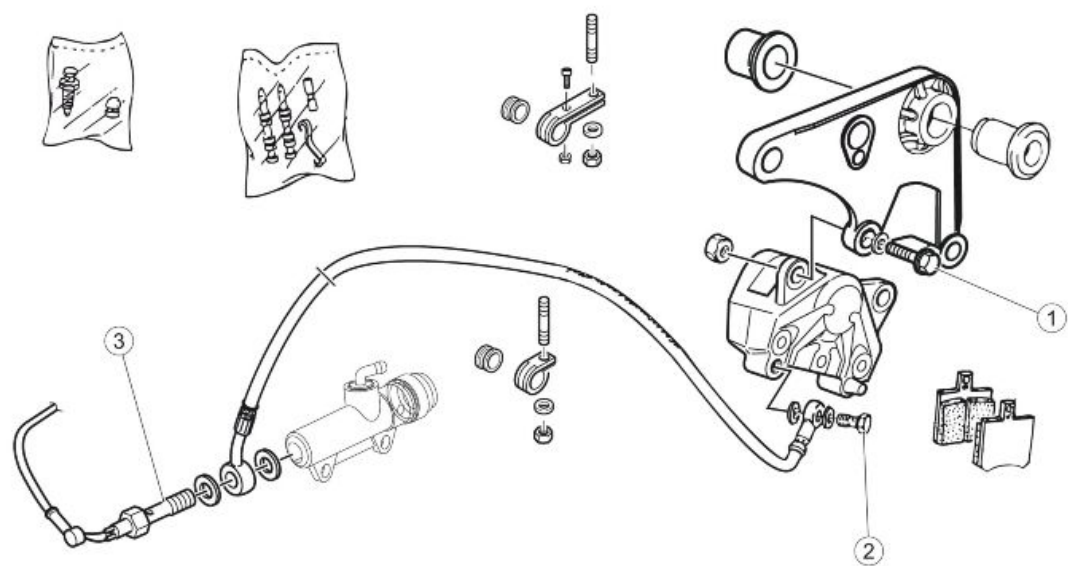

REAR BRAKE SYSTEM

pos.	Description	Type	Quantity	Torque	Notes
1	Rear brake calliper fixing screw	M8x35	2	25 Nm (18.44 lbf ft)	-
2	Drilled screw for brake pipe on calliper	-	1	25 Nm (18.44 lbf ft)	-
3	Stud bolt fixing right shock absorber to rear box	-	1	25 Nm (18.44 lbf ft)	-

Level check**Brake fluid check**

- Rest the vehicle on its stand.
- For the front brake, turn the handlebar fully to the right.
- For the rear brake, keep the vehicle upright so that the fluid in the reservoir is at the same level with the plug.
- Make sure that the fluid level in the reservoir is above the "MIN" reference mark:

MIN = minimum level

MAX = maximum level


If the fluid does not reach at least the "**MIN**" reference mark:

- Check brake pads and disc for wear.
- If the pads and/or the disc do not need replacing, top-up the fluid.

Top-up


Front brake:

- Unscrew the two screws (1) of the brake fluid reservoir (2) using a Phillips screwdriver.
- Lift and remove the cover (3) and screws (1) as well.
- Remove the gasket (4).

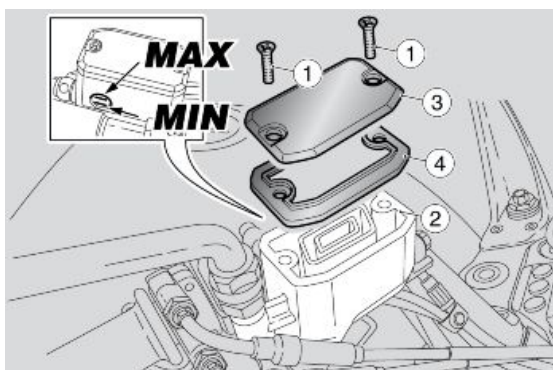

Rear brake:

- Unscrew and remove the cap (5).
- Remove the gasket (6).
- Top-up the reservoir with brake fluid to the correct level, which is between the two "MIN" and "MAX" reference marks.

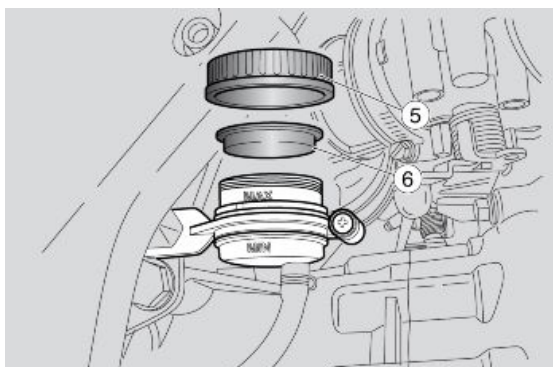

RISK OF BRAKE FLUID SPILLS. DO NOT OPERATE THE BRAKE LEVER WITH BRAKE FLUID RESERVOIR CAP LOOSENED OR REMOVED.

CAUTION



AVOID PROLONGED AIR EXPOSURE OF THE BRAKE FLUID. BRAKE FLUID IS HYGROSCOPIC AND ABSORBS MOISTURE WHEN IN CONTACT WITH AIR. LEAVE THE BRAKE FLUID RESERVOIR OPEN ONLY FOR THE TIME NEEDED TO COMPLETE THE TOPPING UP PROCEDURE.



TO AVOID SPILLING FLUID WHILE TOPPING-UP, KEEP THE TANK PARALLEL TO THE RESERVOIR EDGE (IN HORIZONTAL POSITION).

DO NOT ADD ADDITIVES OR OTHER SUBSTANCES TO THE FLUID.

WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.



DO NOT EXCEED THE "MAX" LEVEL MARK WHEN TOPPING UP.


TOP-UP TO "MAX" LEVEL MARK ONLY WHEN BRAKE PADS ARE NEW. WHEN TOPPING UP DO NOT EXCEED THE "MAX" LEVEL MARK WHEN BRAKE PADS ARE WORN AS YOU RISK SPILLING FLUID WHEN CHANGING THE BRAKE PADS.

CHECK BRAKING EFFICIENCY. IN CASE OF EXCESSIVE TRAVEL OF THE BRAKE LEVER OR POOR PERFORMANCE OF THE BRAKING SYSTEM, TAKE YOUR VEHICLE TO AN Official Moto Guzzi Dealer, AS IT MAY BE NECESSARY TO PURGE THE AIR IN THE SYSTEM.


INDEX OF TOPICS

ELECTRICAL SYSTEM

ELE SYS

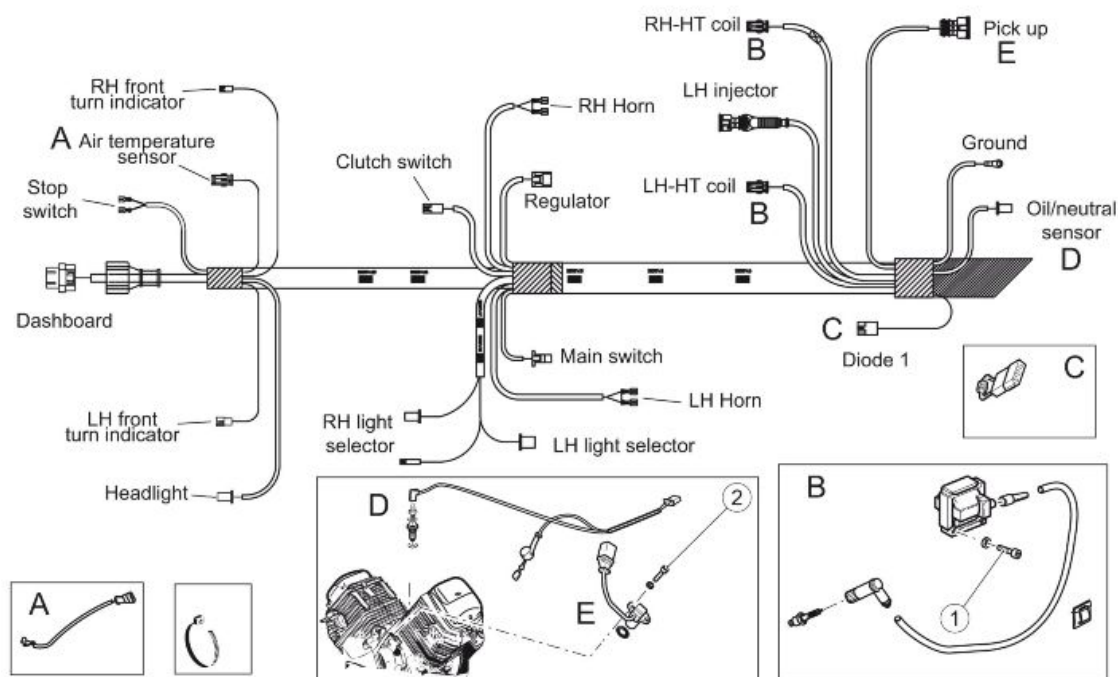**ELECTRICAL SYSTEM (FRONT)**


pos.	Description	Type	Quantity	Torque	Notes
1	HV coil fastener screw	M4x25	4	3 Nm (2.21 lbf ft)	-
2	Timing sensor fastener screw	M5x12	2	6 Nm (4.42 lbf ft)	-

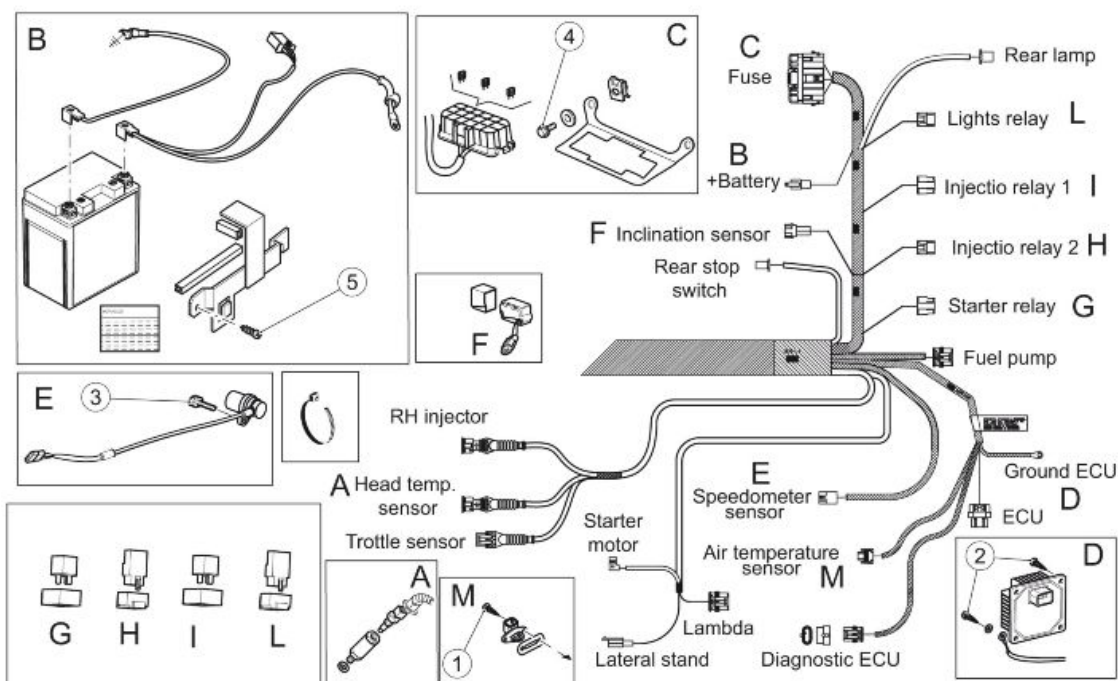**ELECTRICAL SYSTEM (REAR)**

pos.	Description	Type	Quantity	Torque	Notes
1	Air temperature sensor fastener screw	Self-tapp. 2.9x12	2	2 Nm (1.47 lbf ft)	-

pos.	Description	Type	Quantity	Torque	Notes
2	Electronic control unit fixing screw	SWP M5x20	4	3 Nm (2.21 lbf ft)	-
3	Speedometer sensor fastener screw	M6x12	1	10 Nm (7.37 lbf ft)	-
4	Fuse box bracket fixing screw	M5x12	2	4 Nm (2.95 lbf ft)	-
5	Battery mount bracket fixing screw	SWP M5x20	3	3 Nm (2.21 lbf ft)	-

Components arrangement

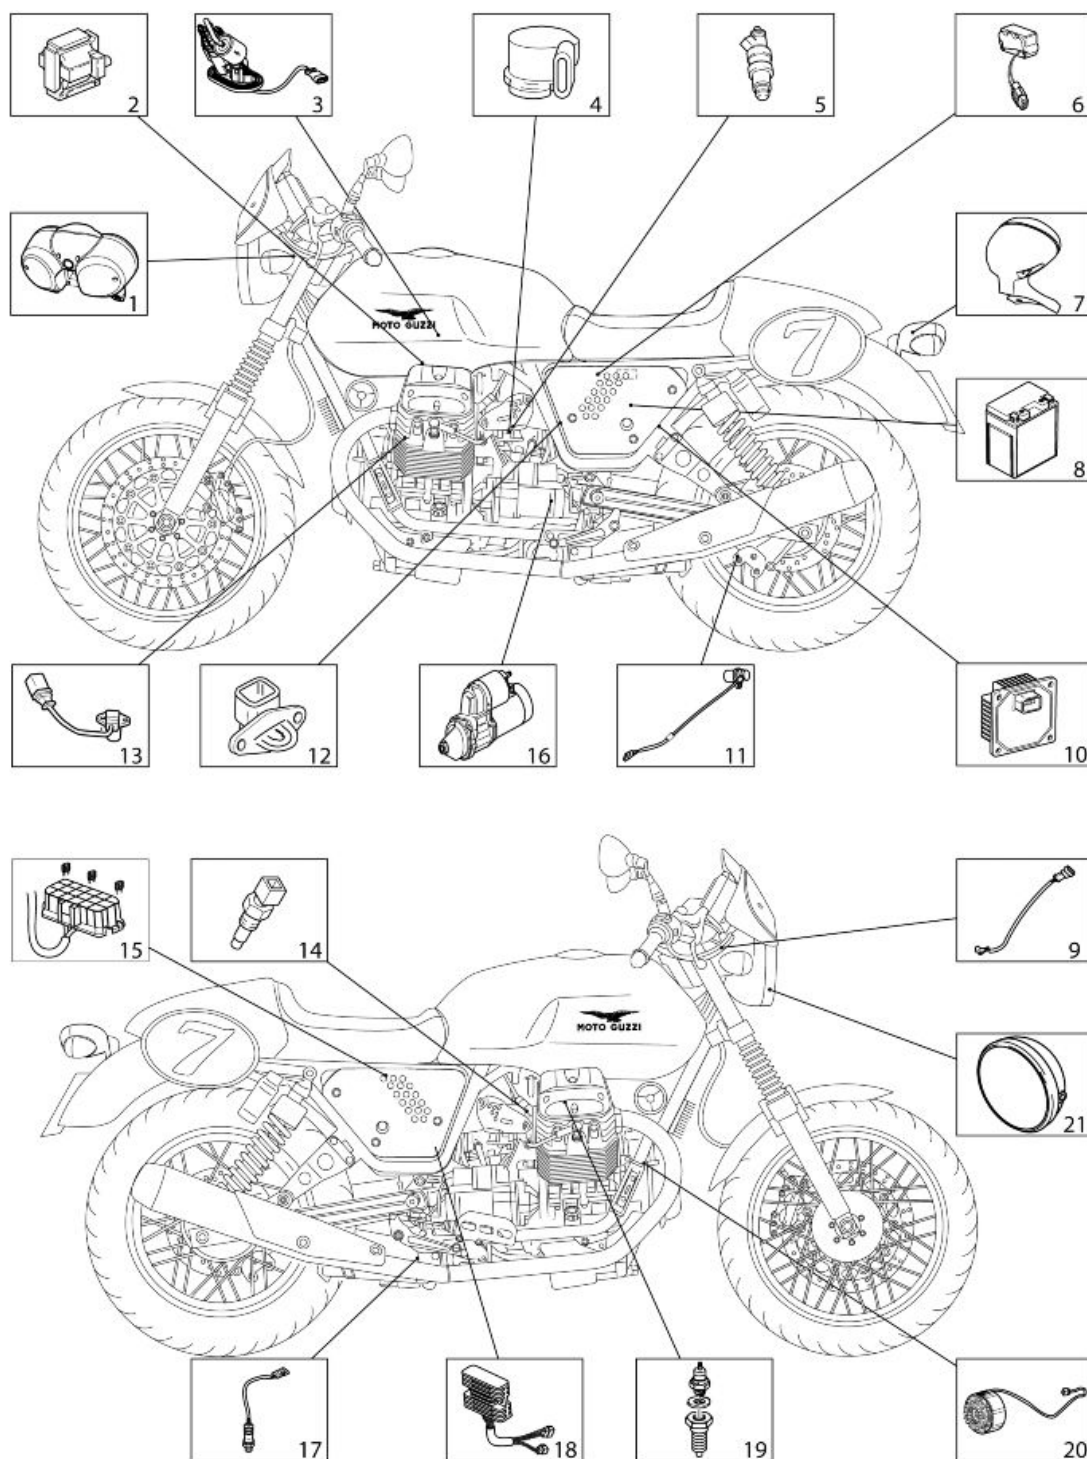

Key:

1. Instrument panel
2. Coil
3. Fuel pump
4. Throttle potentiometer (TPS)
5. Injector
6. Fall sensor
7. Rear light
8. Battery
9. Instrument panel air sensor
10. Control unit
11. Speed sensor
12. Intake air temperature sensor
13. Engine revolution sensor
14. Head temperature sensor
15. Auxiliary fuses
16. Starter motor
17. Lambda Probe
18. Voltage regulator
19. Oil pressure sensor
20. Generator
21. FRONT HEADLAMP

Electrical system installation

INTRODUCTION

Scope and applicability

The purpose of this document is to define cables laying, their fastening on the motorcycle and possible criticalities, special checks on connections and layouts, all this with the aim of obtaining vehicle reliability.

Special checks for the correct connection and laying of cables

The indicated connectors are considered critical in comparison with the others because the vehicle will stop if they are accidentally disconnected. Undoubtedly the connection of the rest of connectors



is also important and essential for the correct operation of the vehicle.

Vehicle sections

The wiring distribution is subdivided in three essential sections, as indicated in the figure.

1. Front section
2. Central section
3. Rear section

Front side

CAUTION

ONCE THE ELECTRICAL SYSTEM IS REFITTED, THE CONNECTORS RECONNECTED AND CLAMPS AND RETAINERS RESTORED, CARRY OUT THE CHECKS INDICATED UNDER "SPECIAL CHECKS FOR THE CORRECT CONNECTION AND LAYING OF CABLES" IN THE "ELECTRICAL SYSTEM INSTALLATION" SECTION.

FRONT SECTION

TABLE A

Connect the instrument panel to the main cable harness (1), passing it over the headlight support bracket (2).

Clamp the main cable harness to the headlight support bracket with a clamp (3).



TABLE B

Connect the turn indicators and the temperature sensor to the main system and clamp them as indicated.

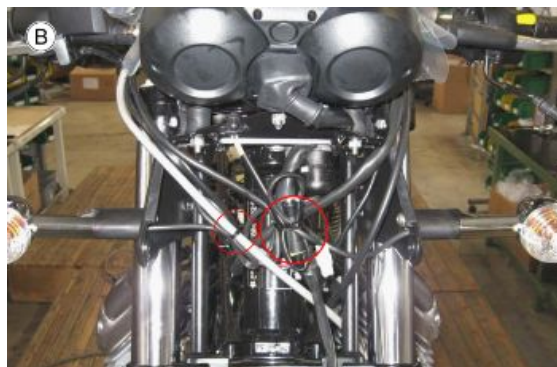


TABLE C

Arrange the throttle control transmissions.


**TABLE D**

Insert the throttle control and starter transmissions through the cable guide on the steering pipe (4) and fasten them with a rubber clamp (5).

**TABLE E**

Turn the steering to the left, clamp the three cables of the front cable harness with two clamps:

- the first clamp fixed to the chassis in the opening;
- the second, near the headstock.

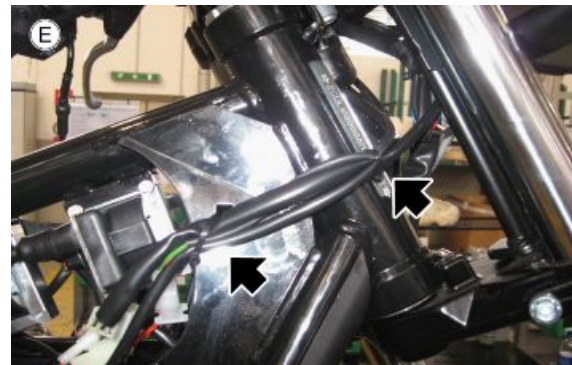

Central part

CAUTION

ONCE THE ELECTRICAL SYSTEM IS REFITTED, THE CONNECTORS RECONNECTED AND CLAMPS AND RETAINERS RESTORED, CARRY OUT THE CHECKS INDICATED UNDER "SPECIAL CHECKS FOR THE CORRECT CONNECTION AND LAYING OF CABLES" IN THE "ELECTRICAL SYSTEM INSTALLATION" SECTION.

CENTRAL SECTION

TABLE A - TANK FITTING

- Place the submersible pump and set the six screws, tightening them in a criss-cross sequence to the prescribed torque.
- Repeat the tightening sequence.

- After connecting the quick connectors to the pump, check that it has fitted correctly by pulling the connector in the opposite direction.

Locking torques (N*m)

Pump support to tank retainer - M5x16 (6) 6 Nm (4.42 lbf ft)

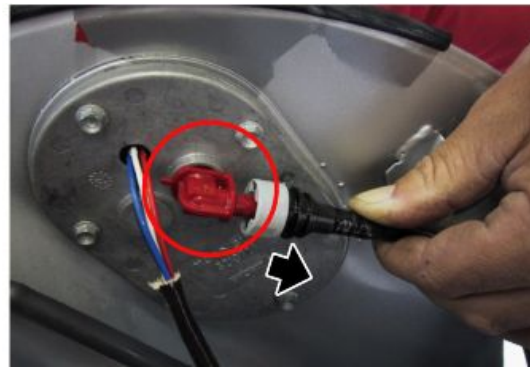


TABLE B

Clamp the tank drainage pipes to the ground with the oil scavenge pipes so that they do not touch the compensator.

CAUTION

DO NOT SQUEEZE THE TWO TUBES WHILE FASTENING THE CLAMP.



TABLE C - RELAY POSITION

1. Relay with five pins (tank side)
2. Relay with four pins in third position.

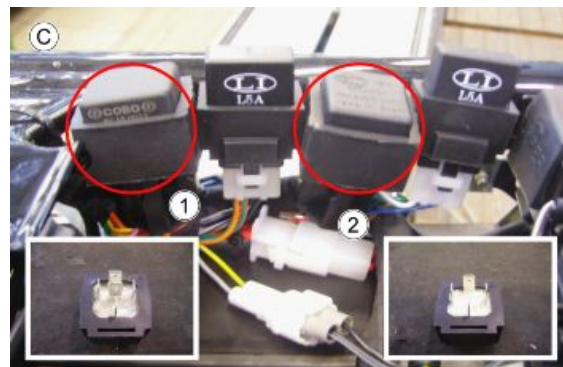


TABLE D - FASTENING THE ELECTRICAL SYSTEM TO THE CHASSIS

Position the electrical system on the chassis, holding the red strap at the centre of the rear coil, and fix with a clamp.

WARNING

THE CLAMP MUST BE POSITIONED BEHIND THE REAR COIL, SO THAT THE SYSTEM CANNOT SLIDE FORWARDS.

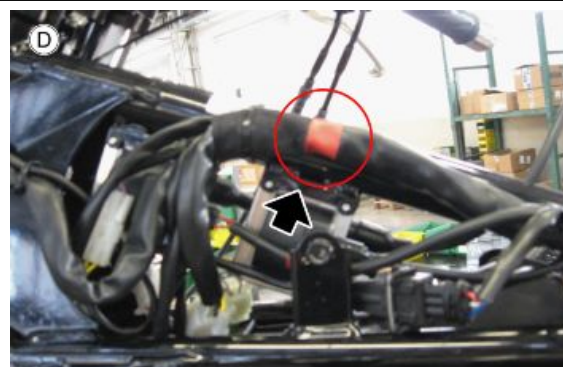


TABLE E

Clamp the main cable harness onto the central part of the left hand spar with two clamps (3) and on the pipe joining tube the tank attachment (right side) (4) with one clamp.



TABLE F - TIMING SWITCH SYSTEM POSITION

Clamp the timing sensor system to the generator system, regulator system, horn system and left cable of the chassis cross member.

CAUTION
DO NOT SQUEEZE THE TWO TUBES WHILE FASTENING THE CLAMP.


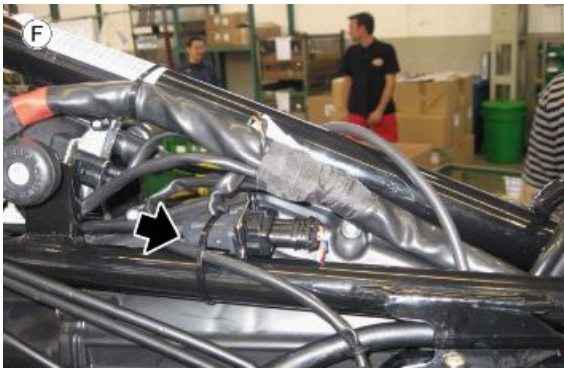


TABLE G - TIMING SWITCH SYSTEM POSITION

Clamp the timing sensor connector to the left hand side of the chassis, positioning it as far as possible from the coil and the spark plug cables.



General wiring diagram

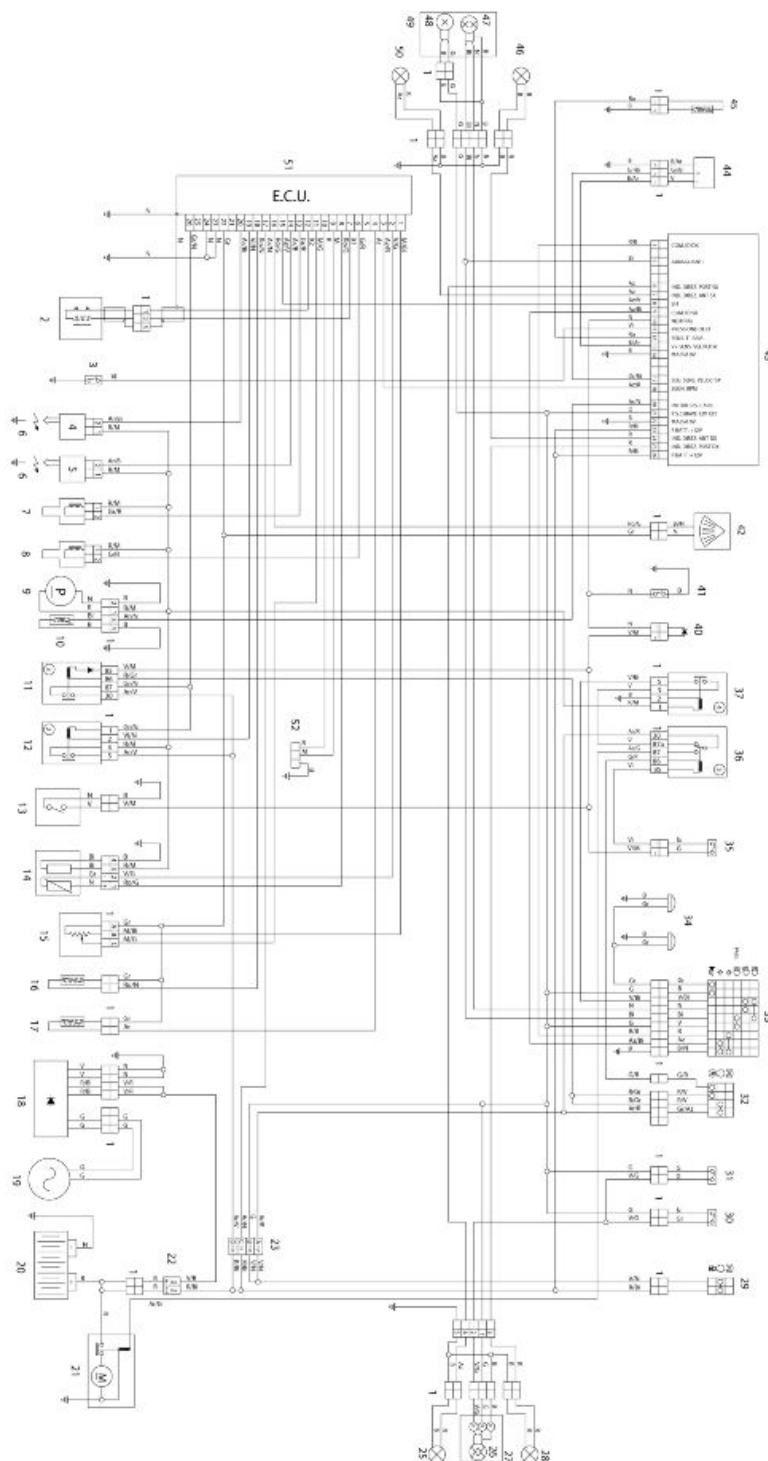

Key:

1. Multiple connectors
2. Revolution sensor
3. Oil pressure sensor
4. Left coil

5. Right coil
6. Spark plugs
7. Left injector
8. Right injector
9. Fuel pump
10. Fuel reserve sensor
11. Main injection relay (polarised)
12. Secondary injection relay
13. Side stand switch
14. Lambda Probe
15. Throttle sensor
16. Engine air thermistor
17. Head temperature sensor
18. Voltage regulator
19. FLYWHEEL
20. Battery
21. Starter motor
22. Main fuses
23. Auxiliary fuses
24. License plate light
25. Right rear turn indicator
26. Tail light - Stop bulb
27. Rear light
28. Right rear turn indicator
29. Key switch
30. Front stop switch
31. Rear stop switch
32. Right light switch
33. Left light switch
34. Horn
35. Clutch switch
36. Start-up relay
37. Light relay
38. -
39. -
40. Diode
41. Gear in neutral switch
42. Fall sensor

- 43. Instrument panel
- 44. Speed sensor
- 45. External air temperature thermistor
- 46. Right front turn indicator
- 47. High - low-beam bulb
- 48. Front tail light bulb
- 49. Front headlamp
- 50. Left front turn indicator
- 51. ECU
- 52. Diagnostics socket

Cable colour:

Ar orange

Az sky blue

B blue

Bi white

G yellow

Gr grey

M brown

N black

R red

Ro pink

V green

Vi purple


Checks and inspections

Dashboard

Service warning light reset

- The system displays the function as follows:

the word "MAInt" is shown on the left LCD Display (1) after the mileage corresponding to the first servicing or any subsequent servicing is exceeded.

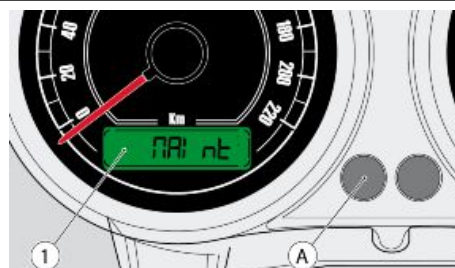

- This is shown only after each start-up for 5 seconds; afterwards, it will shift to the standard view.


To reset Service proceed as follows:

- Hold down the key (A).
- Turn the ignition key to "ON".
- Wait for the Key OFF.

The next time the vehicle is started, the value will be reset and the word "MAInt" will not be displayed until the next mileage for which maintenance is foreseen.


Start-up system check

pick-up input about 100 A

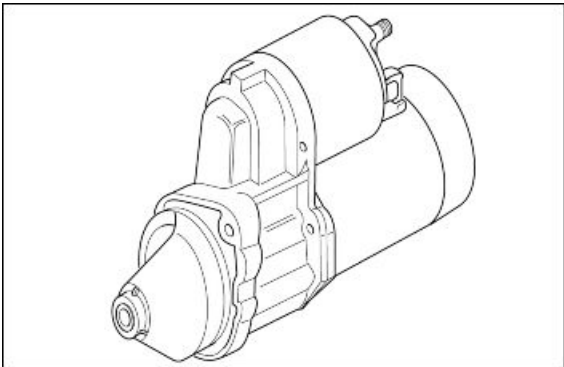

level indicators


Petrol pump:
Input 4A (to be measured between pins 1 and 2 with 12V supply voltage)
Fuel level sensor:
Resistance 1.4 Ohm (to be measured between pins 3 and 4 with fuel level equal to 0 litres)

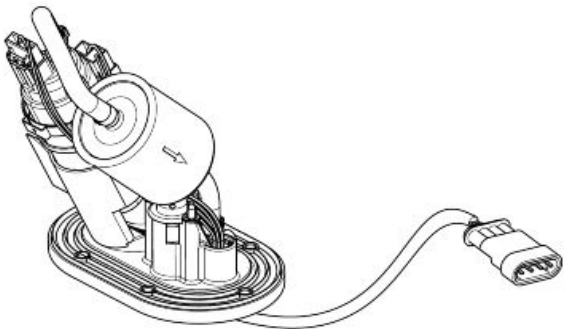

Lights list

BULBS	
Specification	Desc./Quantity
Low/high beam light (halogen)	12 V - 55 W / 60 W H4


Specification	Desc./Quantity
Front daylight running light	12V - 5W
Turn indicator light	12 V - 10 W (orange RY 10 W bulb)
License plate light	12V - 5 W
tail light /stop lights	12 V - 5 / 21 W
Dashboard lighting	LED

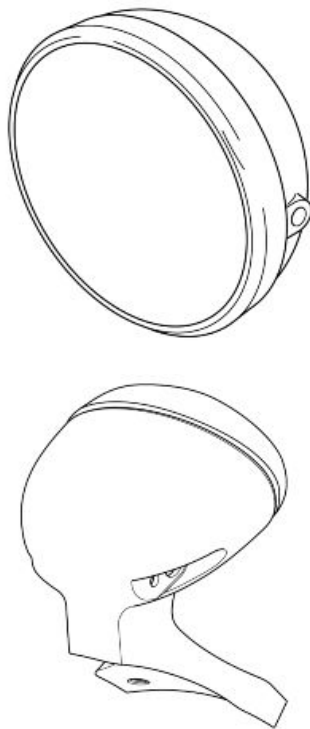

Fuses


FUSE DISTRIBUTION

- A) High-beam / low-beam lights, start-up (15 A).
- B) Stop lights, tail lights, horn, turn indicators (15 A).
- C) From battery to injection permanent power supply (3 A).
- D) Injection services (15 A).
- E) Main fuse (30 A).
- F) Battery recharge (30 A).

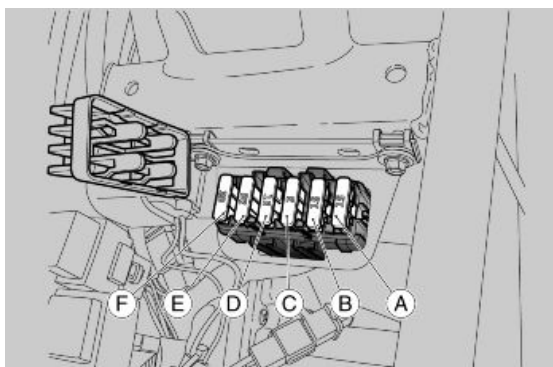

Control unit

Magneti Marelli engine control unit 15 RC

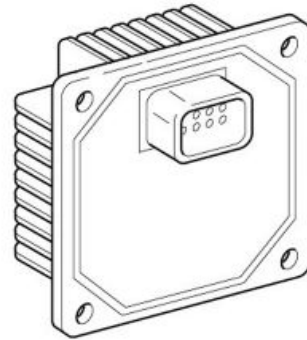


Battery

Characteristic

Battery

12V - 12 Ah

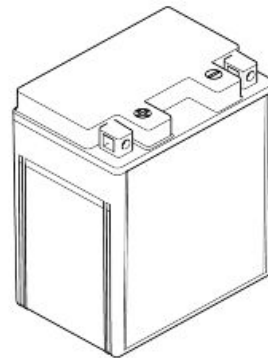

Speed sensor

Function

To indicate the vehicle speed by reading the rear wheel rotation speed.

Operation / Operating principle

Hall effect sensor: a square-wave pulse is generated with voltage between 12V and approximately 0.6 V.


Level in wiring diagram:

Speed sensor

Location:

- Sensor: on the swingarm, left side, next to the rear brake calliper.
- connector: under right fairing, next to the Marelli control unit.

Pin-out:

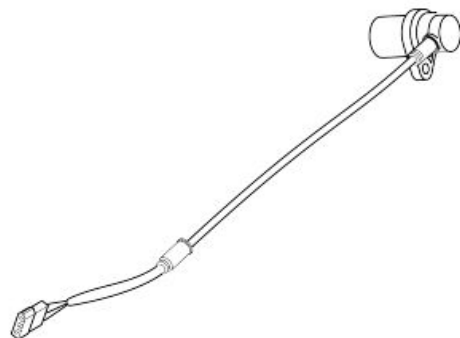

PIN:

- PINS 1-3 Voltage: approximately 12 V
- PINS 2-3 Voltage: between 0.6V-12V
(turning the rear wheel)

1. Supply voltage (green - sensor side)
2. Output signal (grey/white - sensor side)
3. Ground (blue/orange - sensor side)

DIAGNOSIS**Speed viewing problems on the instrument panel**

CARRY OUT THE CASCADE OPERATIONS UNTIL THE FAILURE IS FOUND

- Check correct position of the sensor in its fitting.
- Check voltage between PINS 1-3 of the sensor. If there is no voltage, check continuity between PIN 1 of the sensor and PIN 3 of the instrument panel connector.
- Check the instrument panel PIN 13 connector.
- Check continuity with the sensor PIN 13 ground lead.
- Check continuity of the grey/white cable harness (cable harness side) from PIN 2 of the sensor to PIN 17 of the instrument panel connector.
- Check instrument panel PIN 17. If there is no failure after all these checks, replace the sensor.

Engine rpm sensor**Function**

It informs crankshaft position and speed to the Marelli control unit.


Operation / Operating principle

Inductive sensor: sinusoidal-type generated voltage; two teeth are missing on the flywheel for the reference position.

Level in electrical circuit diagram: engine speed sensor

Location:

- Sensor: engine front left section, under the left cylinder.
- Connector: under the fuel tank.

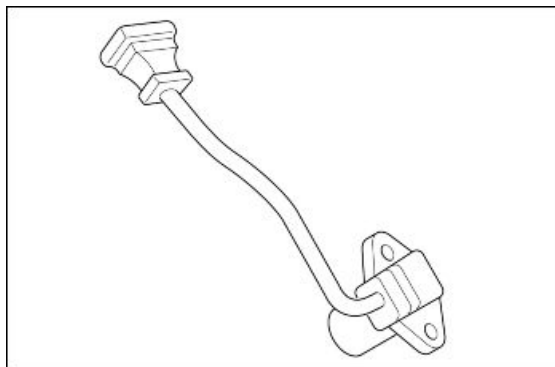Electrical characteristics:

- Winding resistance: $650\ \Omega \pm 15\%$ Output alternating voltage, value range: minimum: 0.5 V - maximum: 5 V

Pin-out:

1. Engine speed sensor positive signal
2. Engine speed sensor negative signal
3. Engine speed sensor anti-jamming cable

NAVIGATOR: PARAMETERS**Target engine revs**

Example value: 1100 +/- 100 rpm

Parameter valid at idle, setting depends especially on engine temperature: the ECU unit will try to keep the engine running at this revs, acting on the ignition advance.

NAVIGATOR: STATUSES**Synchronisation**

Example value: Synchronised / Not synchronised

Indicates if the control unit detects the engine speed sensor signal correctly

DIAGNOSIS**Engine speed sensor**

An interruption in the sensor circuit has been detected, from PIN 7 to PIN 12 of the control unit connector. Check the sensor connector and the injection ECU connector: if not OK, restore; if OK, check continuity of the two cables to PINS 7 and 12 of the control unit connector: if there is no continuity, restore the cable harness; if there is continuity, check the interruption on the sensor and replace it

CAUTION If the electric circuit is short-circuited, no error is displayed. Check the sensor electrical specifications: If it is not the correct one, replace the sensor. If it is the correct one, check supply insulation and ground connection insulation of both cables. Carry out the tests from the sensor connector to the sensor. If not OK, restore the cable harness or replace the sensor. If OK, perform the test from pins 7 and 12 of the Marelli control unit connector to the cable harness.

Installation

Place the sensor plus the corresponding spacers; the air gap should be between 0.7 and 0.9 mm.

Throttle position sensor


Function

In charge of telling the control unit the position of the throttle valves.

Operation / Operating principle

The throttle valve position sensor works as a variable resistance according to the throttle rotation.

Level in electrical circuit diagram: Throttle and idle motor

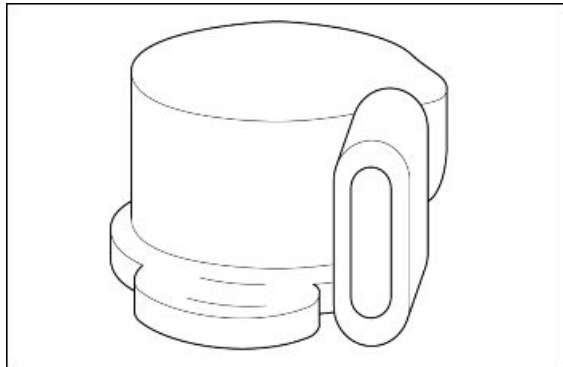

Location:

- sensor: on the right cylinder throttle body
- connector: on the potentiometer

Electrical characteristics:

PINS A-C: throttle closed approximately 1.7 kOhm; throttle open approximately 1.1 kOhm.

PINS A-B: approximately 1 kOhm.

Pin-out:

a: ground connection

B: supply voltage +5V

C: potentiometer signal (from 0.5 V with closed throttle to 4 V with open throttle)

NAVIGATOR: PARAMETERS

Potentiometer on throttle / 0.5 (minimum) - 4 (full load)

Correct throttle position / 3.1 (minimum) - 85 (full load)

NAVIGATOR: STATUSES

Minimum/full load - ON/OFF

If the throttle is at minimum, it indicates ON, if the throttle is out of minimum, it indicates OFF

NAVIGATOR: ELECTRICAL ERRORS

Throttle - open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 11 of the control unit connector.
- If shorted to negative: voltage equal to zero has been detected.

Troubleshooting

- Circuit is open, shorted to positive: check the injection control unit connector and the sensor connector: if they are not OK, restore; if they are OK, check the continuity between PIN 11

of the control unit connector and PIN C of the sensor (brown/yellow cable): if there is not continuity, restore the cable harness; if there is continuity, check continuity of the sensor between PIN A and PIN C: if there is not continuity, replace the potentiometer; if there is continuity, measure the resistance. If resistance is over 2 kOhm, it indicates the brown/yellow cable is shorted to positive; therefore, it is necessary to restore cable harness

- shorted to negative: disconnect the sensor connector and check ground insulation of the brown/yellow cable (from throttle sensor connector or control unit connector): if there is continuity with the ground connection, restore the cable harness; if isolated from ground connection, the resistance between PIN A and PIN C is below 1.3 kOhm; therefore, it is necessary to replace the throttle body.

NAVIGATOR: ADJUSTABLE PARAMETERS

Self-adjustable parameters reset:

Lambda probe: operation to be carried out after the throttle body is cleaned, or in the case a new engine, a new lambda probe or a new injector is fitted, or the correct operation of the injection system or the valves is restored.

Throttle positioner self-acquisition:

Allows the control unit to detect the closed throttle position: just press the enter button. The operation should be carried out when the throttle body of the throttle position sensor or the injection control unit is replaced

RESET PROCEDURE:

Once the throttle body or the injection control unit is replaced, it is necessary to connect to the diagnosis instrument selecting FUEL INJECTION and carry out the operation: Throttle positioner self-acquisition

Engine temperature sensor

Function

indicates the engine temperature to the control unit so as to optimise carburetion and idle control

Operation / Operating principle


NTC type sensor (resistance sensor, inversely variable with temperature).

Level in electrical circuit diagram: Temperature sensors

Location:

- on the right head, next to the throttle body
- connector: on the sensor

Electrical characteristics:

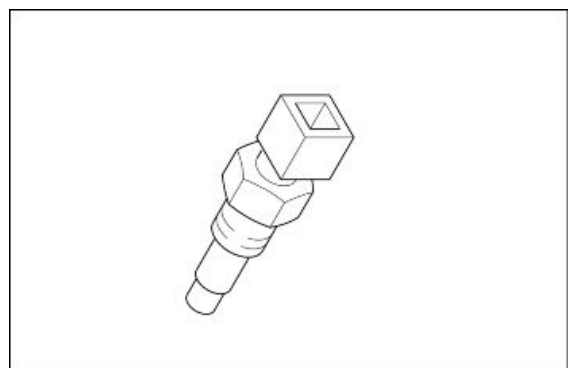

- Resistance at 0°C: 9.75 kΩ ± 5%
- Resistance at 20°C: 3.747 kΩ ± 5%
- Resistance at 40°C: 1.598 kΩ ± 5%
- Resistance at 60°C: 0.746 kΩ ± 5%
- Resistance at 80°C: 0.377 kΩ ± 5%
- Resistance at 100°C: 0.204 kΩ ± 5%

Pin-out:

- Grey (cable harness side): Ground connection
- Orange (cable harness side): 0-5 V signal

NAVIGATOR: PARAMETERS**Engine temperature**

In case of failure, the value read on Navigator (20°C - 68°F) is set by the control unit, so it is not a real value.

NAVIGATOR: ELECTRICAL ERRORS

engine temperature sensor - open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 4 of the control unit connector.
- If shorted to negative: voltage equal to zero has been detected at PIN 4 of the control unit connector

Troubleshooting

- If the circuit is open, shorted to positive: check sensor connector and Marelli control unit connector; if not OK, restore cable harness; if OK, check sensor continuity; if it is not OK, replace the sensor; if it is OK, check continuity between PIN 4 of the control unit connector and the PIN marked by the orange cable of the sensor: restore cable harness if there is not continuity; if it is OK, reconnect the control unit connector and, with key set to ON, check continuity between the PIN marked by the grey cable of the sensor connector and the vehicle ground connection: if there is not continuity, restore cable harness; if there is continuity, it means that the error cause is a shorted-to-positive cable; therefore, restore cable harness between PIN 4 of the control unit and the PIN marked by the orange cable of the sensor. If the engine air temperature sensor error is displayed at the same time, it means that there is a short circuit to positive in the grey cable of both sensors.
- If shorted to negative, check sensor correct resistance: if resistance = 0, replace the sensor; if resistance is correct, it means that the cable has ground connection: restore the cable harness.

Air temperature sensor

Function

It tells the control unit the intake air temperature in order to calculate oxygen presence so as to optimise the petrol quantity necessary for correct combustion.

Operation / Operating principle

NTC type sensor (resistance sensor, inversely variable with temperature).

Level in electrical circuit diagram: Temperature sensors

Location:

- sensor: on the right side of the filter box, next to the control unit
- connector: on the sensor

Electrical characteristics:

- Resistance at 0°: $9.75 \text{ k}\Omega \pm 5\%$
- Resistance at 10°: $5.970 \text{ k}\Omega \pm 5\%$
- Resistance at 20°: $3.747 \text{ k}\Omega \pm 5\%$
- Resistance at 25°: $3.000 \text{ k}\Omega \pm 5\%$
- Resistance at 30°: $2.417 \text{ k}\Omega \pm 5\%$

Pin-out:

- Grey (cable harness side): Ground connection
- Pink/black (cable harness side): 0-5 V signal

NAVIGATOR: PARAMETERS

Air temperature

In case of failure, the value set by the control unit is 20 °C (68 °F)


NAVIGATOR: ELECTRICAL ERRORS

air temperature sensor open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 18 of the control unit connector.
- If shorted to negative: voltage equal to zero has been detected at PIN 18 of the control unit connector

Troubleshooting

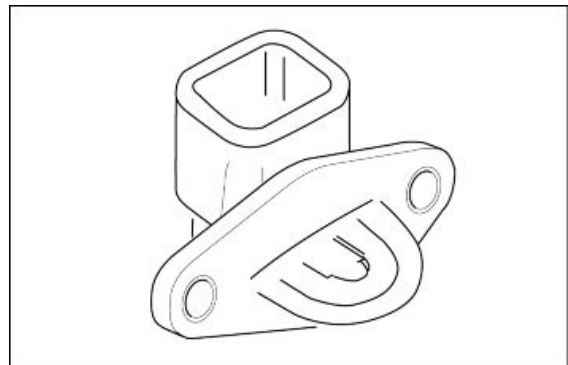

- If the circuit is open, shorted to positive: check sensor connector and Marelli control unit connector; if not OK, restore cable harness; if OK, check sensor continuity; if it is not OK, replace the sensor; if it is OK, check the continuity between PIN 18 of the control unit connector and the PIN related to the pink/black cable (cable harness side) of the sensor: restore cable harness if there is not continuity; if it is OK, reconnect the control unit connector and, with key set to ON, check continuity between the PIN related to the grey cable (cable harness side) of the sensor and the vehicle ground connection: if there is not continuity, restore cable harness; if there is continuity, it means that the error cause is a shorted-to-positive cable; therefore, restore cable harness between PIN 18 of the control unit and the PIN related to the pink/black cable (cable harness side) of the sensor. If the engine temperature sensor error is displayed at the same time, it means that there is short circuit to positive in the grey cable of both sensors.
- If shorted to negative, check sensor correct resistance: if resistance = 0, replace the sensor; if resistance is correct, it means that the pink/black cable has ground connection: restore the cable harness

NOTES No error is detected if the sensor does not work correctly or the control unit connector or sensor terminals are rusty: then check through Navigator if the temperature indicated is plausible in relation to the ambient temperature. Check also that the sensor electrical characteristics are observed: replace the sensor if not OK; if it is OK, check the sensor connector and the Marelli control unit connector

Lambda sensor

Function

In charge of telling the control unit whether the mixture is lean or rich.


Operation / Operating principle

The Marelli injection control unit reads and interprets a voltage generated by the difference in oxygen content between the exhaust fumes and the ambient. It does not require an external supply source but, in order to work properly, it should reach a high operating temperature: that is why there is a heating circuit inside.

Level in electrical circuit diagram: Lambda probe

Location:

- sensor: exhaust pipe
- connector: next to the starter motor

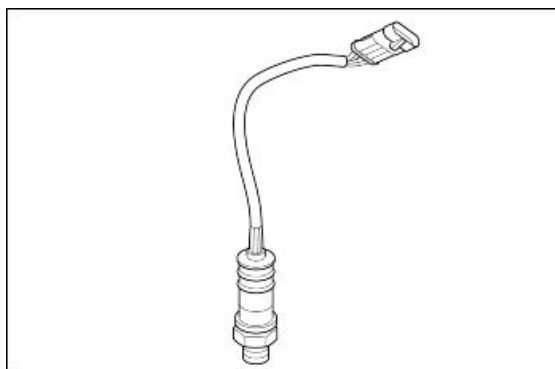

Electrical characteristics:

Heater circuit: 12 -14 Ω at 20 °C (68 °F)

Pin-out:

1. Sensor signal + (black wire)
2. Sensor signal - (grey wire)
3. Heater ground connection (white)
4. Heater power supply (white)

NAVIGATOR: PARAMETERS**Lambda probe**

Example value: 0 - 1000 mV

If there is a short circuit at + 5 V or higher, the read value is equal to approximately 1250 mV (the corresponding error will be displayed on the Navigator). If there is a short circuit on ground connection, the read value is equal to 0 mV and the Lambda sensor correction parameter indicates 1.5: no error is displayed, though.

Lambda integrator

example value: 1.00

In closed loop, the value must be close to 1.0 (values not within the 0.7 - 1.3 interval indicate a fault).

In an open circuit, the lambda probe signal is too low. Therefore, the control unit takes it as a lean combustion condition and will try to enrich it. The value read will be 1.5

NAVIGATOR: STATUSES**Lambda check**

Example value: Open loop / Closed loop

Closed loop indicates that the control unit is using the lambda probe signal to keep the combustion as close as possible to the stoichiometric value.

NAVIGATOR: ELECTRICAL ERRORS

Lambda probe - Generic error.

Error cause

- If shorted to positive: excessive voltage (battery voltage) has been detected at PIN 8 or PIN 2 of the control unit connector.

Troubleshooting

- shorted to positive: with key set to ON, disconnect the sensor connector and measure PIN 1 voltage (pink/yellow cable) on the cable harness side: if there is voltage (5 or 12 V), restore cable harness; if there is no voltage, measure voltage at PIN 2 on the cable harness side (green/yellow cable); and if there is voltage, restore cable harness; if there is no voltage, replace the lambda probe. After the cable harness has been restored or the probe replaced, the lambda probe error will remain active until an operation cycle is completed

Lambda probe heating - Lambda probe that does not get into cycle

Error cause

- Short circuit/open circuit: lambda probe that does not get into cycle.

Troubleshooting

- Disconnect the connector and check that the heater resistance (on 2 white cables) is approximately 13 Ohm (at room temperature). If it is OK, check if there is ground connection on PIN 4 (blue cable) on the cable harness side; if OK, check if there is battery voltage on PIN 3 (red/brown cable) on the cable harness side for 2 seconds upon "key ON" and afterwards when the engine is started.

Injector

Function

To supply the correct amount of petrol at the right timing.

Operation / Operating principle

Injector coil is excited for the petrol passage to open.

Level in electrical circuit diagram: Coils and injectors

Location:

- on the intake manifolds
- connector: on injector

Electrical characteristics: 14.8 Ohm +/- 5% (at 20 °C - 68 °F)

Pin-out:

1. Ground connection
2. Power supply 12V

NAVIGATOR: PARAMETERS

- Left cylinder injection time
- Right cylinder injection time

NAVIGATOR: ACTIVATION

Left injector: operation for 4 ms, 5 times

The auxiliary injection relay (No. 12 in the wiring diagram, placed under saddle, second relay starting from the front; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the grey/red cable of the injector is closed to ground for 4 ms per second. Disconnect the 4-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation



NAVIGATOR: ELECTRICAL ERRORS

Left injector - shorted to positive / shorted to negative / open circuit.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 13 of the control unit connector.
- If shorted to negative: no voltage has been detected.
- If the circuit is open: an interruption has been detected

Troubleshooting

- Shorted to positive: disconnect the injector connector, take the key to ON and check if there is voltage on the grey/red cable: if there is voltage, restore the cable harness. If there is no voltage, replace the injector.
- If shorted to negative: disconnect the injector connector, take the key to ON and check if the grey/red cable has continuity to the ground connection: if there is continuity to ground, restore the cable harness; if there is not continuity, replace the injector
- The circuit is open: check the component correct electrical characteristic: if it is not the correct one, replace the component; if it is correct, check the connector on the component and the Marelli control unit connector: If it is not OK, restore; if it is OK, check continuity of the cable between PIN 13 of the control unit connector and PIN 1 of the component and restore the cable harness

NAVIGATOR: ACTIVATION

Right injector: operation for 4 ms, 5 times

The auxiliary injection relay (No. 12 in the wiring diagram, placed under saddle, second relay starting from the front; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the blue/red cable of the injector is closed to ground for 4 ms per second. Disconnect the 4-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation

NAVIGATOR: ELECTRICAL ERRORS

Right injector - shorted to positive / shorted to negative / open circuit.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 6 of the control unit connector.
- If shorted to negative: no voltage has been detected.
- If the circuit is open: an interruption has been detected.

Troubleshooting

- If shorted to positive: disconnect the injector connector, set the key to ON and check if there is voltage on the yellow/red cable: if there is voltage, restore the cable harness; if there is not, replace the injector.
- If shorted to negative: disconnect the injector connector, set the key to ON and check if there is continuity between the yellow/red cable and the ground connection: if there is continuity with the ground connection, restore the cable harness; if there is not continuity, replace the injector.
- The circuit is open: check the component correct electrical characteristic: if it is not the correct one, replace the component; if it is correct, check the connector on the component and the Marelli control unit connector: If not OK, restore; if OK, check continuity between the cable of PIN 6 control unit connector and PIN 1 of the component and restore the cable harness.

Coil

Function

It controls the ignition spark plug in order to generate the fuel ignition spark.

Operation / Operating principle

Inductive discharge system.

Level in electrical circuit diagram: Coils and injectors

Location:

- centred under the fuel tank.
- connector: on the coils.

Electrical characteristics:

- Primary winding resistance: $550\text{ k}\Omega \pm 10\%$
- Secondary winding resistance: $3\text{ k}\Omega \pm 10\%$
- Tube resistance $5\text{ k}\Omega$


Pin-out:

1. Power supply + V_{batt}
2. Circuit ground

NAVIGATOR: PARAMETERS

- Left coil ignition advance.
- Right coil ignition advance.

NAVIGATOR: ACTIVATION

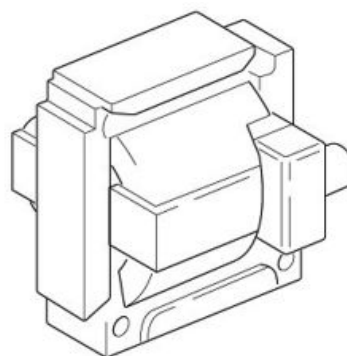

Left coil:

The auxiliary injection relay (No. 12 in the wiring diagram, placed under saddle, second relay starting from the front; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the orange/white cable of the coil is closed to ground for 2 ms per second. Disconnect the 4-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation.

NAVIGATOR: ELECTRICAL ERRORS

Left coil - shorted to positive / open circuit, shorted to negative

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 20 of the control unit connector.
- If the circuit is open, shorted to negative: voltage equal to zero has been detected at PIN 20 of the control unit connector

Troubleshooting

- shorted to positive: disconnect the coil connector, set the key to ON, activate the coil with Navigator and check voltage at connector PIN 2: if there is voltage, restore the cable harness; if voltage = 0, replace the coil
- if the circuit is open, shorted to negative: check the coil connector and the Marelli control unit connector. If not OK, restore; if everything is OK, check cable continuity between the two cable terminals. If there is no continuity, restore the cable harness; if there is cable continuity, with key set to ON, check the cable earth insulation (from coil connector or control unit connector). If not OK, restore the cable harness.

Right coil:

The auxiliary injection relay (No. 12 in the wiring diagram, placed under saddle, second relay starting from the front; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the orange/blue cable of the coil is closed to ground for 2 ms per second. Disconnect the 4-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation.

Right coil - shorted to positive / open circuit, shorted to negative.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 14 of the control unit connector.
- If the circuit is open, shorted to negative: voltage equal to zero has been detected at PIN 14 of the control unit connector

Troubleshooting

- shorted to positive: disconnect the coil connector, set the key to ON, activate the coil with Navigator and check voltage at connector PIN 2: if there is voltage, restore the cable harness; if voltage = 0, replace the coil.
- if the circuit is open, shorted to negative: check the coil connector and the Marelli control unit connector. If not OK, restore; if everything is OK, check cable continuity between the two cable terminals. If there is no continuity, restore the cable harness; if there is cable continuity, with key set to ON, check the cable earth insulation (from coil connector or control unit connector). If not OK, restore the cable harness.

Engine oil pressure sensor

Function: Indicates the instrument panel if there is enough oil pressure (0.35 +/- 0.2 bar) (5.1 +/- 2.9 PSI) in the engine.

Operation / Operating principle: normally closed switch. With oil pressure above 0.35 +/- 0.2 bar (5.1 +/- 2.9 PSI), open circuit.

Level in wiring diagram: fuel reserve and oil pressure.

Location:

- sensor: between the two heads, at the back.
- connector: on the sensor.

Electrical characteristics:

- With engine off: closed circuit (continuity).
- With engine started: open circuit (infinite resistance).

Pin-out: Voltage 12V

Instrument panel

Warning light always off

Troubleshooting

- Check the sensor connector and the instrument panel connector (PIN 17): If not OK, restore. If OK, check the continuity of the purple cable between the sensor connector and the instrument panel connector PIN 11: if not OK, restore the cable harness; if OK, replace the sensor

Warning light always on

Troubleshooting



- Disconnect the sensor connector and check the ground insulation of the purple cable: if there is continuity with the ground connection, restore the cable harness; if earth insulated, replace the switch. if the error remains, check oil pressure in the engine circuit with a pressure gauge

Neutral sensor

Function

it tell the gear position to the instrument panel: if it is in neutral or in gear.

Operation / Operating principle

for neutral gear, the circuit is closed to ground connection: the instrument panel turns on the neutral warning light.

Level in wiring diagram:start-up enabling switches

Location:

- sensor: rear / upper section of the gearbox
- connector: on the sensor

Electrical characteristics:

- Gear in neutral: closed circuit (0 V on wire from instrument panel to sensor / switch in continuity).
- Gearshift: open circuit (12 V on wire from instrument panel to sensor) / open switch, infinite resistance

Pin-out:

1. Voltage 12V

DIAGNOSIS

NEUTRAL warning light always off: check black-green/brown cable (cable harness side): if it is no OK, restore cable harness; if it is OK, disconnect the connector and check, with gear in neutral, the continuity between the ground connection and the terminal on the sensor side: if there is not continuity, replace sensor (after checking cable harness continuity on the sensor side and correct mechanic position); if there is continuity, check continuity of the black-brown/green cable between sensor connector and main injection relay: if there is not continuity, restore the cable harness; if there is continuity, replace instrument panel if the vehicle operation is correct.

NEUTRAL warning light always on: disconnect the terminals from the sensor and check if there is continuity between the ground connection and the PIN towards the sensor, with gear engaged: if there is continuity, replace the sensor; if it is earth insulated, it means that the black-brown/green cable from the sensor PIN to the main injection relay is shorted to ground: restore the cable harness

Clutch lever sensor

Function

It tells the clutch lever position to the control unit.

Operation / Operating principle

To start-up the engine, pull the clutch with gear in neutral.

Level in wiring diagram: Start-up enabling switches.

Location:

- sensor: under clutch lever
- connector: under the fuel tank

Electrical characteristics:

- Clutch pulled: closed circuit (continuity)
- Clutch released: open circuit (infinite resistance)

Pin-out:

1. Ground connection
2. Voltage 12V

DIAGNOSIS

- Although the clutch lever is operated, the vehicle does not start. Check that if the gear is engaged, the stand is retracted; if it is OK, check continuity of the brown/green cable between the sensor connector (cable harness side) and the main injection relay: if still there is no continuity, restore the cable harness; if there is continuity, disconnect the sensor connector and check, with clutch pulled, if there is continuity between the 2 PIN of the connector on the sensor side. If there is not continuity, replace sensor; if there is continuity, check continuity of the purple cable between sensor (cable harness side) and start-up relay; otherwise, restore the cable harness.
- The vehicle starts without pulling the clutch lever: disconnect the terminals from the sensor and check if the released clutch sensor has continuity between the 2 PINS; if there is continuity, replace the sensor; if there is not continuity, it means that the purple cable from the sensor PIN to the start-up relay is shorted to ground.

Side stand sensor**Function**

It tells the side stand position to the control unit.

Operation / Operating principle

If the gear is engaged and the side stand is unfolded, and therefore the circuit is open, the control unit does not enable vehicle start-up or shuts off the engine if it is rotating.

Level in wiring diagram: start-up enabling switches

Location:

- sensor: on side stand supporting plate
- connector: left side, near the starter motor

Electrical characteristics:

- Side Stand Up: closed circuit (continuity)
- Side Stand Down: open circuit (infinite resistance)

Pin-out:

- Blue (cable harness side): Ground connection
- Green/brown (cable harness side): voltage 12V

DIAGNOSIS

- The vehicle with clutch pulled, gear engaged and side stand retracted does not start (side stand switch always open): check continuity of the green/brown cable between PIN 2 of diode 40 (wiring diagram) and the corresponding PIN of the sensor connector on the cable harness side. If there is not continuity, restore cable harness; if there is continuity, with side stand retracted, check continuity between the 2 PINS of the sensor. If there is not, replace the sensor; if there is continuity, check continuity to ground connection of the blue cable on the connector (cable harness side).
- The vehicle, with clutch operated and gear engaged, starts but with the side stand extended: disconnect the sensor connector and check that, with side stand extended, there is not continuity between the 2 PINS. If there is continuity, replace the sensor; if there is not continuity, disconnect diode 40 and check ground insulation of the green/brown cable between sensor and diode

Bank angle sensor**Function**

it tells the vehicle position to the control unit.

Operation / Operating principle

When the sensor is inverted, the circuit is closed to ground: when the Marelli control unit detects this ground, it deactivates the circuit of the fuel pump and the engine start-up circuit, via the injection relay.


Level in wiring diagram: Start-up enabling switches.

Location:

- under the saddle, rear section
- connector: near the sensor

Electrical characteristics:

- Sensor in vertical position: open circuit
(resistance: 62 kOhm)

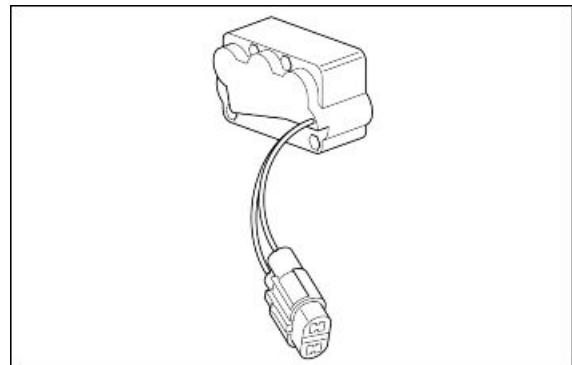

- Sensor inverted: closed circuit (resistance lower than 0.5 kOhm)

Pin-out:

- Pink/yellow (cable harness side): Voltage 12V
- Grey (cable harness side): ground connection

DIAGNOSIS

The vehicle starts, even if the sensor is inverted: disconnect the connector and, with sensor inverted, check if there is continuity between the two PINS of the sensor: if there is not continuity, replace the sensor; if there is, check the connector. If it is not OK, restore the cable harness; if it is OK, check ground connection continuity of the PIN marked by the grey cable on the cable harness side: if there is no continuity, restore the cable harness; if there is, with key set to ON, check if there is 12V voltage at the PIN marked by the red/yellow cable on the cable harness side. If there is not, check the PIN 16 of the Marelli control unit connector.

The vehicle does not start with the sensor in vertical position: disconnect the connector and check if there is continuity between the two PINS when the sensor is in vertical position: if there is continuity, replace the sensor; if there is not continuity, it means that, with key set to ON, there is not 12V voltage to the PIN marked by the pink/yellow cable: restore the cable harness whose pink/yellow cable will be shorted to ground

Air temperature sensor - instrument panel

Function

It tells the ambient air temperature to the instrument panel.

Operation / Operating principle

NTC type sensor (resistance sensor, inversely variable with temperature).


Level in wiring diagram: Temperature sensors

Location:

- under instrument panel supporting bracket
- connector: under the start-up lock

Electrical characteristics:

- Resistance at 0°C: 32.5 kOhm +/- 5%
- Resistance at 25°C: 10.0 kOhm +/- 5%

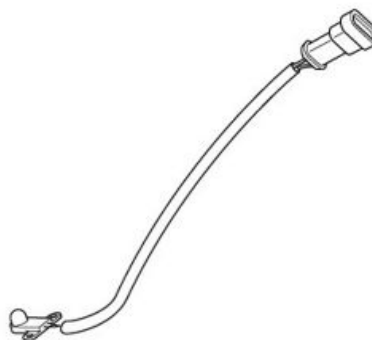

Pin-out:

1. Voltage 5V
2. Ground connection

DIAGNOSIS**"---" code that indicates an instrument panel error**

Air temperature sensor fault

Error cause

- An instrument panel temperature sensor failure is signalled when it is detected that the sensor circuit is open or shorted to positive/negative

Troubleshooting

- Check the sensor connector and the instrument panel connector (PIN 12): if it is not OK, restore; if it is OK, check the continuity of the pink cable between the sensor connector (cable harness side) and the PIN 12 of the instrument panel connector: if not OK, restore the cable harness; if OK, check the correct sensor resistance: if it is not OK, replace the sensor; if it is OK, with key set to ON, check if there is voltage at the sensor connector PIN 1: if there is no voltage, replace the instrument panel; if there is approximately 12V, restore the cable harness (there is a short circuit in the battery). If there is 5V voltage, connect a 10 kOhm resistance to PIN 1 of the sensor connector and to the vehicle ground connection: if, with key set to ON, the voltage measured upstream the resistance decreases, replace the instrument panel. If voltage continues to be approximately 5V, restore the pink cable (there is a short circuit at + 5V). In case there is a short circuit to ground connection of PIN 12 of the instrument panel connector: Check the earth insulation of the sensor connector pink cable: if there is a connection, restore the cable harness; if it is earth insulated, check that sensor resistance is correct: if not OK, replace the sensor; if it is OK, replace the instrument panel

RUN/STOP switch**Function**

It tells the control unit if the rider wishes to enable engine start-up or to keep the engine running.

Operation / Operating principle

If the driver wants to shut off the engine or to disable engine start-up, the switch should be open, i.e. the Marelli control unit should not detect voltage at PIN 26 of the control unit connector.

Level in electrical circuit diagram: start-up enabling switches.

Location:

- sensor: right light switch
- connector: next to the headstock, right side

Electrical characteristics:

- STOP position: the circuit is open
- RUN position: closed circuit (continuity)

PIN:

red/grey cable (watching the cable harness):

- voltage 0 V with engine kill in STOP;
- 12 V with engine kill in RUN.

Orange/red cable (cable harness side): always voltage 12 V (with key on)

DIAGNOSIS


- Engine does not start: disconnect the connector and with switch set to RUN, check if there is continuity between the two grey/light blue and red/green cables (sensor side): if there is not continuity, replace the sensor; if there is continuity, check the connector. If it is not OK, restore cable harness; if it is OK, with key set to ON, check that there is voltage on the orange/red cable (cable harness side); if there is no voltage, restore cable harness; if there is voltage, check earth insulation of the red/grey cable (cable harness side). If there is continuity with ground connection, restore the cable harness; if it is OK, set the key to KEY OFF and check the control unit connector; if it is OK, replace the Marelli control unit
- Engine does not shut off with switch in "STOP": disconnect the connector and with switch in STOP, check if there is continuity between the two grey/light blue and red/green cables (sensor side); if there is continuity, replace the switch; if there is not continuity, it means that, with KEY ON, the red/grey cable (between switch and main injection relay) and/or the grey/black cable (between main injection relay and Marelli control unit) are in shorted to positive: restore the cable harness. If cable harness is OK, replace the Marelli control unit

Connectors

ECU

PIN:

1. Throttle position sensor supply - Power output
2. Lambda probe signal (ground) - Analogue input
3. Rpm indicator control - Frequency output
4. Cylinder head temperature sensor signal - Analogue input
5. -
6. Right injector control - Power output

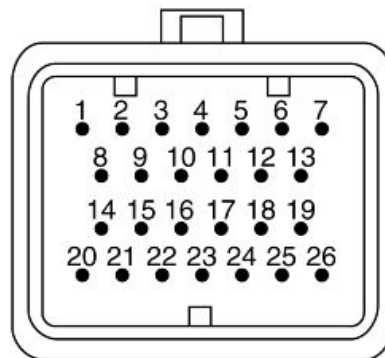


7. Engine revolution sensor - Frequency input
8. Lambda probe signal (positive) - Analogue input
9. Diagnosis line (K) - Communication line
10. Diagnosis line (L) - Communication line
11. Throttle position signal - Analogue input
12. Engine revolution sensor - Frequency input
13. Right injector control - Power output
14. Right coil control - Power output
15. Injection telltale light control - Digital output
16. Fall sensor signal - Digital input
17. Control unit supply - Power input
18. Intake air temperature sensor signal - Analogue input
19. Injection relay control - Digital output
20. Left coil control - Power output
21. -
22. Sensors supply (ground) - Power output
23. Control unit supply (ground) - Power input
24. Control unit supply (ground) - Power input
25. -
26. Control unit supply (+15) - Power input

Dashboard

PIN:

1. Right arrow input
2. Set rework input
3. High-beam lights input
4. n.c.
5. n.c.
6. Rear left arrow output
7. Front left arrow output
8. EFI input
9. Left arrow input
10. Neutral input
11. Oil input
12. Air temperature input

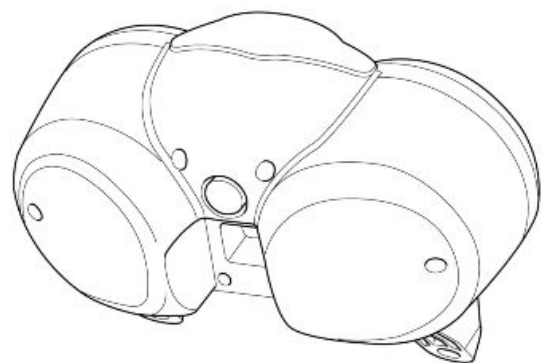

13.Speed sensor power supply

14.Ground connection

15.K Line

16.n.c.

17.Speed input

18.Engine revs input

19.n.c.

20.Reserve input

21.Key

22.Ground connection

23.Battery

24.Front right arrow output

25.Rear right arrow output

26.Battery

INDEX OF TOPICS

ENGINE FROM VEHICLE


ENG VE

Vehicle preparation

- Before removing the engine block, remove the fuel tank, the battery, the exhaust pipes, the shock absorbers and the rear wheel.
 - Disconnect the speed sensor connection and slide off the cable from the cable harness.
-
- Remove the swingarm and the bevel gear pair.



Removing the engine from the vehicle

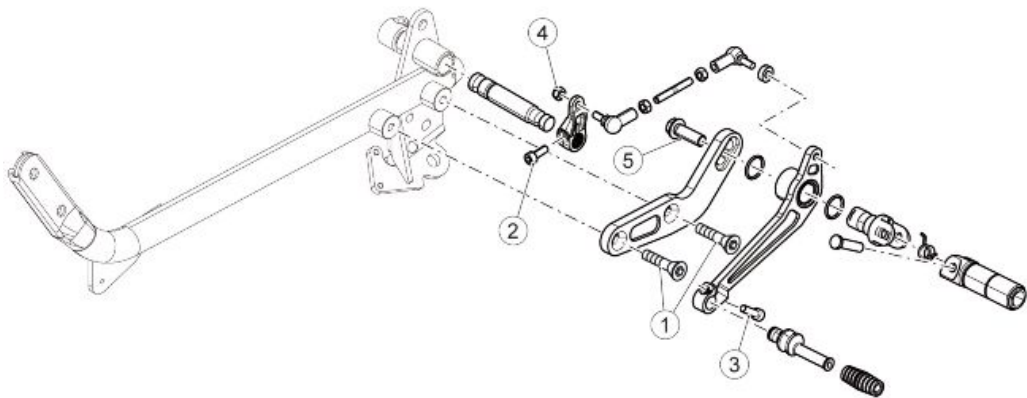

GEAR SHIFT					
pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening left hand rider foot-rest mounting plate to cradle	M8x20	2	25 Nm (18.44 lb ft)	Loctite 243

pos.	Description	Type	Quantity	Torque	Notes
2	Preselector lever fixing screw	M6x20	1	10 Nm (7.37 lb ft)	-
3	Gearbox lever fixing screws	M6x20	1	10 Nm (7.37 lb ft)	Loctite 243
4	Gearbox control rod fixing nut	M6x1	1	10 Nm (7.37 lb ft)	-
5	Screw fastening rider footrest mounting to plate	M8	1	20 Nm (14.75 lb ft)	Loctite 243

- Disconnect the electrical connections of the generator.



- Remove the revolution sensor but keep it connected to the cable harness.



- Slide the pin, with the split pin, fixing the linkage to the clutch to the engine block and then release the control cable.






- Remove the injectors lock and slide injectors off there seat on the inlet manifolds.



- Disconnect the spark plug cables from the coils and slide them off the chassis.



- Loosen the clamps on the intake manifold.

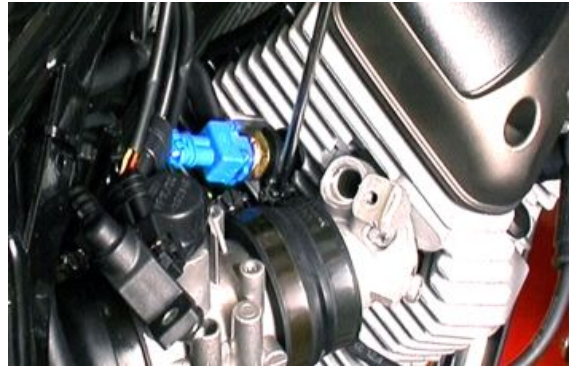

- Disconnect the oil breather pipe on the cylinder heads.



- Remove the connection of the engine temperature sensor.



- Disconnect the starter motor and the lambda probe.






- Open the clamp and disconnect the oil breather pipe of the air filter casing.



- Disconnect the neutral indicator.

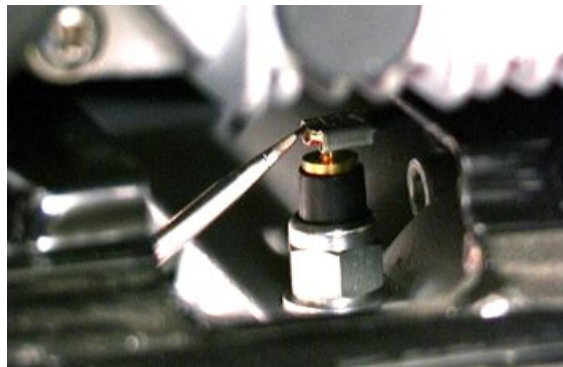

- Disconnect the connector of the side stand safety switch and slide off the cable harness from the chassis.



- Undo and remove the screw.
- Remove the gear transmission lever.



- Undo and remove the two right footrest screws, move the rear brake pedal that is still attached to the tank and to the calliper.



- Undo the screw fixing the ground eye-let on the engine block.




- Support the vehicle chassis by means of a hoister.
- Undo the four Allen head screws fixing the front arms of the chassis to the engine cradle.



- Remove the upper screws fixing the chassis to the gearbox cover.

-
- Remove the rod fixing the chassis to the gearbox .

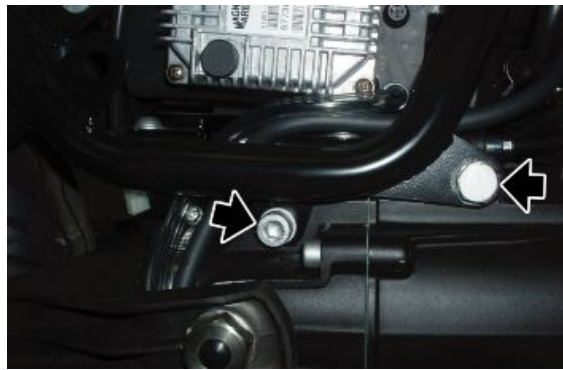


-
- Remove the engine: check that during the removal operation, the throttle body sleeves slide off the inlet manifold without getting damaged.



- Lower the engine checking that it gets correctly detached from the chassis.
-
- During this removal operation, disconnect the connection of the oil pressure transmitter.




Installing the engine to the vehicle

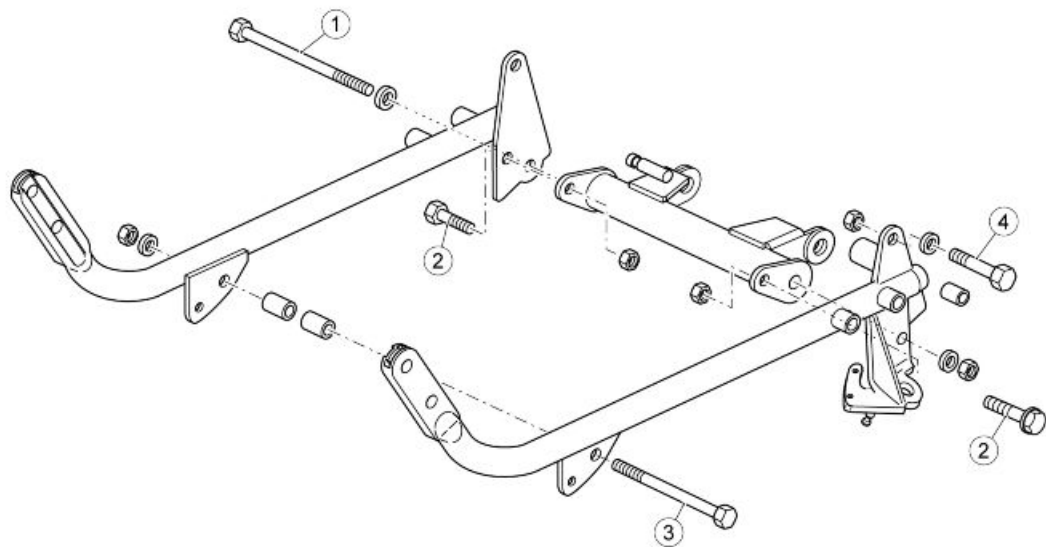

FRAME CRADLES


pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing stand beam to cradle	M10x260	1	50 Nm (36.88 lbf ft)	-
2	Screw fixing stand beam to cradle	M8	1+1	25 Nm (18.44 lbf ft)	-
3	Pin fixing engine/gearbox to chassis	M10x250	1	50 Nm (36.88 lbf ft)	-
4	Screw fastening cradle to frame	M10x65	2	50 Nm (36.88 lbf ft)	-

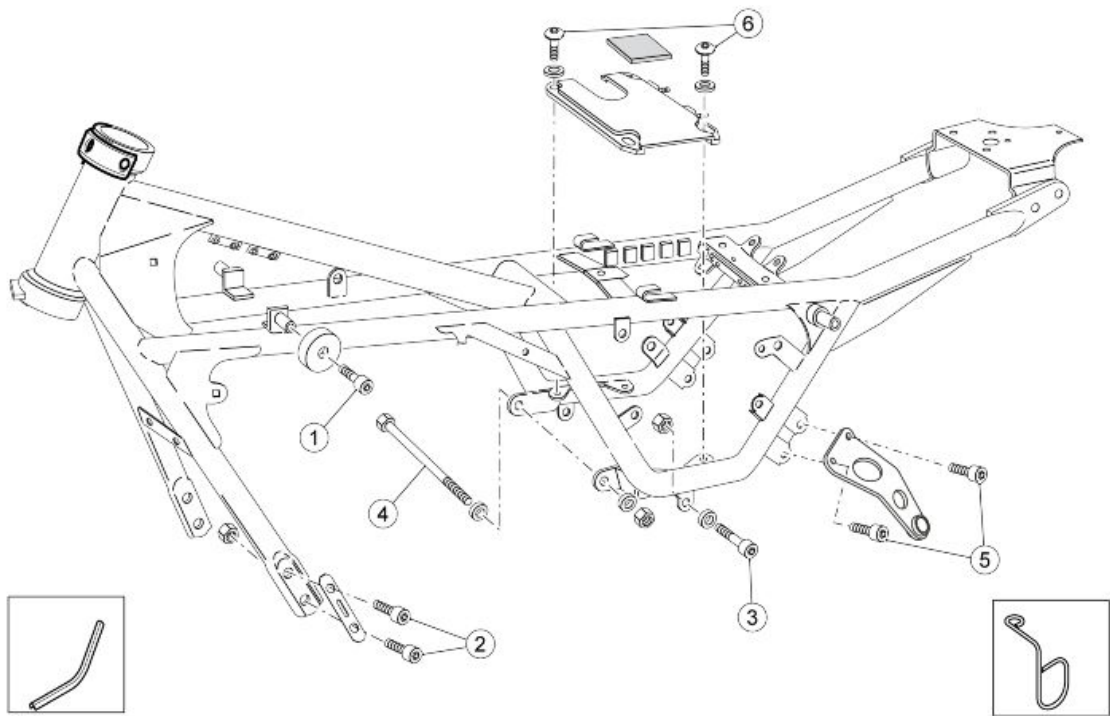

FRAME

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fixing tank mounting rubber blocks to frame	M8x14	2	25 Nm (18.44 lbf ft)	-
2	Cradle front fixing screw	M10x30	4	50 Nm (36.88 lbf ft)	-
3	Screw fastening gearbox to frame	M10x55	2	50 Nm (36.88 lbf ft)	-
4	Pin fixing engine/gearbox to chassis	M10x205	1	50 Nm (36.88 lbf ft)	-
5	Screw fixing exhaust silencer mounting to frame	M8x16	4	25 Nm (18.44 lbf ft)	Loctite 243
6	Battery supporting plate fixing screw	M8x16	4	25 Nm (18.44 lbf ft)	-

- Secure the vehicle chassis by fastening it with a hoister and lift the engine to place it in its position.
- During this operation, connect again the oil pressure transmitter connection and check that the throttle body sleeves are inserted correctly on the intake manifolds.

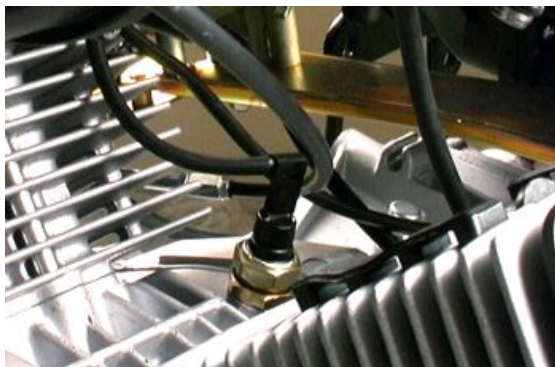

- With the engine in position, fit the rod fixing the chassis to the gearbox, tightening it to the prescribed torque.

- Tighten to the prescribed torque the upper screws fixing the chassis to the gearbox cover.



- Fasten the chassis front arms to the engine cradle using the four Allen head screws. Tighten them to the prescribed torque.




- Fit the screw fixing the ground eyelet on the engine block.



- Restore the connection of the side stand safety switch.



- Connect the neutral indicator.

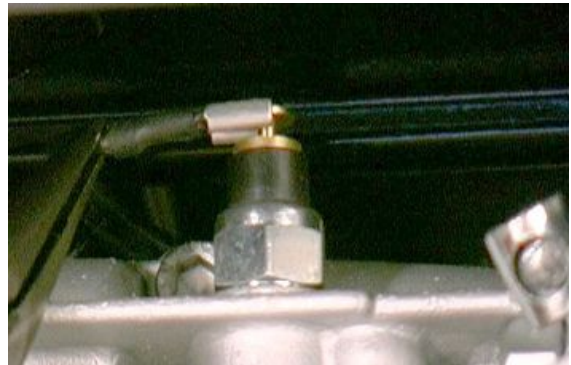

- Insert the oil breather pipe in the air filter casing and lock it with the corresponding clamp.



- Connect the starter motor and the lambda probe.




- Restore the connection of the engine temperature sensor.



- Insert the breather pipes on the cylinder heads and lock them with the specific clamps.



- Tighten the clamps on the intake manifold.

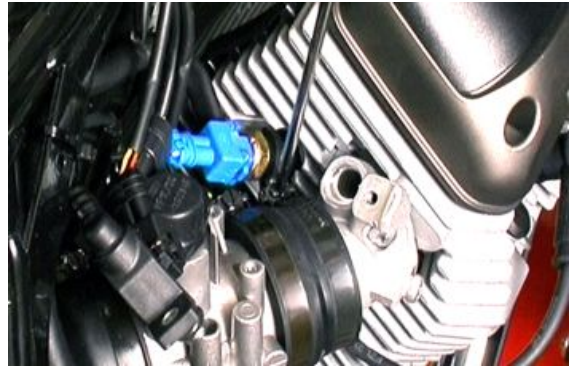

- Insert the injectors in their positions and fit the locking ring, tightening the screw to the prescribed torque.




- Connect the spark plug cables on the ignition coils.




- Place the clutch linkage and insert the pin on the engine block, locking it with the corresponding split pin.



- Refit the swingarm and the bevel gear pair.

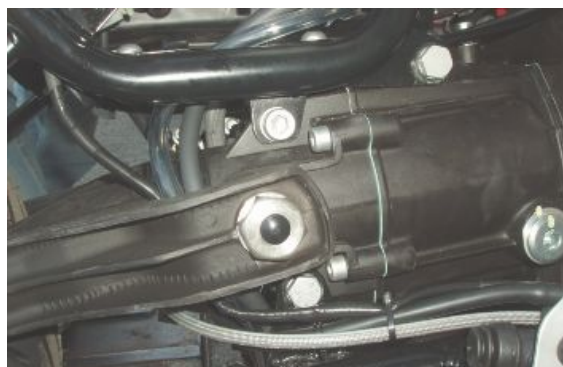

- Fit the revolution sensor by tightening the screws to the prescribed torque.

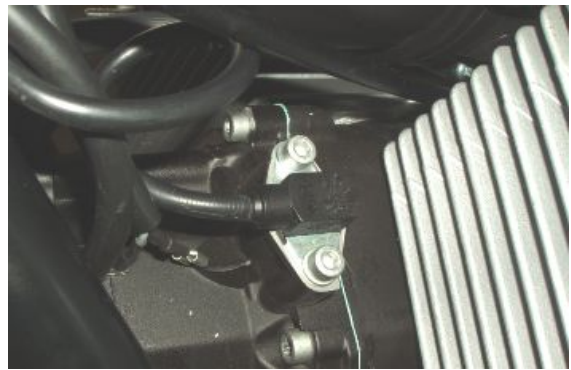

- Restore the electrical connections of the generator.




- Restore the connection of the vehicle speed sensor.



INDEX OF TOPICS

POWER SUPPLY


P SUPP

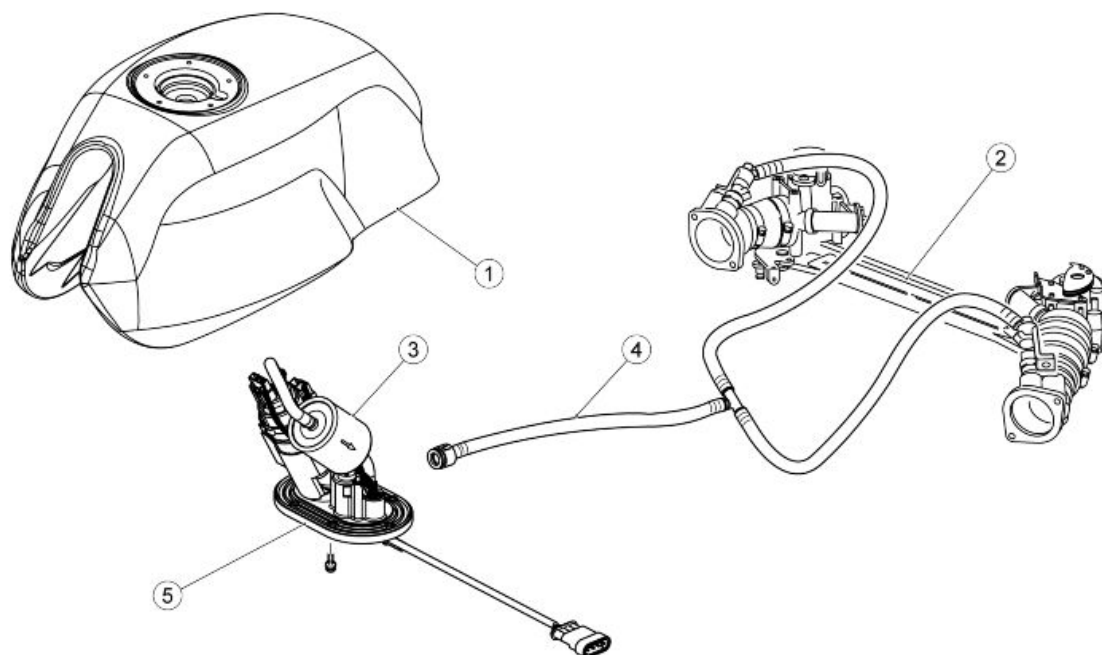Circuit diagram**Key:**

- 1. Fuel tank
- 2. Throttle body
- 3. Fuel filter
- 4. Fuel delivery pipe
- 5. Fuel pump unit

Injection

Diagram

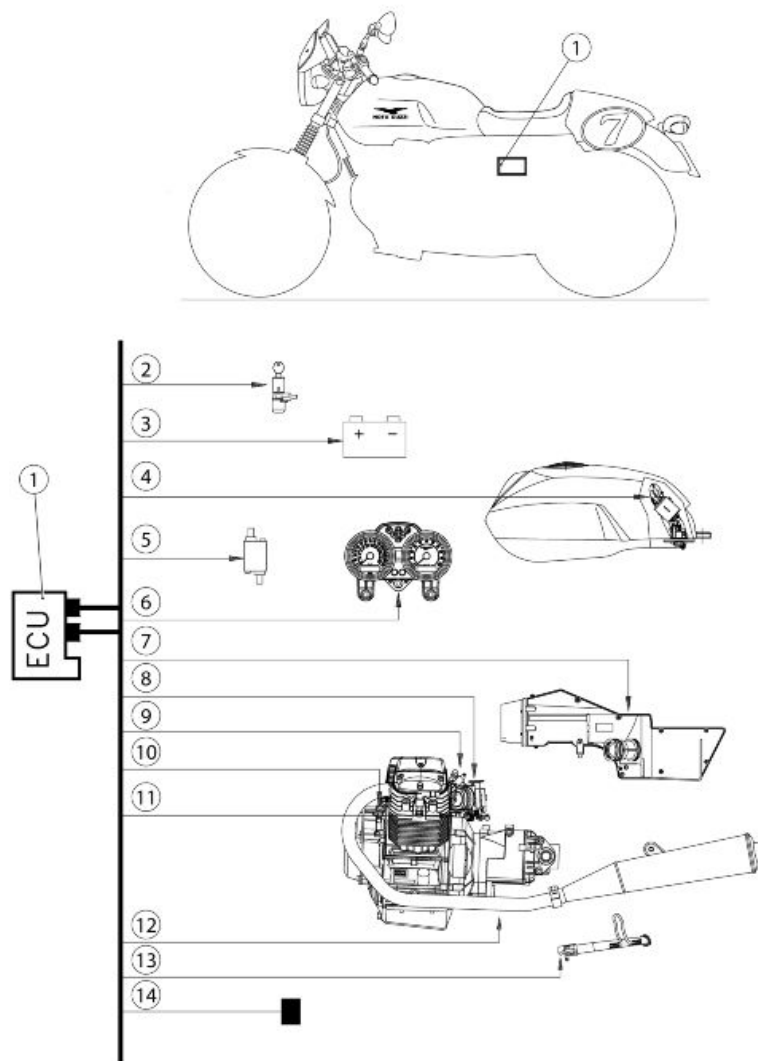**Key:**

1. Control unit position
2. Ignition switch
3. Battery
4. Fuel pump
5. Coils
6. Instrument panel
7. Air temperature sensor
8. Throttle valve position sensor
9. Injectors
10. Crankshaft position sensor
11. Engine temperature sensor
12. Lambda Probe

13. Fall sensor

14. Side stand

Cylinders synchronisation

- With engine off, connect the Navigator tool to the diagnosis connector and to the vehicle battery.



- Turn on the scanner.
- Screw the joints connecting the vacuumeter pipes on the intake pipe holes.
- Connect the vacuumeter pipes to the relative joints.



- Place the Navigator on the adjustment screen page.
- Make sure the throttle valve is fully in.
- Autodetect the throttle position.
- Turn the key to "OFF" and leave it for at least 30 seconds.




DO NOT TOUCH THE THROTTLE ABUTMENT SCREW OR THE THROTTLE BODY MUST BE REPLACED. CHECK THAT THE THROTTLE RETURN CABLE IS NOT TAUT.


- Start the engine.
- Take the engine to the prescribed temperature: 50 °C (122 °F).
- Completely close the two by-pass screws on the throttle bodies.



- Take the engine to an out-of-idle speed: 2000 - 3000 rpm.
- Check cylinder compensation on the vacuumometer.

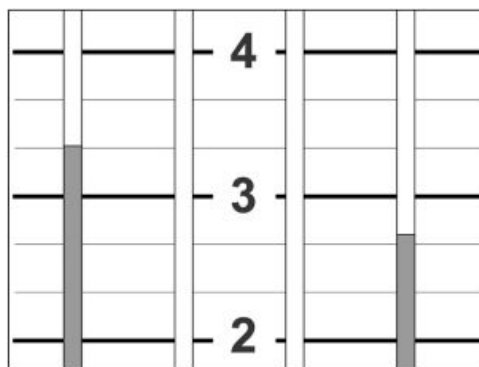

- To correct compensation use the set screw of the control rod of the throttle bodies, on the left side of the vehicle, until cylinders are compensated.

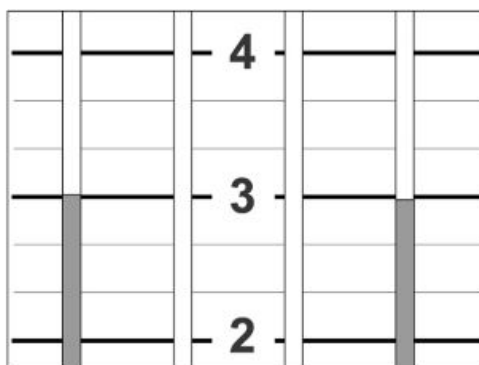

Now, it is necessary to adjust idle speed:

- Take the engine to the prescribed temperature: 70 - 80°C (158 - 176 °F).
- Operating the by-pass screws, adjust idle: 1100 ± 50 rpm.

Co rate adjustment

It is not possible to adjust CO (time of injectors opening) but just resetting the self-adjustable parameters in case the throttle body is replaced because it is worn.

ECU INFO screen page

This screen page shows general data regarding the control unit, for example software type, mapping, control unit programming date



INFO ECU SCREEN PAGE

Specification	Desc./Quantity
Mapping	-

PARAMETERS screen page

This screen page shows the parameters measured by the several sensors (engine revs, engine temperature, etc.) or values set by the control unit (injection time, ignition advance, etc.)



ENGINE PARAMETER READING SCREEN PAGE

Specification	Desc./Quantity
Throttle	Value corresponding to the throttle when closed (approximate value between 4.5 and 4.9°) (left throttle supported by the end of stroke screw). If a different value is read, it is necessary to activate the parameter "Throttle positioner autodetection" and obtain this value.
TPS Trimmer	Supplementary parameter related to throttle keying in calibration.
Precise throttle position	Throttle opening angle in degrees: once the throttle position self-learning is carried out, it falls within the following value range: $3.1^{\circ} \pm 0.4^{\circ}$.
Lambda Probe	300 - 3000 mV (approximate values). Signal when energised that the control unit receives from the lambda probe: inversely proportional to the presence of oxygen.
Lambda integrator	When the control unit uses the lambda probe signal (see the 'Lambda' parameter on the 'Device status' display) this value should be close to 0%
Partial load self-adjustment	Supplementary correction factor for the injection time, in out-of-idle condition.
Idle check self-adjustment	Supplementary correction factor for the injection time, in idle condition.
Rich multiplicative correction	Multiplicative correction factor for the injection time.
Not synchronised timing of a tooth	Number of engine timing steps during which the revolution timing sensor has lost the signal of a tooth.

Specification	Desc./Quantity
Higher not synchronised timing of a tooth	Number of engine timing steps during which the revolution timing sensor has lost the signal of more than one tooth.
Engine rpm	Engine revolutions per minute: the minimum value is set by the control unit cannot be adjusted
Injection time	- ms
Ignition advance	- °
Atmospheric pressure	1015 mPa (approximate values) The sensor is inside the instrument panel
Air temperature	°C Temperature of the air taken in by the engine, measured by the sensor in the filter casing. This is not the temperature indicated by the instrument panel
Engine temperature	°C
Battery voltage	V

STATUS screen page

This screen page shows the status (usually ON/OFF) of the vehicle devices or the operation condition of some vehicle systems (for example, lambda probe functioning status).



DEVICE STATUS

Specification	Desc./Quantity
Engine status	ON/run/power-latch/stopped operation conditions
RPM sensor	Synchronised / Not synchronised.
Throttle position	Released / pressed indicates if the throttle potentiometer is open or closed
Lambda	Open loop / Closed loop Indicates if the control unit is using (CLOSED) the lambda probe signal to keep the stoichiometric combustion. At idle CLOSED only if: Air T over 20°C (68°F) and engine T over 30°C (86°F) and engine on for at least 2-3 minutes

ACTIVATION screen page

This screen page is used to delete errors in the control unit memory and to activate some systems controlled by the control unit.



DEVICES ACTIVATION

Specification	Desc./Quantity
Error clearing	By pressing the 'enter' button, the stored errors (MEM) become part of the historical data (STO). In the next connection between the Navigator and the control unit, the historical errors (STO) are no longer shown
Fuel pump	Operation for 30"
Left coil	operation for 2.5 m, 5 times
Right coil	operation for 2.5 m, 5 times
Rpm indicator	Control at 125 Hz (3750 rpm) for 2 seconds.
Left injector	Operation for 2 ms per second for 5 times.
Right injector	Operation for 2 ms per second for 5 times.

ERRORS screen page

This screen page shows potential errors detected in the vehicle (ATT) or stored in the control unit (MEM) and it allows to check error clearing (STO).



ERRORS DISPLAY

Specification	Desc./Quantity
Engine temperature	Possible short circuit in the earth lead, battery or open circuit.
Left coil	Possible short circuit in the earth lead, battery or open circuit. If both coils do not work, the engine does not work.
Right coil	Possible short circuit in the earth lead, battery or open circuit. If both coils do not work, the engine does not work.
Left injector	Possible short circuit in the earth lead, battery or open circuit. If both injectors do not work, the engine does not work
Right injector	Possible short circuit in the earth lead, battery or open circuit. If both injectors do not work, the engine does not work
Lambda Probe	Possible short circuit in the earth lead, battery or open circuit.
Air temperature	Possible short circuit in the earth lead, battery or open circuit.
Throttle	Possible short circuit in the earth lead, battery or open circuit.
Pressure	Possible short circuit in the earth lead, battery or open circuit.
Battery voltage	Battery voltage detected is too low (7V) or too high (16V) for a certain period
Fuel pump relay	Possible short circuit in the earth lead, battery or open circuit: the engine does not start.
Self-adjustable parameters	-
RAM memory	Possible internal control unit error. Also check the control unit supply and earth connections
ROM memory	Possible internal control unit error. Also check the control unit supply and earth connections
Checksum EPROM	Possible internal control unit error. Also check the control unit supply and earth connections
Microprocessor	Possible internal control unit error. Also check the control unit supply and earth connections
RPM sensor	-

SETTINGS screen page

This screen page is used to adjust some control unit parameters.



ADJUSTABLE PARAMETERS


Specification	Desc./Quantity
Throttle positioner autodetection	Allows the control unit to detect the closed throttle position: just press the enter button
Self-adjustable parameters reset	<p>Reset the self-adjustable parameters of the lambda check when important parts of engine (valves, cylinder, camshaft), exhaust system, control unit, supply system and lambda probe should be replaced.</p> <p>The three self-adjustable correction factors of the lambda check related to the injection time are reset electronically.</p>

INDEX OF TOPICS

SUSPENSIONS

SUSP

Front

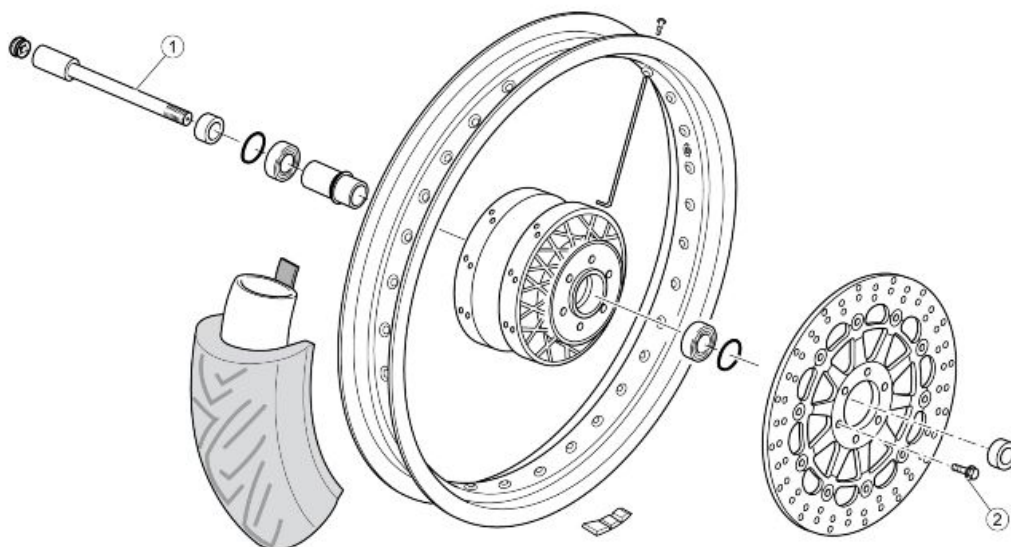

FRONT WHEEL

pos.	Description	Type	Quantity	Torque	Notes
1	Front wheel axle	M18x1.5	1	80 Nm (59.00 lbf ft)	-
2	Front brake disc fixing screw	M8x20	6	25 Nm (18.44 lbf ft)	Loctite 243


Removing the front wheel

- Place the vehicle on a stable support so that the front wheel does not touch the ground.
- Remove the brake calliper without disconnecting the oil pipes



- Remove the front wheel.



Handlebar

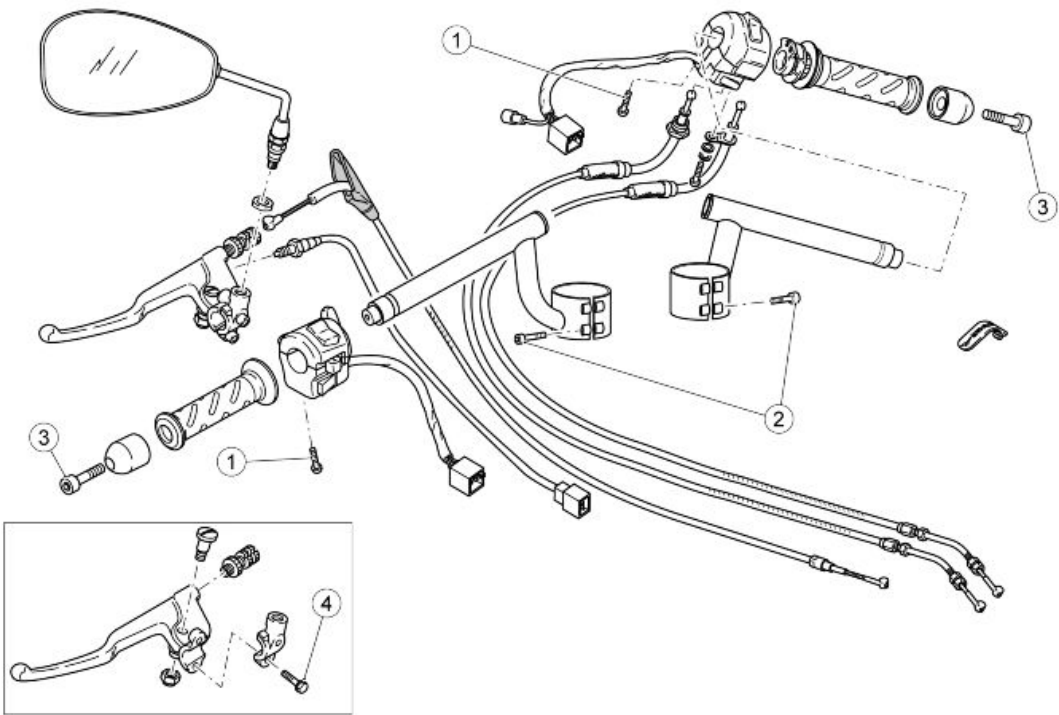

HANDLEBAR AND CONTROLS

Pos.	Description	Type	Quantity	Torque	Notes
1	Switch fastener screw	M5	1+1	1.5 Nm (1.11 lb ft)	Tighten using a 1-2-1 sequence
2	Semi-handlebar fixing screw	M6x25	4	10 Nm (7.37 lb ft)	Tighten using a 1-2-1 sequence
3	Counterweight fixing screw	M6	2	10 Nm (7.37 lb ft)	Loctite 243
4	Screw fastening the clutch control U-bolt to the semi-handlebar	M6x25	2	10 Nm (7.37 lb ft)	Tighten using a 1-2-1 sequence

Front fork

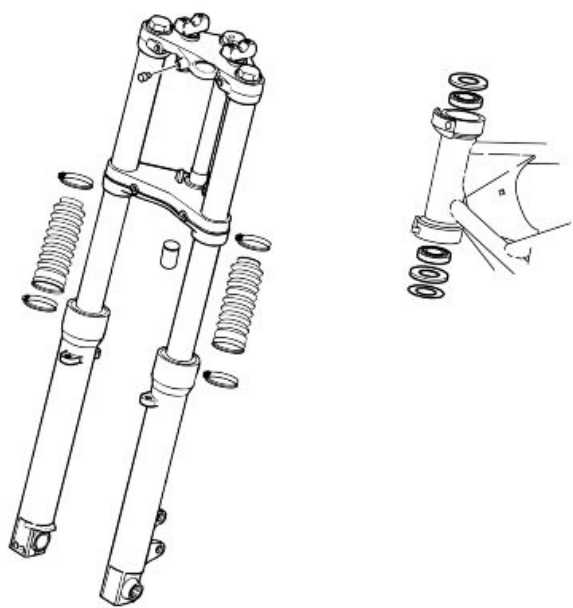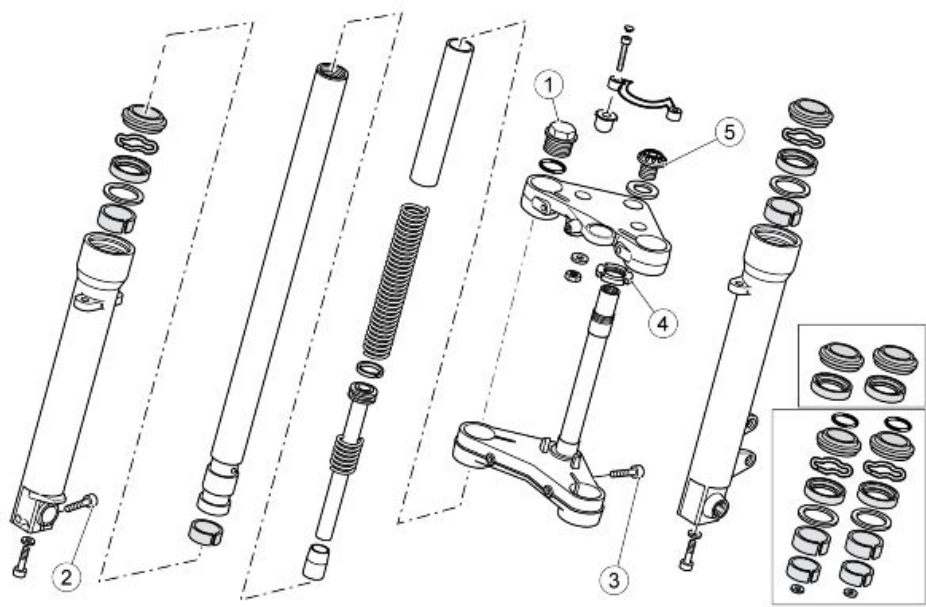


FRONT SUSPENSION - STEERING

pos.	Description	Type	Quantity	Torque	Notes
1	Stanchion cap	-	2	50 Nm (36.88 lbf ft)	-
2	Screw fixing wheel axle to right fork leg	M6x30	2	10 Nm (7.37 lbf ft)	Tighten using a 1-2-1 sequence
3	Screw fixing stanchions to upper and lower plate	M10x40	4	50 Nm (36.88 lbf ft)	-
4	Headstock ring nut	M25x1	1	7 Nm (5.16 lbf ft)	The fork must fall to one side by itself

pos.	Description	Type	Quantity	Torque	Notes
5	Headstock bushing	M23x1	1	50 Nm (36.88 lbf ft)	-

Diagram

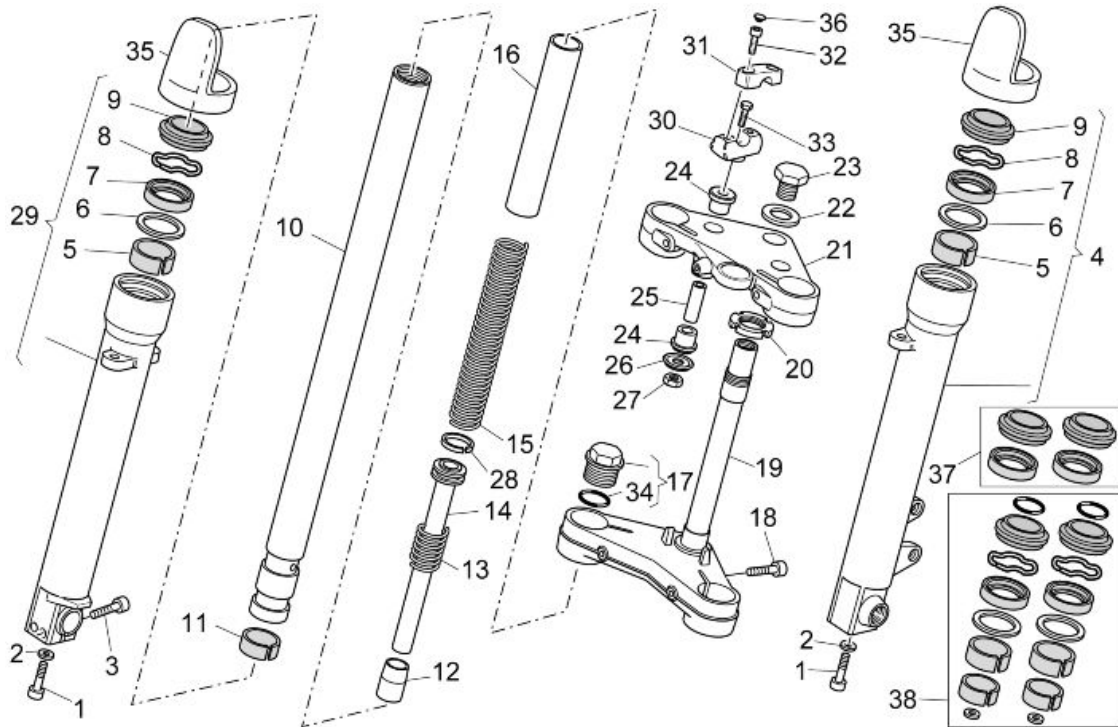

Key:

1. Screw
2. Washer
3. Screw
4. Complete left sleeve
5. Upper bushing
6. Washer
7. Sealing ring
8. Snap ring
9. Dust guard
10. Stem
11. Lower bushing
12. Buffer
13. Counter spring
14. Complete pumping member
15. Spring
16. Pipe
17. Complete cap

- 18.Screw
- 19.Base with headstock
- 20.Ring nut
- 21.Fork upper plate
- 22.Washer
- 23.Nut
- 24.Rubber ring
- 25.Spacer
- 26.Cap
- 27.Nut
- 28.Ring
- 29.Complete right sleeve
- 30.Lower U-bolt
- 31.Upper U-bolt
- 32.Screw
- 33.Screw
- 34.O-ring
- 35.Stem protection
- 36.Chrome-plated cap
- 37.Gasket kit
- 38.Oil seal kit

Removing the fork legs

NOTE



PAY ATTENTION TO THE TYPE OF FORK FITTED DURING REMOVAL AND FITTING. TWO DIFFERENT SUPPLIES CAN BE FOUND ON THIS MOTORCYCLE, MARZOCCHI OR KAIFA. TO DISTINGUISH BETWEEN THEM IT IS NECESSARY TO PROCEED WITH THE REMOVAL. THE MARZOCCHI FORK, UNLIKE THE KAIFA ONE IS EQUIPPED WITH A WASHER ABOVE THE PRELOAD TUBE AND A SHIM HOUSED BELOW.



The vehicle is equipped with a non adjustable fork. The operations described below are valid for both stanchions.

CAUTION

DURING THE OPERATIONS DESCRIBED BELOW, THE STANCHIONS AND THEIR INTERNAL COMPONENTS SHOULD BE TIGHTENED ON A VICE. MAKE SURE NOT TO DAMAGE THEM BY OVERTIGHTENING; ALWAYS USE ALUMINIUM JAW CAPS.

- Remove the front wheel.

- Remove the front mudguard.



-
- Undo and remove the two screws and collect the washers.



- Move the instrument panel forwards.

-
- Undo the upper sealing screw.



-
- Undo the lower sealing screw.




- Slide off the stem downwards by turning it slightly first in one direction then to the opposite direction.

Draining oil

To drain out the oil follow these steps.

- Remove the stanchion.
- Tighten the removed stanchion in a vice fitted with aluminium jaw caps in order to avoid damaging them.

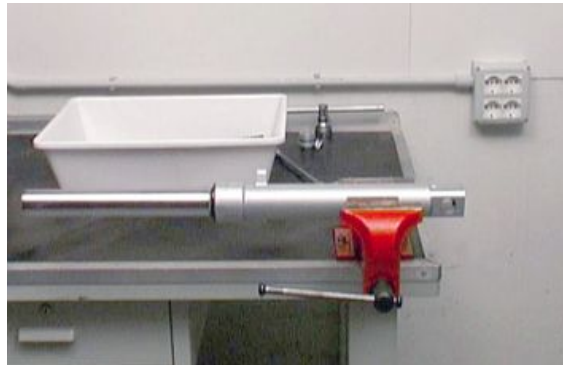

- Unscrew the upper closing cap. Pay attention to the possible thrust that the spring can cause to the loosened cap.



KAIFA FORK PROCEDURE

- Be careful not to damage the O-Ring during extraction.
- Press the bearing tube inside the wheel holder fork leg.
- Remove the preload tube and the spring.



MARZOCCHI FORK PROCEDURE

- Be careful not to damage the O-Ring during extraction.
- Remove the washer.
- Press the bearing tube inside the wheel holder fork leg.
- Remove the preload tube and the spring.



- Remove the shim.



- Drain out all the oil inside the stanchion.

NOTE

FOR EASY DRAINAGE OF THE OIL INSIDE THE PISTON ROD, PRESS THE STANCHION IN THE WHEEL HOLDER SLEEVE TO PUMP OIL OUT.



- Carefully check each part of the stanchion and make sure that there are no damaged elements.
- If there are no damaged or worn elements, refit the stanchion; otherwise, replace the damaged elements.

NOTE

FOR EASY DRAINAGE OF THE OIL INSIDE THE PISTON ROD, PRESS THE STANCHION IN THE WHEEL HOLDER SLEEVE TO PUMP OIL OUT.



Disassembling the fork

- Drain all the oil from the stem.
- Block the wheel holder fork leg on the vice.
- Undo the bottom screw and remove it with the corresponding gasket.



- Remove the dust scraper using a screwdriver as a lever.

CAUTION

BE CAREFUL NOT TO DAMAGE THE FORK LEG RIM AND THE DUST SCRAPER.



- Slide the dust scraper off and upwards.



- Remove the locking ring inside the fork leg using a thin screwdriver.

CAUTION

BE CAREFUL NOT TO DAMAGE THE FORK LEG RIM.



- Slide off the bearing tube from the wheel holder fork leg together with the sealing ring, the cap, the upper bushing and lower bushings.

NOTE

WHEN REMOVING THE PIPE FROM THE WHEEL HOLDER FORK LEG SOME PARTS MAY REMAIN INSIDE THE FORK LEG. IF THIS OCCURS, THESE PARTS MUST BE REMOVED AFTERWARDS, BEING CAREFUL NOT TO DAMAGE THE FORK LEG RIM AND THE UPPER BUSHING SEAT



Checking the components

- Check every component removed from the fork leg, specially: the sealing ring and the dust guard as they are elements that guarantee sealing; replace them if some of them are damaged.
- Check the bushing on the bearing tube; remove it and replace it if damaged or worn.
- Slide off the pumping member unit from the holding tube; if it is damaged, replace the counter spring and the ring.



Reassembling the fork


CAUTION

ALL COMPONENTS MUST BE CAREFULLY WASHED AND DRIED WITH COMPRESSED AIR BEFORE REFITTING.

- Carry out any necessary service operation.
- Insert the pumping member unit with the counter spring and the ring in the bearing tube.



-
- Check that the upper guide bushing is fitted on the wheel holder fork leg.

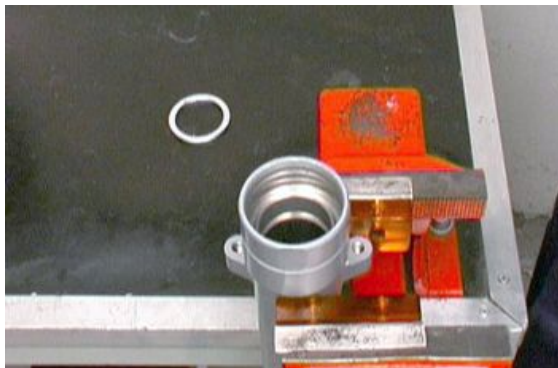

-
- Insert the lower sliding bushing in its seat on the bearing tube.




-
- Reassemble the bearing tube in the wheel holder fork leg.



-
- Insert the bearing tube in the wheel holder and push it until it stops.



- Screw the bottom screw and tighten it to the prescribed torque.

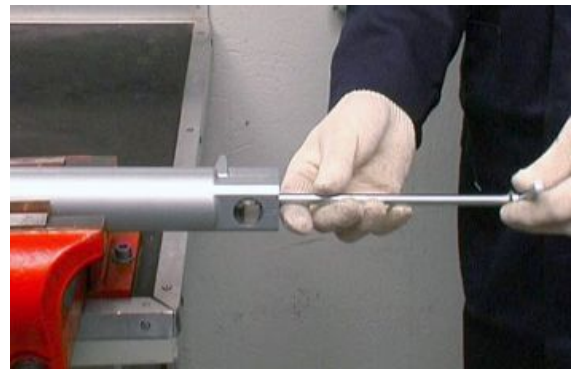

- Insert the cap and the well-lubricated sealing ring on the bearing tube.
- Use a suitable inserting tool to push the sealing ring in the fork leg until it stops.



- Fit the locking ring.




- Fit the dust scraper.
- Pour oil into the bearing tube so that it also fills the internal grooves of the pumping member rod.
- Pump with the bearing tube, making sure the oil has completely filled the pumping member rod.
- Introduce the spring and the preload tube.
- Place the cap on the bearing tube, taking care not to damage the O-ring. Then, tighten the cap to the prescribed torque.



Filling oil

- Place the sleeve upright in a vice fitted with protection jaws.
- Compress the sleeve in the stanchion.
- Pour part of the fork oil into the sleeve.
- Wait some minutes until the oil fills all the ducts.
- Pour the remaining oil.
- Pump out oil a few times.
- Measure the air gap between the oil level and the rim.

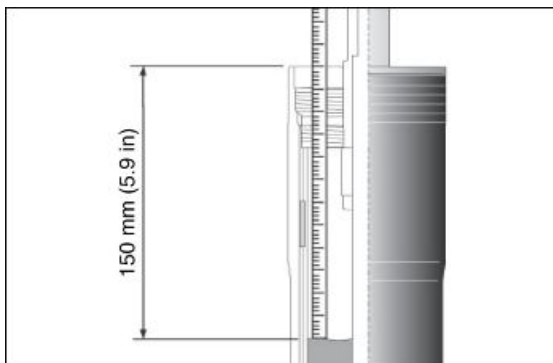

THE SLEEVE MUST BE PERFECTLY UPRIGHT IN ORDER TO MEASURE THE CORRECT OIL LEVEL. THE OIL LEVEL MUST BE THE SAME IN BOTH STANCHIONS.

Characteristic

Marzocchi Oil level (from the sleeve edge, without the spring and with stanchion to end of stroke)

150 mm (5.9 in)

Kaifa Oil level (from the sleeve edge, without the spring and with stanchion to end of stroke)

120 +/- 1.5 mm (4.72 +/- 0.06 in)

- Introduce the spring and the preload tube.





- Place the cap on the bearing tube, taking care not to damage the O-ring.



- Then, tighten the cap to the prescribed torque.



Installing the fork legs



- Insert the stem on the vehicle going through the lower plate and the upper plate.



- Tighten the screws to the prescribed torque.



Steering bearing

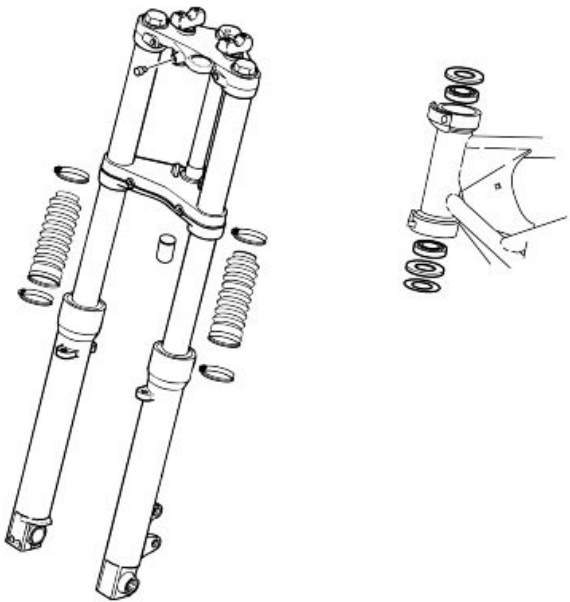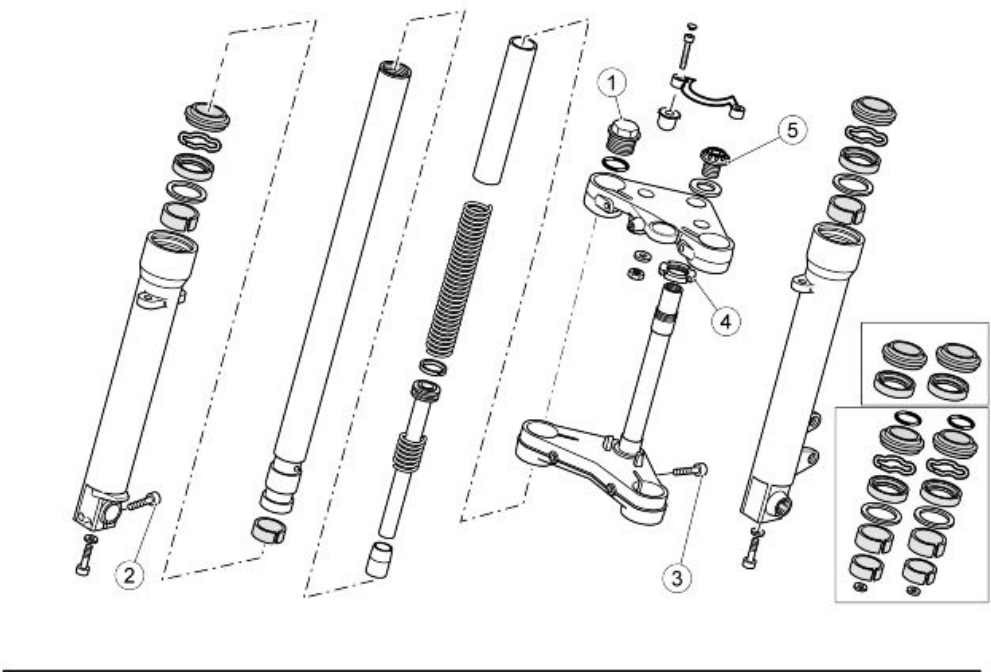

FRONT SUSPENSION - STEERING

pos.	Description	Type	Quantity	Torque	Notes
1	Stanchion cap	-	2	50 Nm (36.88 lbf ft)	-
2	Screw fixing wheel axle to right fork leg	M6x30	2	10 Nm (7.37 lbf ft)	Tighten using a 1-2-1 sequence
3	Screw fixing stanchions to upper and lower plate	M10x40	4	50 Nm (36.88 lbf ft)	-
4	Headstock ring nut	M25x1	1	7 Nm (5.16 lbf ft)	The fork must fall to one side by itself

pos.	Description	Type	Quantity	Torque	Notes
5	Headstock bushing	M23x1	1	50 Nm (36.88 lbf ft)	-

Adjusting play

- Undo and remove the screws and collect the U-bolt, holding the handlebar.
- Move the handlebar forward, be careful not to turn over the front brake fluid reservoir.
- Remove the instrument panel.



- Working from both sides, undo and remove the screw locking the upper plate to the front fork.



- Unscrew and remove the central nut.



- Remove the upper plate from the front fork.



- Adjust the ring nut.
- Fit the upper plate on the front fork.




- Tighten the central nut.



- Working from both sides, tighten the screw locking the upper plate to the front fork.
- Fit the handlebar.
- Fit the instrument panel.

Rear

Shock absorbers

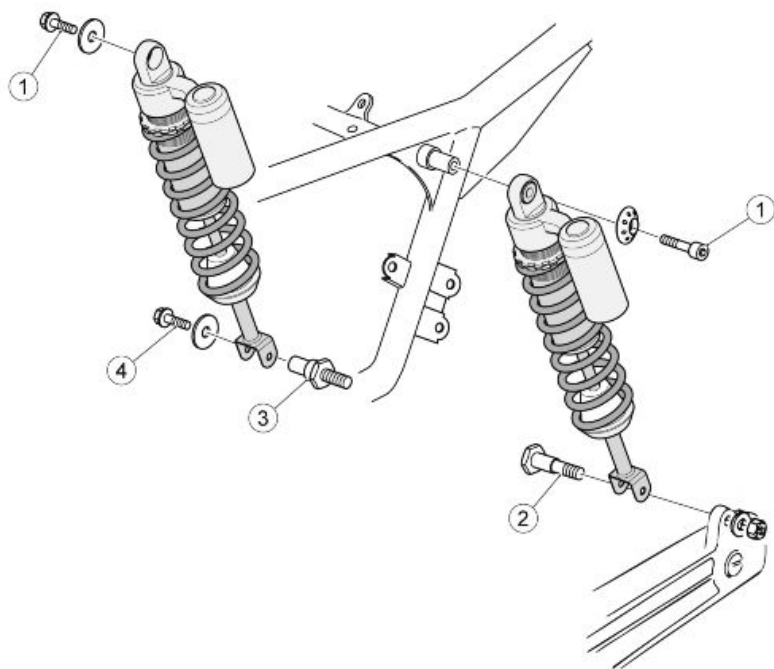

REAR SUSPENSION

pos.	Description	Type	Quantity	Torque	Notes
1	Upper screw fastening shock absorber to frame	M6x35	2	10 Nm (7.37 lbf ft)	Loctite 243
2	Lower pin fastening left shock absorber to swingarm	M10x1.5	1	35 Nm (25.81 lbf ft)	
3	Stud bolt fixing right shock absorber to rear box	M12x1.5	1	35 Nm (25.81 lbf ft)	-
4	Screw fastening right shock absorber to stud bolt	M6x16	1	10 Nm (7.37 lbf ft)	Loctite 243

Removing

- Undo and remove the upper screw.



- Undo and remove the lower screw.




INDEX OF TOPICS

CHASSIS


CHAS

Swinging arm

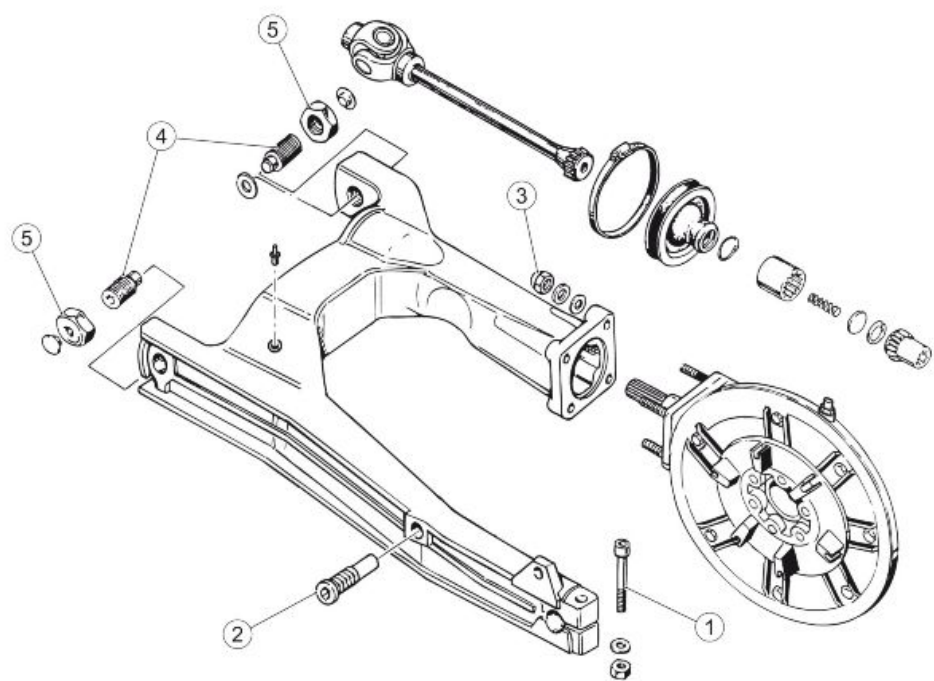

REAR TRANSMISSION - SWINGARM

pos.	Description	Type	Quantity	Torque	Notes
1	Swingarm clamp retaining screw	M10x45	1	30 Nm (22.13 lbf ft)	-
2	Pin fixing the rear calliper holding plate to swingarm	M16x1	1	25 Nm (18.44 lbf ft)	-
3	Nut fixing gearcase to swingarm	M8	4	25 Nm (18.44 lbf ft)	Hold the stud bolt
4	Pin fixing swingarm to gearbox	M20x1	2	-	Fully home with no preload
5	Lock nut on swingarm pin	M20x1	2	50 Nm (36.88 lbf ft)	Hold the pin

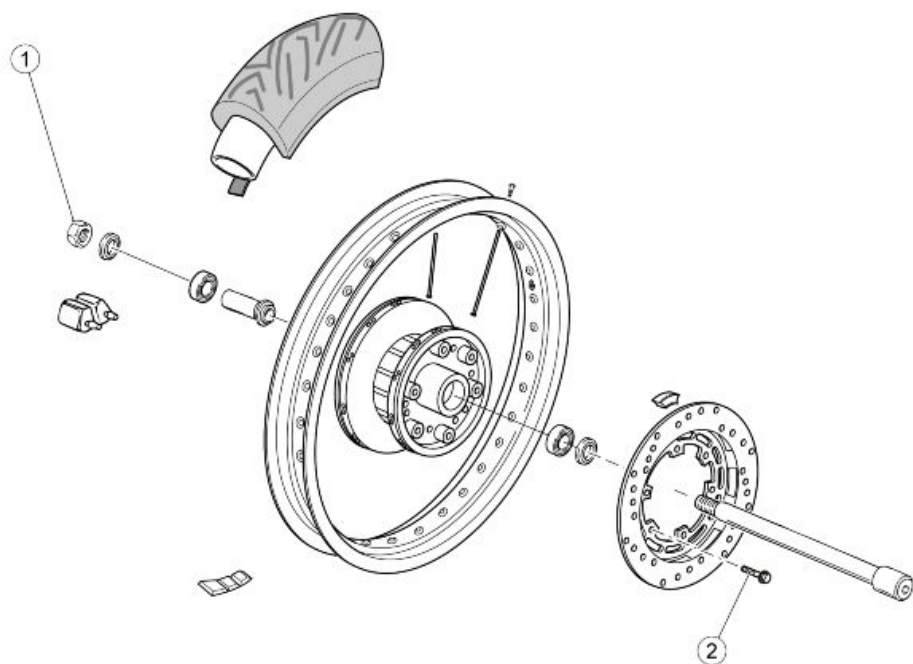

REAR WHEEL

pos.	Description	Type	Quantity	Torque	Notes
1	Rear wheel axle nut	M16x1.5	1	120 Nm (88.51 lb ft)	-
2	Rear brake disc fixing screw	M8x25	6	25 Nm (18.44 lb ft)	Loctite 243

Removing


- Remove the left silencer.



- Remove the rear calliper, releasing the brake pipe from the retainers on the swingarm.



- Unscrew and remove the fixing screw of the calliper holder.

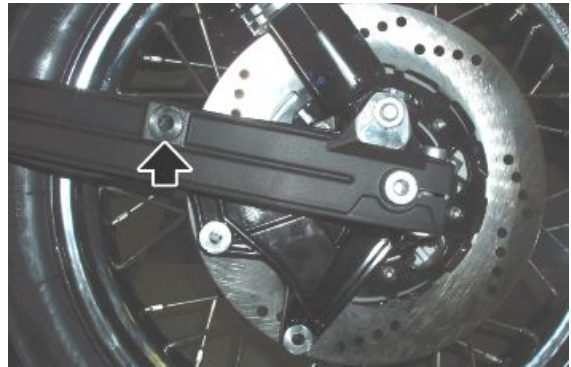

-
- Remove both rear suspensions.



- Unscrew and remove the nut and collect the washer.



- Loosen the wheel pin locking screw.



- Remove the wheel pin and collect the spacer.



- Remove the rear wheel.



- Unscrew the seal clamp.
- Lift the bellows.



- Unscrew the nuts.



- Loosen the pins so that the oscillating swingarm can be removed from the gearbox.



- Remove the shimming washer between the swingarm right arm and the gearbox.



Checking

- Check that the universal joint is not damaged, the gear teeth inserting in the sleeve grooves and the grooves on the joint are not deformed or damaged; otherwise, replace the joint.
- Check that the rubber bellows are not cut or pierced; otherwise, replace it.
- Check that the swingarm pin threads and the swingarm fixing nuts are not damaged, deformed or flattened; otherwise, replace them.
- Check that the sleeve grooves are not damaged, deformed or deteriorated; otherwise, replace the sleeve.
- Check that the spring is not deformed; otherwise, replace it.
- Check that the sealing ring (Seeger) is still flexible and is not deformed.
- Check that the sleeve outer toothing and internal grooves are not damaged.

Installing

- Insert the swingarm on the gearbox cover.
- Tighten thoroughly the pin on the left side until the shimming washer on the right side rests on the bearing fitted on the gearbox cover.



- Tighten thoroughly the pin on the right side, without locking it.
- Operate the swingarm and make sure it oscillates freely without clearance.



- Screw in the lock nuts on the pins, locking them thoroughly.



-
- Screw the clamp.



- Fit the rear wheel.



Bevel gears

Removing


- Undo the four nuts and collect the washers.




- Slide off the gearcase together with the swingarm.



- Slide off the sleeve from the pinion.
- Slide off the spring.
- Slide off the sealing ring.
- Slide off the base.

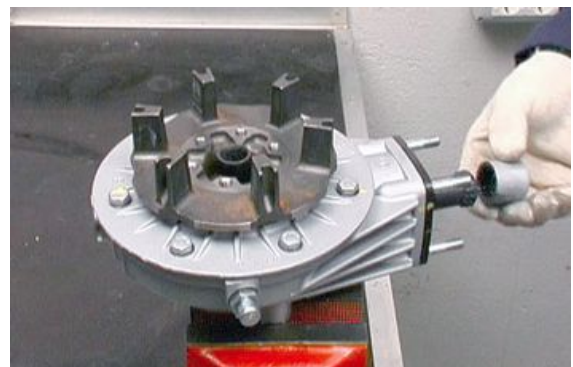


- Slide off the gear.

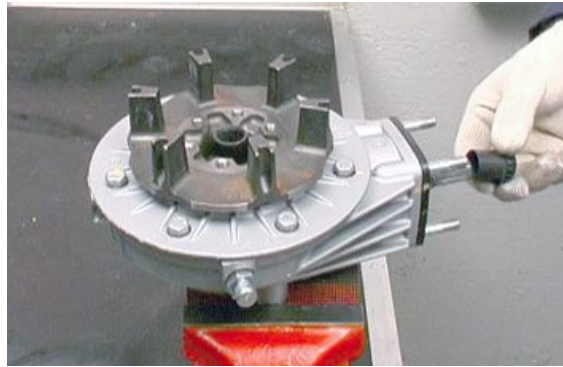

Checking

Gruppo pignone

- Remove the housing of the swingarm .
- Slide the complete case of the gear-case.

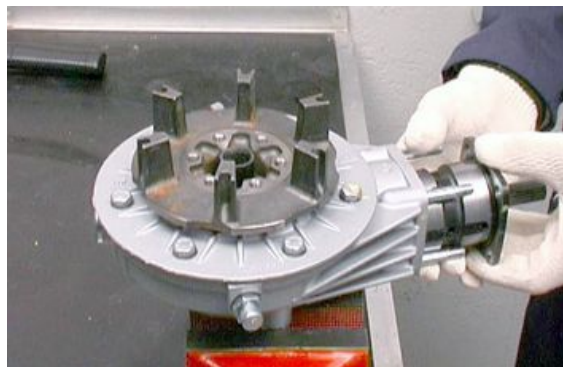


- Lock on the vice the sealing tool (19907100) of the bevel gear pair.




- Insert the grooved shank of the pinion on the tool and unscrew the nut.




- Slide off the spacer.
- Slide off the pinion.

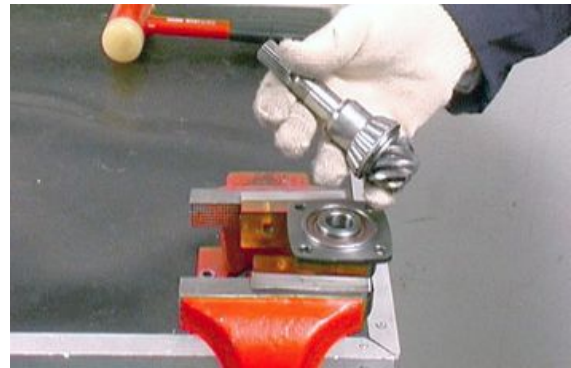

- Slide off the shim adjustment washer.
- Slide off the O-ring.

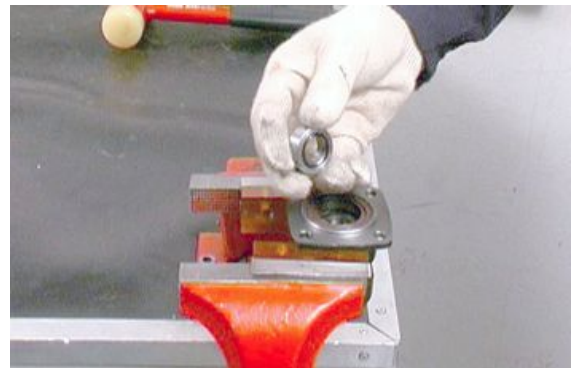


- Slide off the oil seal.

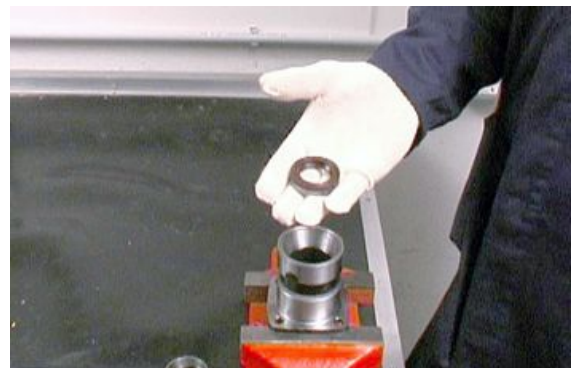

- Slide of the tapered bearing from the case.
- Slide off the O-ring.
- Slide off the spacer.
- Slide off the two shim washers.



- Slide off the tapered bearing from the case.

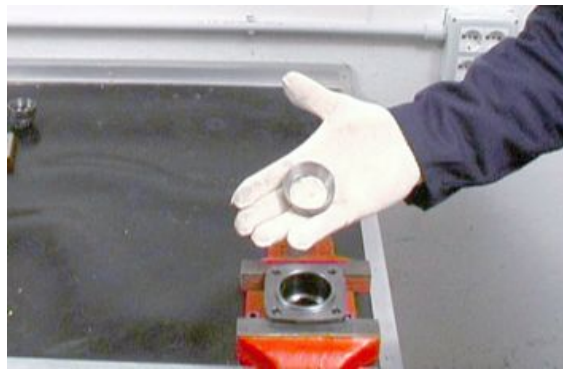

Controllo

- Check that the pinion toothing is not damaged, worn or deformed; otherwise, replace the pair.
- Check that both tapered bearings are not damaged, that the rollers are not damaged or worn; otherwise, replace them.
- Check that the adjustment washers are not deformed or broken; otherwise, replace them.
- Check that the sealing rings are not shattered, spoiled or worn; otherwise, replace them.

Montaggio

- If the bevel pinion should be replaced, replace also the crown fitted on the housing. The pinion and the crown should have the same number stamped.



- Fit the external ring of the tapered bearings on the bevel pinion holder case using the suitable punch (19926400).



-
- Fit the adjustment shim washer.



-
- Fit the internal ring of the bearing on the pinion using the suitable punch (19926200).



-
- Fit both shim washers on the pinion.
 - Fit the spacer on the pinion.
 - Fit the O-ring.



- Fit the complete pinion on the case using the suitable punch (19926100).



- Fit the oil seal.
- Fit the O-ring.



- Fit the spacer.



- Insert the grooved shank of the pinion on the tool (19907100) and tighten the nut.




Smontaggio gruppo scatola

- Undo the screws and collect the washers.



- Remove the braking disc from the drilled bolt.
- Undo the screws and collect the plates and the wave washers.
- Slide off the complete cover.
- Slide off the gaskets.
- Slide off the shimming ring.

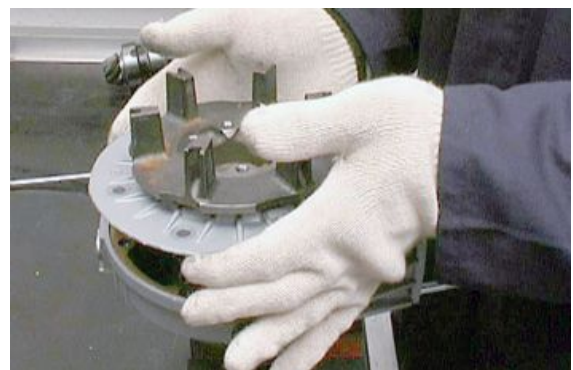

- Remove the O-ring from the groove on the drilled bolt.




From the cover, slide off:

- The needle bearing.
- Remove the internal ring of the needle bearing using a suitable punch (19907000).
- Remove the washer.
- Remove the washer.



- Undo the screws and collect the corresponding safety plates.

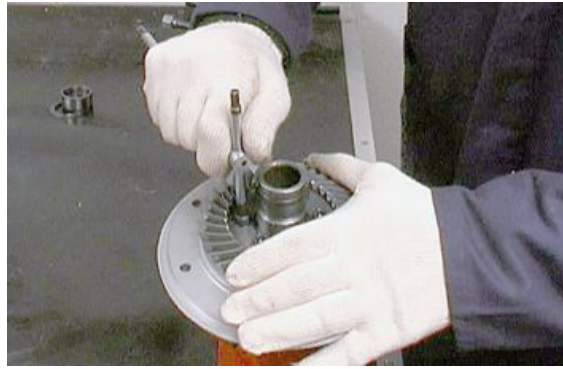

- Remove the conical crown.




- Slide off the drilled bolt from the bearing.



- Remove the sealing ring.



- Slide off the bearing from the cover using the suitable punch.

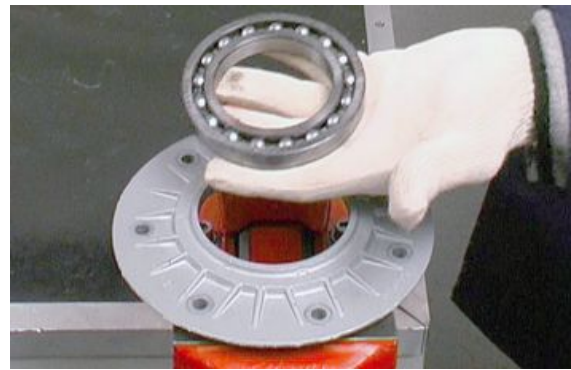

- Remove the external ring of the needle bearing from the housing using the suitable extractor (19927500).



- Remove the sealing ring and the washer.



Controllo

- Check that the drilled bolt tongues, where the anti-vibration rubbers operate, are not spoiled; that the surfaces of: the sealing ring; the bearing on the cover, the external ring of the bearing on the housing; the groove for the circlip on the drilled bolt are not worn, deformed or spoiled; otherwise, replace them.
- Check that the sealing ring on the housing is not shattered or is still flexible; otherwise, replace it.
- That the needle bearing on the housing does not have flattened or worn rollers; otherwise, replace it.
- Check efficiency of every component and that the coupling surfaces of the housing and cover are not scored or distorted.

Accoppiamento pignone corona

For coupling, proceed as follows:

- Provisionally lock the complete pinion case on the housing with two nuts and appropriate spacers.
- Fit the corresponding tool on the crown (19928800).



- Insert the tool on the bearing cage in the housing.



- Check alignment between pinion teeth and the crown teeth.
- If alignment is not regular, properly vary the thickness of the ring between the pinion and the tapered bearing.
- Also check the contact area between the pinion teeth and the crown teeth, proceeding as follows:



- Apply suitable colours available in the market on the pinion teeth.




- Fit the drilled bolt-crown unit cover and their spacers and gaskets on the housing and provisionally tighten the screws.




- On the crown holder drilled bolt, fit a "Universal" extractor that with appropriate central spacers slightly presses the crown towards the brake disc side.
- Turn the pinion in the riding direction, with the crown braked so that the rotation is carried out under load, and leaves a contact mark on the pinion surface.




- If the contact is regular, the mark on the pinion teeth will be like this (the pinion is seen from the crankshaft side)

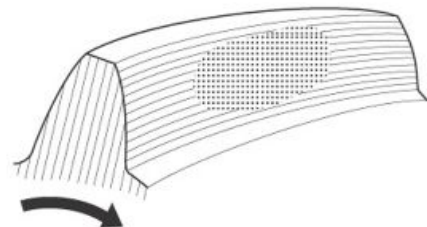


- If the contact is like this, the crown is too near the pinion rotation axis: detach the crown by increasing spacer thickness.

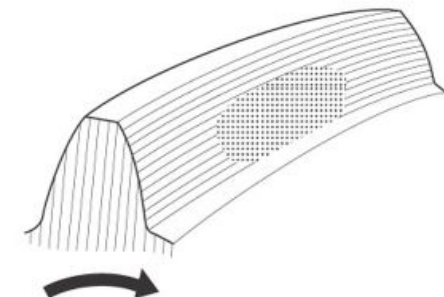


- If the contact is like this, the pinion is too near the rotation axis of the crown: detach the pinion by reducing spacer thickness

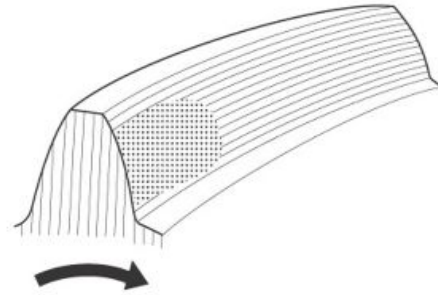

- If the contact is like this, the pinion is too far from the rotation axis of the crown: approach the pinion by increasing spacer thickness

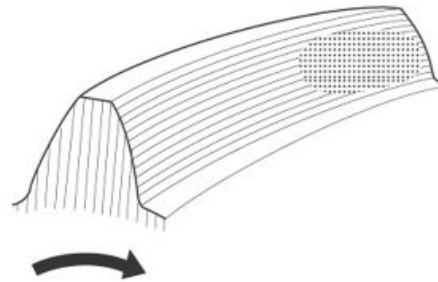


- If the contact is like this, the crown is too far from the pinion rotation axis: approach the crown by reducing spacer thickness.

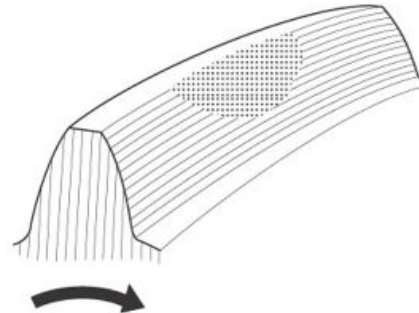

Montaggio gruppo scatola

- Fit the washer on the gearcase.

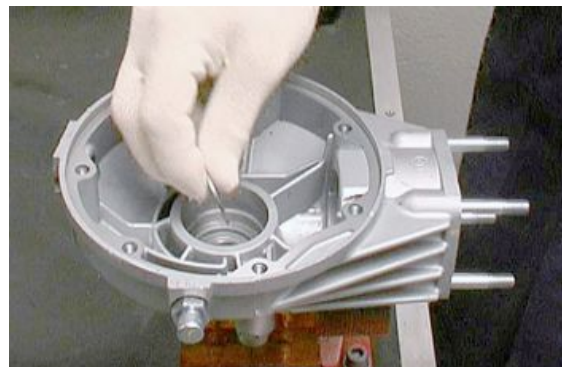


- Fit the sealing ring on the housing using the suitable punch (19926000).



- Fit the external ring of the needle bearing on the housing using the suitable punch (19926500).




- Fit the bearing on the cover using the suitable punch.

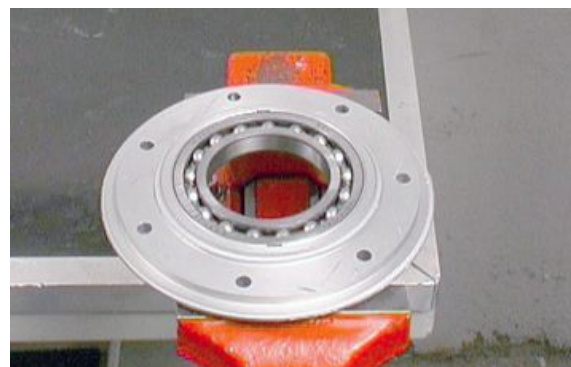

- Fit the internal ring of the needle bearing on the drilled bolt using the suitable punch (19927900).
- Insert the sealing ring in the drilled bolt.



- Fit the drilled bolt on the cover.

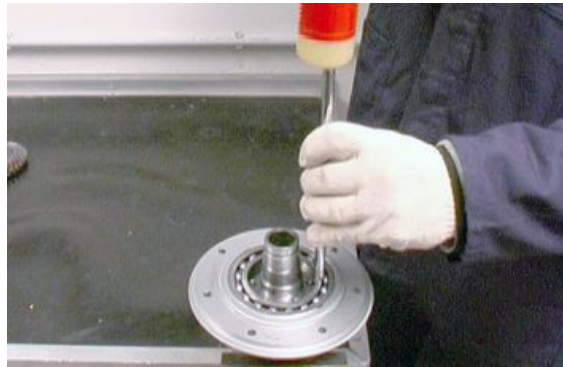

- Fit the crown.



- Fit the plates and tighten the screws.



- Insert the washer.



- Insert the washer.



- Fit the O-ring.
- Insert the gaskets and the shimming ring on the cover.
- Tighten the screws with plates and washers.




- Fit the braking disc on the drilled bolt by locking the screws with the washers using a torque wrench.







- When refitting the bevel pinion case on the transmission, bear in mind that the oil passage grooves with holes should be fitted vertically (observing the grooves, one should be facing upwards and the other facing the ground).

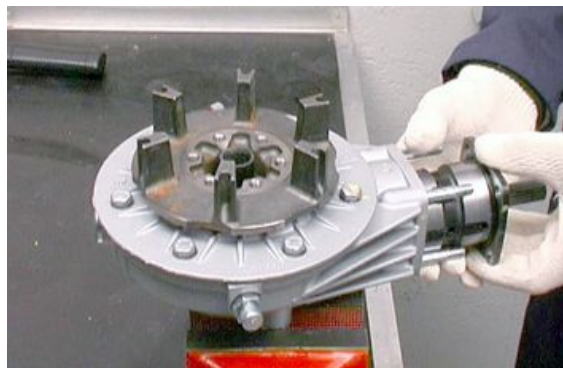


Installing


- Insert the sleeve and base on the bevel pinion of the gearcase.

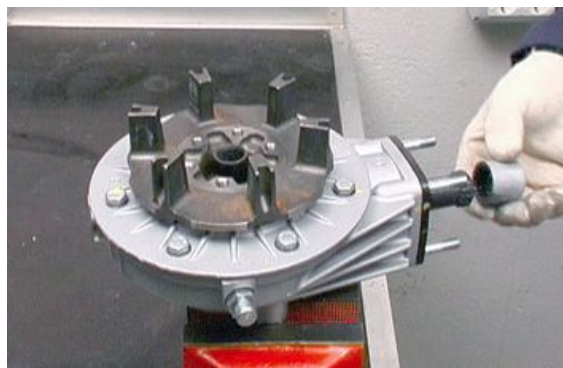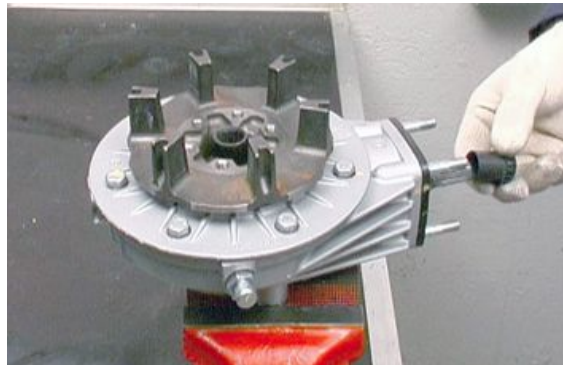


- Correctly insert the stud bolts of the gearcase in the holes of the swingarm .

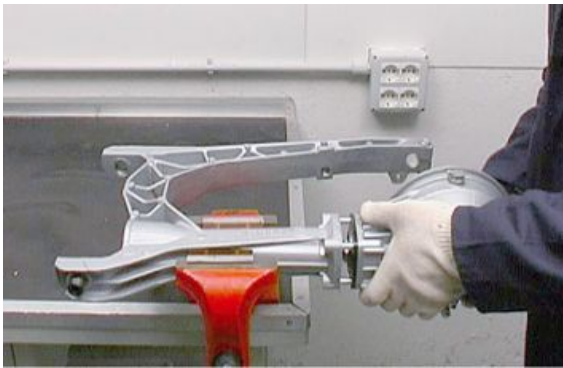

- Screw the nuts with the washers without locking them.

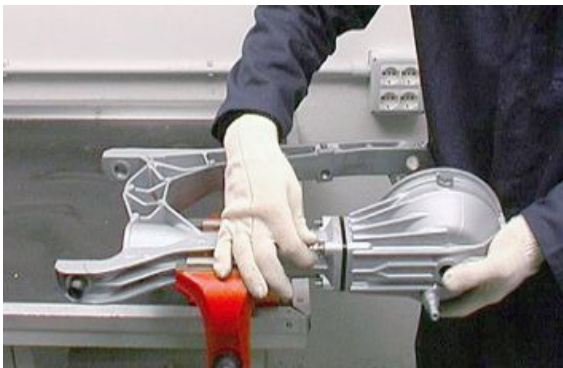


Exhaust

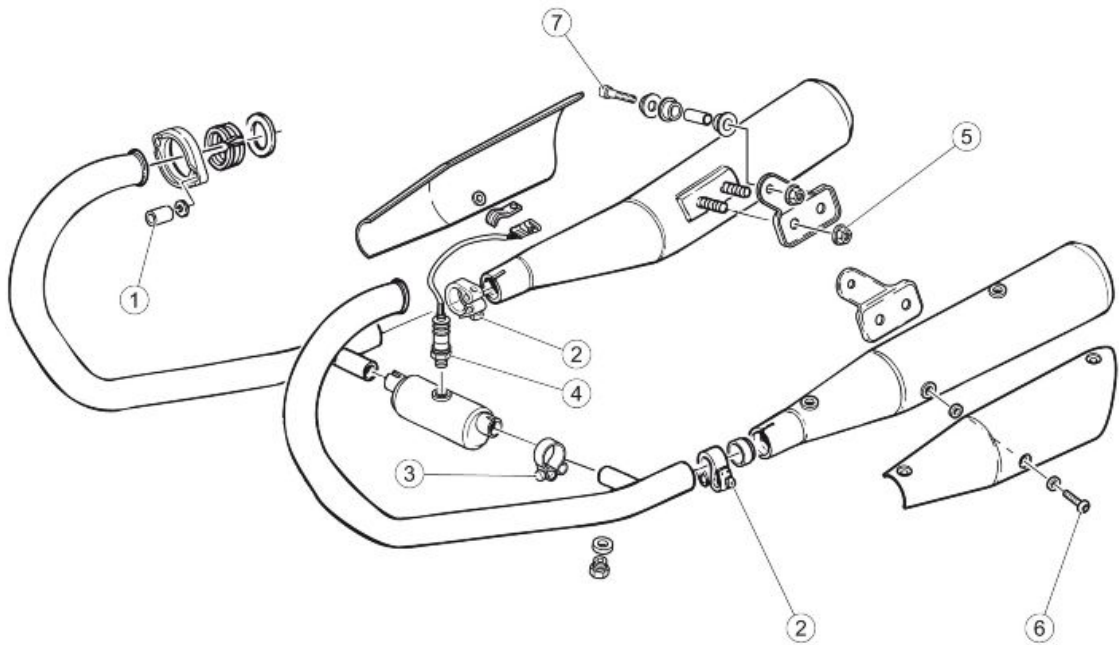

EXHAUST SYSTEM

Pos.	Description	Type	Quantity	Torque	Notes
1	Exhaust pipe fixing nut to the engine	M6	4	10 Nm (7.37 lb ft)	-

Pos.	Description	Type	Quantity	Torque	Notes
2	Exhaust pipe fixing clamp screw to the compensator	M6	1+1	10 Nm (7.37 lb ft)	-
3	Compensator fixing clamp screw to the silencer	M6	2	10 Nm (7.37 lb ft)	-
4	Lambda probe on compensator	M18x1.5	1	38 Nm (28.03 lb ft)	-
5	Nut fastening silencer to mounting plate	M8	4	25 Nm (18.44 lb ft)	-
6	Heat shield fixing screw	M6x12	6	10 Nm (7.37 lb ft)	Loctite 270
7	Screw fixing silencer mounting plate to frame	M8x40	2	25 Nm (18.44 lb ft)	-

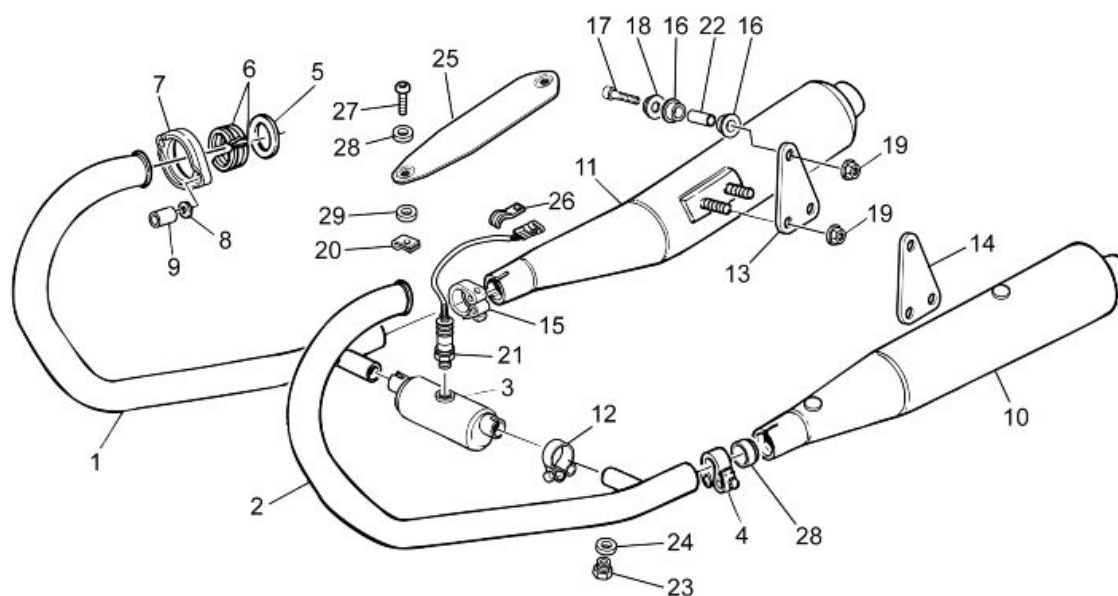**Key:**

1. Right exhaust pipe
2. Left exhaust pipe
3. Expansion chamber
4. Left silencer clamp
5. Gasket
6. Spacer
7. Ring nut
8. Washer
9. Nut
10. Left silencer
11. Right silencer
12. Clamp
13. Right plate
14. Left plate

- 15.Right silencer clamp
- 16.Muffler rubber ring
- 17.TCEI screw
- 18.Silencer fixing bushing
- 19.Nut
- 20.Clip
- 21.Lambda Probe
- 22.Spacer
- 23.Cap
- 24.Gasket
- 25.Protection
- 26.U-bolt
- 27.TBEI screw
- 28.Bushing
- 29.Insulating washer

Removing the tail pipe

The engine and the exhaust system components get very hot and remain in this condition for a certain time interval after the engine has been shut off. Before handling these components, make sure that you are wearing insulating gloves or wait until the engine and the exhaust system have cooled down.

- Loosen the clamp between the exhaust end and the catalytic converter.
- Unscrew and remove the muffler fixing nut and collect the screw and the bushing.
- Remove the exhaust end.



Removing the lambda sensor

- Disconnect the lambda probe connector.




- Unscrew and remove the lambda sensor.



INDEX OF TOPICS


BODYWORK

BODYW

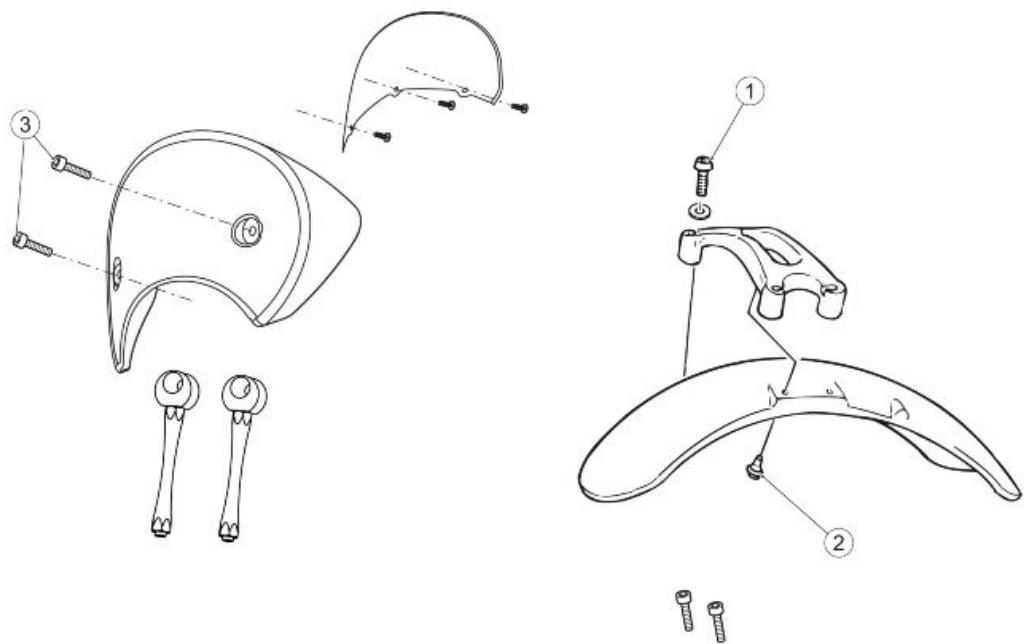

BODYWORK - FRONT SECTION


pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening stabiliser plate to fork	M8x40	4	15 Nm (11.06 lbf ft)	Loctite 243
2	Screw fastening mudguard to stabiliser plate	M6x11	4	10 Nm (7.37 lbf ft)	Loctite 243
3	Top fairing fixing screw	M6	2	10 Nm (7.37 lbf ft)	

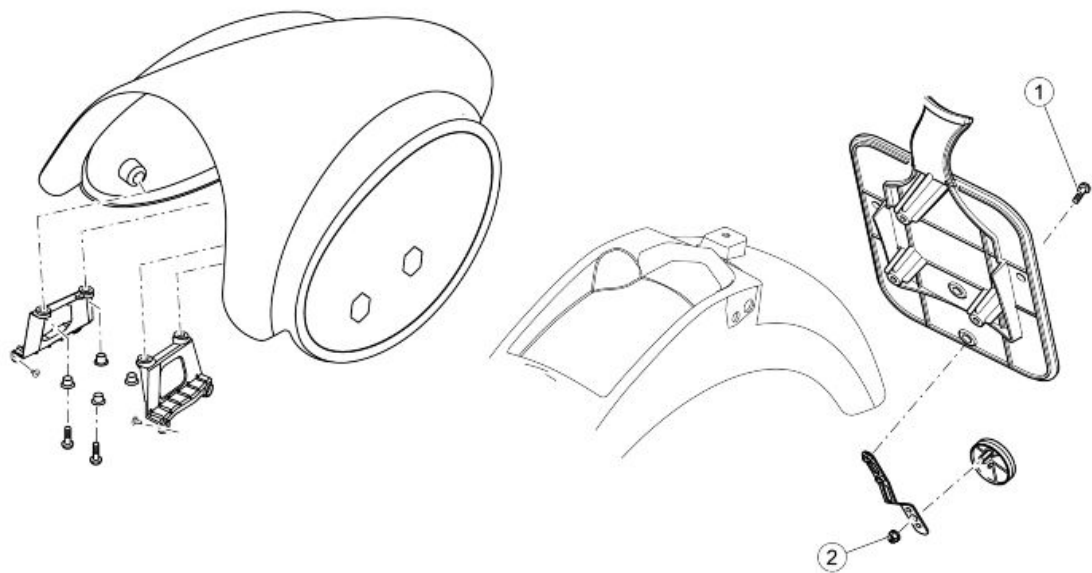

REAR SECTION BODYWORK - LICENSE PLATE MOUNTING

pos.	Description	Type	Quantity	Torque	Notes
1	Screw fastening retroreflector mounting to license plate mounting	M5x10	2	4 Nm (2.95 lbf ft)	-
2	Nut fixing retroreflector to mounting	M5	1	4 Nm (2.95 lbf ft)	-


Fuel tank

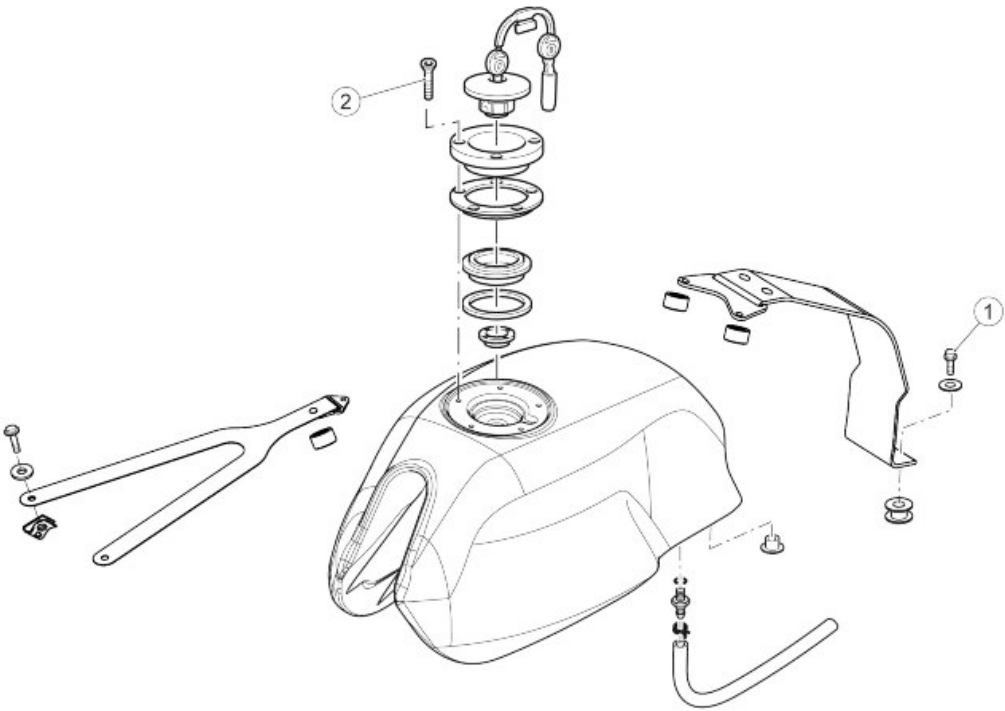

FUEL TANK

pos.	Description	Type	Quantity	Torque	Notes
1	Rear tank fixing screw	M8x45	1	25 Nm (18.44 lb ft)	-
2	Screw fastening cap flange to tank	M5x12	2+3	4 Nm (2.95 lb ft)	-


- Remove the screws that fix the horns.

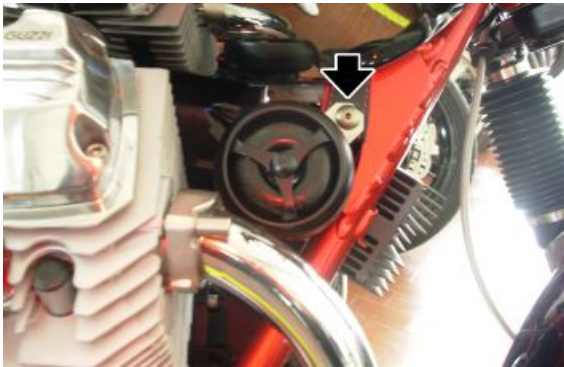

- Unscrew and remove the rear screw.



- Disconnect the connector.

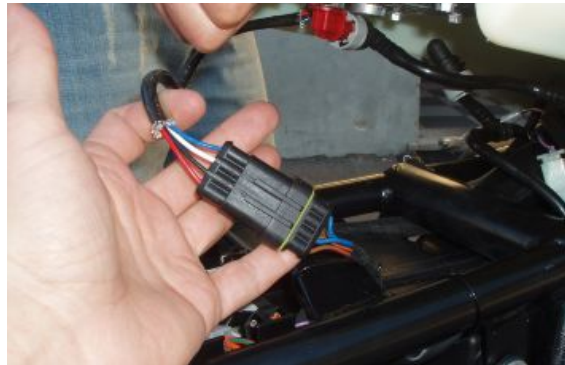

- Disconnect the fuel pipe.



- Remove the fuel breather pipe.



- Remove the fuel tank by sliding it off and back.

INDEX OF TOPICS

PRE-DELIVERY

PRE DE

Carry out the listed checks before delivering the motorcycle.

WARNING



HANDLE FUEL WITH CARE.

Aesthetic inspection

- Paintwork
 - Fitting of Plastic Parts
 - Scratches
 - Dirt
-

Tightening torques inspection

- Safety fasteners:
 - front and rear suspension unit
 - front and rear brake calliper retainer unit
 - front and rear wheel unit
 - engine - chassis retainers
 - steering assembly
 - Plastic parts fixing screws
-

Electrical system

- Main switch
 - Headlamps: high beam lights, low beam lights, tail lights (front and rear) and their warning lights
 - Headlight adjustment according to regulations in force
 - Front and rear stop light switches and their bulbs
 - Turn indicators and their warning lights
 - Instrument panel lights
 - Instrument panel: fuel and temperature indicator (if present)
 - Instrument panel warning lights
 - Horn
 - Electric starter
 - Engine stop via emergency stop switch and side stand
 - Helmet compartment electrical opening switch (if present)
-

- Through the diagnosis tool, check that the last mapping version is present in the control unit/s and, if required, program the control unit/s again: consult the technical service website to know about available upgrades and details regarding the operation.

CAUTION

TO ENSURE MAXIMUM PERFORMANCE, THE BATTERY MUST BE CHARGED BEFORE USE. INADEQUATE CHARGING OF THE BATTERY WITH A LOW LEVEL OF ELECTROLYTE BEFORE IT IS FIRST USED SHORTENS BATTERY LIFE.

CAUTION

UPON INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE ONE, AND PERFORM THE REVERSE OPERATION UPON REMOVAL.

WARNING

THE BATTERY ELECTROLYTE IS POISONOUS AS IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH YOUR EYES, SKIN AND CLOTHING. IN CASE OF CONTACT WITH YOUR EYES OR SKIN, WASH WITH ABUNDANT WATER FOR APPROX. 15 MIN. AND SEEK MEDICAL ATTENTION IMMEDIATELY. IF ACCIDENTALLY SWALLOWED, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR VEGETABLE OIL. SEEK IMMEDIATE MEDICAL ATTENTION. BATTERIES PRODUCE EXPLOSIVE GASES; KEEP CLEAR OF NAKED FLAMES, SPARKS OR CIGARETTES. VENTILATE THE AREA WHEN RECHARGING INDOORS. ALWAYS WEAR EYE PROTECTION WHEN WORKING IN THE PROXIMITY OF BATTERIES. KEEP OUT OF THE REACH OF CHILDREN.

CAUTION

NEVER USE FUSES WITH A CAPACITY HIGHER THAN THE RECOMMENDED CAPACITY. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.

Levels check

- Hydraulic braking system fluid level
- Clutch system fluid level (if present)
- Gearbox oil level (if present)
- Transmission oil level (if present)
- Engine coolant level (if present)
- Engine oil level
- Mixer oil level (if present)

Road test

- Cold start
- Instrument panel operation

- Response to throttle control
 - Stability when accelerating and braking
 - Front and rear brake efficiency
 - Front and rear suspension efficiency
 - Abnormal noise
-

Static test

Static check after test drive:

- Restarting when warmed up
 - Starter operation (if present)
 - Minimum holding (turning the handlebar)
 - Uniform turning of the steering
 - Possible leaks
 - Radiator electric fan operation (if present)
-

Functional inspection

- Hydraulic braking system
- Stroke of brake and clutch levers (if present)
- Clutch - Check for correct operation
- Engine - Check for correct general operation and absence of abnormal noise
- Other
- Documentation check:
- Chassis and engine numbers check
- Supplied tools check
- License plate fitting
- Locks checking
- Tyre pressure check
- Installation of mirrors and any possible accessories




NEVER EXCEED THE RECOMMENDED INFLATION PRESSURES AS TYRES MAY BURST.

CAUTION



CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE.

Specific operations for the vehicle

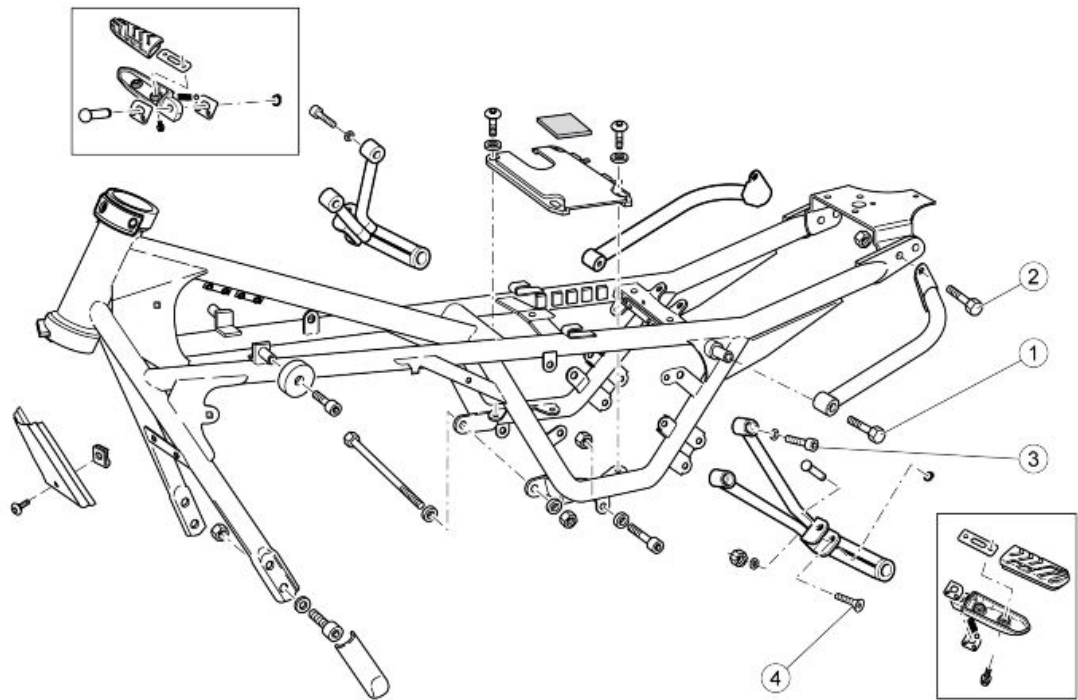

Two SEATER VERSION

pos.	Description	Type	Quantity	Torque	Notes
1	Passenger handgrip front fixing screw	M6	2	10 Nm (7.37 lbf ft)	-
2	Passenger handgrip rear fixing nut	M8	2	25 Nm (18.44 lbf ft)	-
3	Passenger footrest mounting bracket fixing screw	M8x16	4	25 Nm (18.44 lbf ft)	Loctite 243
4	Countersunk-head Allen screw	M8	2	25 Nm (18.44 lbf ft)	-

WARNING

OPERATIONS REQUIRED TO RENDER VEHICLE COMPLIANT WITH TWO SEATER TYPE APPROVAL.

- Remove the three fixing screws of the exhaust mounting plate.
- Remove the mounting plate.



- Fit the exhaust mounting plate preset for fixing the passenger footrest, so as to turn the vehicle into a two seater version.
- Tighten the three fastener screws to the specified torque.



- Fit the countersunk screw with hexagonal hole on "C" supporting the pedal and afterwards fit the washer.



- Place "C" on the exhaust supporting plate, pay attention that the holes to insert the pedal are adequately oriented.
- Hold the countersunk screw with hexagonal hole firmly in place and tighten the nut to 25 Nm (18.44 lbf ft).



- Position the pedal on "C" and insert the fixing pin.



- Lock the bolt with the Seeger ring.

**NOTE**

REPEAT THE STEPS TO FIT THE PASSENGER FOOTPEG ON THE OPPOSITE SIDE.

Turning the shock absorbers upside-down and fitting the passenger handgrips

- Remove the two shock absorber fixing screws.



- Turn the shock absorber as shown and fasten it at the bottom.
- Fit the passenger handgrip and tighten the screw to the prescribed torque.




- Tighten the passenger handgrip rear fastening screw.

**NOTE**

REPEAT THE PROCEDURE TO MODIFY EVEN THE OTHER SIDE.

SADDLE

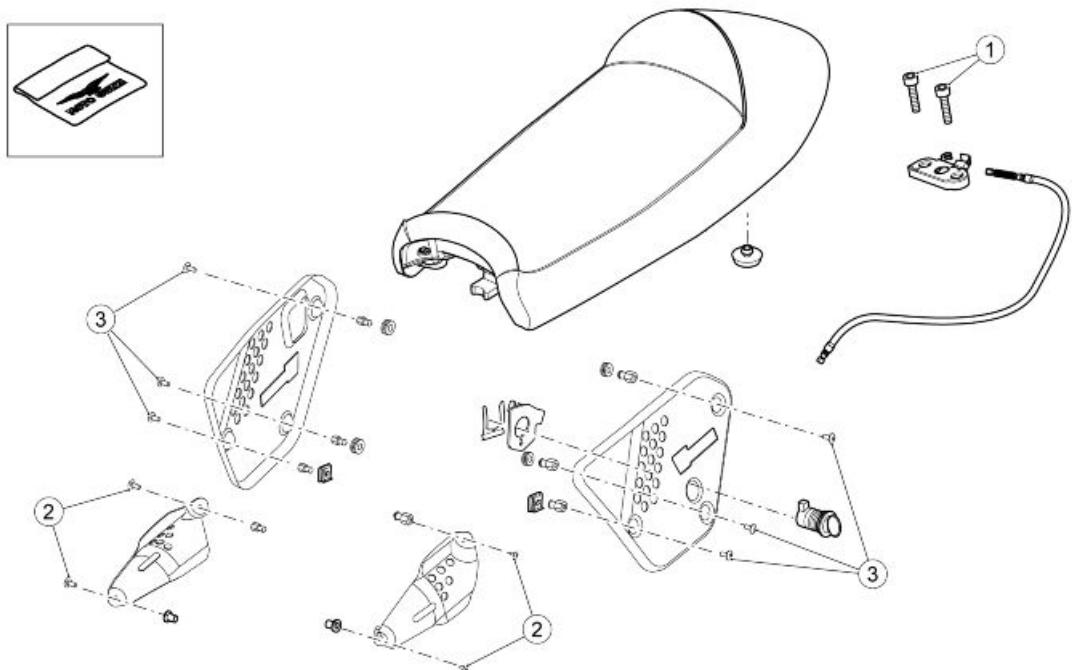

BODYWORK CENTRAL SECTION - SADDLE

pos.	Description	Type	Quantity	Torque	Notes
1	Saddle release block fixing screw	M6x25	2	10 Nm (2.37 lb ft)	-
2	Throttle body cover fastener screw	M5x14	4	4 Nm (2.95 lb ft)	-
3	Side fairing fixing screw	M5x9	6	4 Nm (2.95 lb ft)	-

Seat replacement

- Insert the key in the lock and turn it clockwise.
- Remove the single-seat saddle.



- Place the two-seat saddle.



A

Air filter: 43

Air temperature sensor: 67, 78

B

Battery: 61

Brake:

Brake lever:

Bulbs:

C

Clutch: 75

Coil: 72

Connectors: 80

D

Display:

E

ECU: 80, 103

Electrical system: 12, 49, 51, 160

Engine oil: 41

Engine temperature sensor: 65

Exhaust: 151

F

Fork: 110, 112, 116, 117, 121

Front wheel: 108

Fuel: 157

Fuses: 60

H

Handlebar: 109

I

Identification: 10

Instrument panel: 78

M

Maintenance: 8, 39

Maintenance Table:

Mudguard:

O

Oil filter: 43

Oil pressure sensor: 74

R

Rear wheel:

Recommended products: 34

Run/Stop switch: 79

S

Saddle:

Shock absorbers: 126

Side stand: 76

Side stand sensor: 76

Spark plugs:

Speed sensor: 61

Stand: 76

Start-up: 59

T

Tank: 157

Transmission: 12, 40

Tyres: 14

W

Warning lights:

Wiring diagram: 56