BREVA V1100 ABS

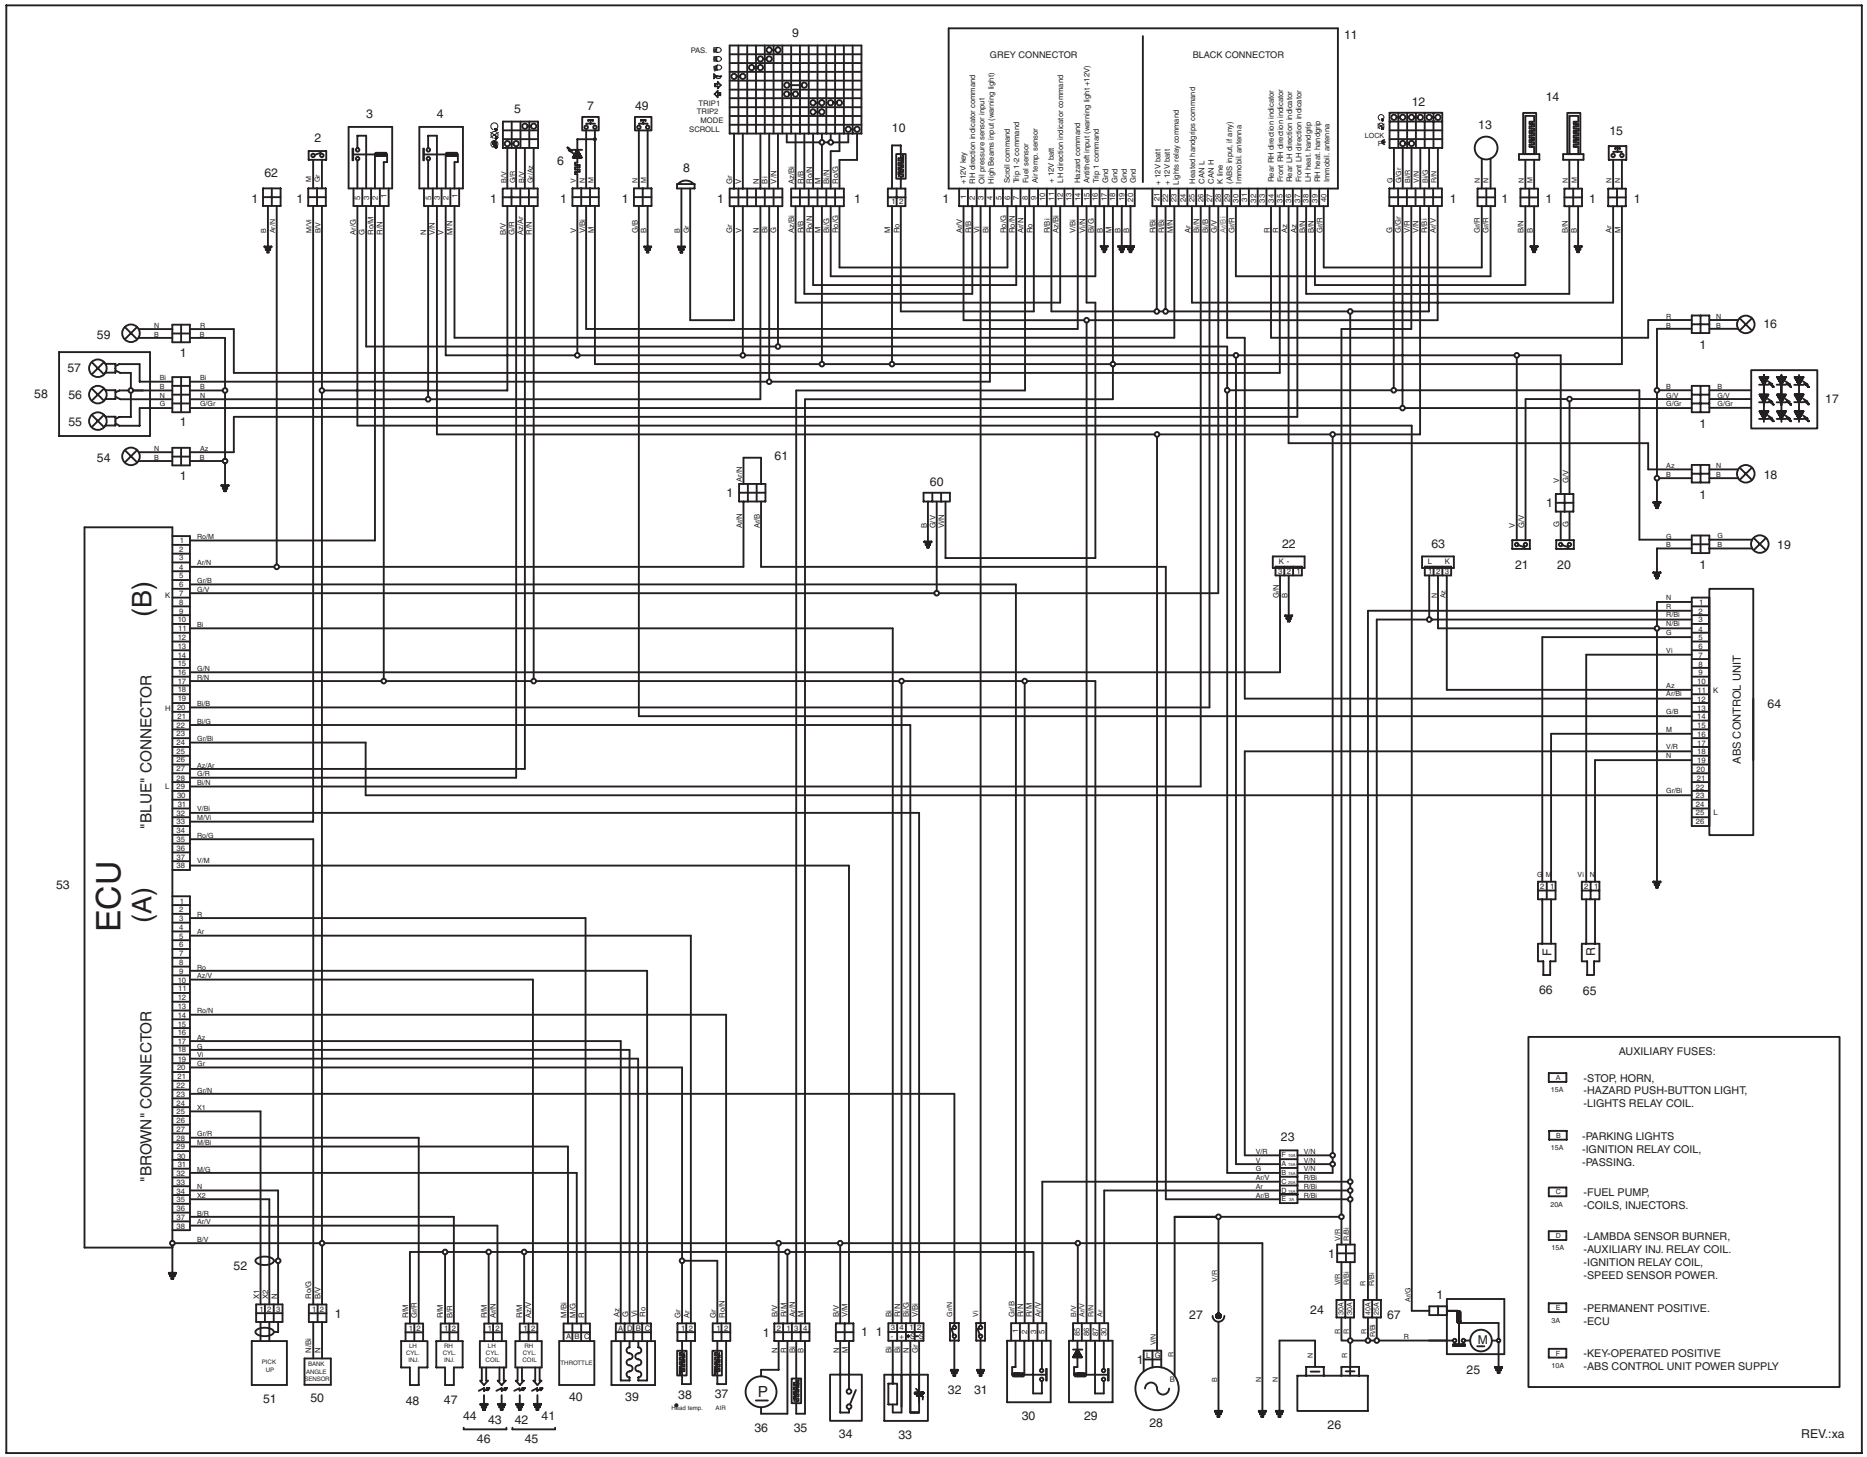

1 MULTIPLE CONNECTORS
2 CLUTCH SWITCH
3 IGNITION RELAY
4 LIGHTS RELAY
5 RH DIP SWITCH
6 HAZARD PUSH-BUTTON LED
7 HAZARD PUSH-BUTTON
8 HORN
9 LH DIP SWITCH
10 INSTRUMENT PANEL AIR TEMP. THERMISTOR
11 INSTRUMENT PANEL
12 IGNITION SWITCH
13 IMMOBILIZER ANTENNA
14 HEATED HANDGRIPS
15 HEATED HANDGRIPS COMMAND
16 RH REAR DIRECTION INDICATOR
17 TAIL LIGHT (LED)
18 LH REAR DIRECTION INDICATOR
19 NUMBER PLATE LIGHT
20 REAR STOP SWITCH
21 FRONT STOP SWITCH
22 DIAGNOSIS CONNECTOR
23 AUXILIARY FUSES
24 MAIN FUSES
25 STARTER MOTOR
26 BATTERY
27 POWER OUTLET
28 GENERATOR
29 MAIN INJECTION RELAY
30 AUXILIARY INJECTION RELAY
31 OIL PRESSURE GAUGE
32 NEUTRAL SWITCH
33 LAMBDA SENSOR
34 SIDE STAND SWITCH
35 FUEL LEVEL SENSOR
36 FUEL PUMP
37 INTAKE AIR TEMP. THERMISTOR
38 HEAD TEMP. THERMISTOR
39 AUTOMATIC AIR
40 THROTTLE SENSOR
41 RH CYL. INNER SPARK PLUG
42 RH CYL. OUTER SPARK PLUG
43 LH CYL. INNER SPARK PLUG
44 LH CYL. OUTER SPARK PLUG
45 RH CYLINDER TWIN COIL
46 LH CYLINDER TWIN COIL
47 RH CYL. INJECTOR
48 LH CYL. INJECTOR
49 ABS SWITCH
50 BANK ANGLE SENSOR
51 PICKUP SENSOR
52 PICKUP CABLE SHIELD
53 ECU
54 LH FRONT DIRECTION INDICATOR
55 PARKING LIGHT BULB
56 LOW BEAM BULB
57 HIGH BEAM BULB
58 HEADLIGHT
59 RH FRONT DIRECTION INDICATOR
60 INSTRUMENT PANEL DIAG.
61 DIODE PRE-SETTING
62 CONDENSER PRE-SETTING
63 ABS DIAG.
64 ABS CONTROL UNIT
65 REAR WHEEL SPEED SENSOR
66 FRONT WHEEL SPEED SENSOR
67 ABS FUSES

CABLE COLOURS

Ar ORANGE	M BROWN
Az LIGHT BLUE	N BLACK
B BLUE	R Red
Bi WHITE	V GREEN
G YELLOW	Vi VIOLET
Gr GREY	Ro PINK

AUXILIARY FUSES:

- A 15A -STOP, HORN, -HAZARD PUSH-BUTTON LIGHT, -LIGHTS RELAY COIL.
- B 15A -PARKING LIGHTS -IGNITION RELAY COIL, -PASSING.
- C 20A -FUEL PUMP, -COILS, INJECTORS.
- D 15A -LAMBDA SENSOR BURNER, -AUXILIARY INJ. RELAY COIL. -IGNITION RELAY COIL, -SPEED SENSOR POWER.
- E 3A -PERMANENT POSITIVE. -ECU
- F 10A -KEY-OPERATED POSITIVE -ABS CONTROL UNIT POWER SUPPLY