


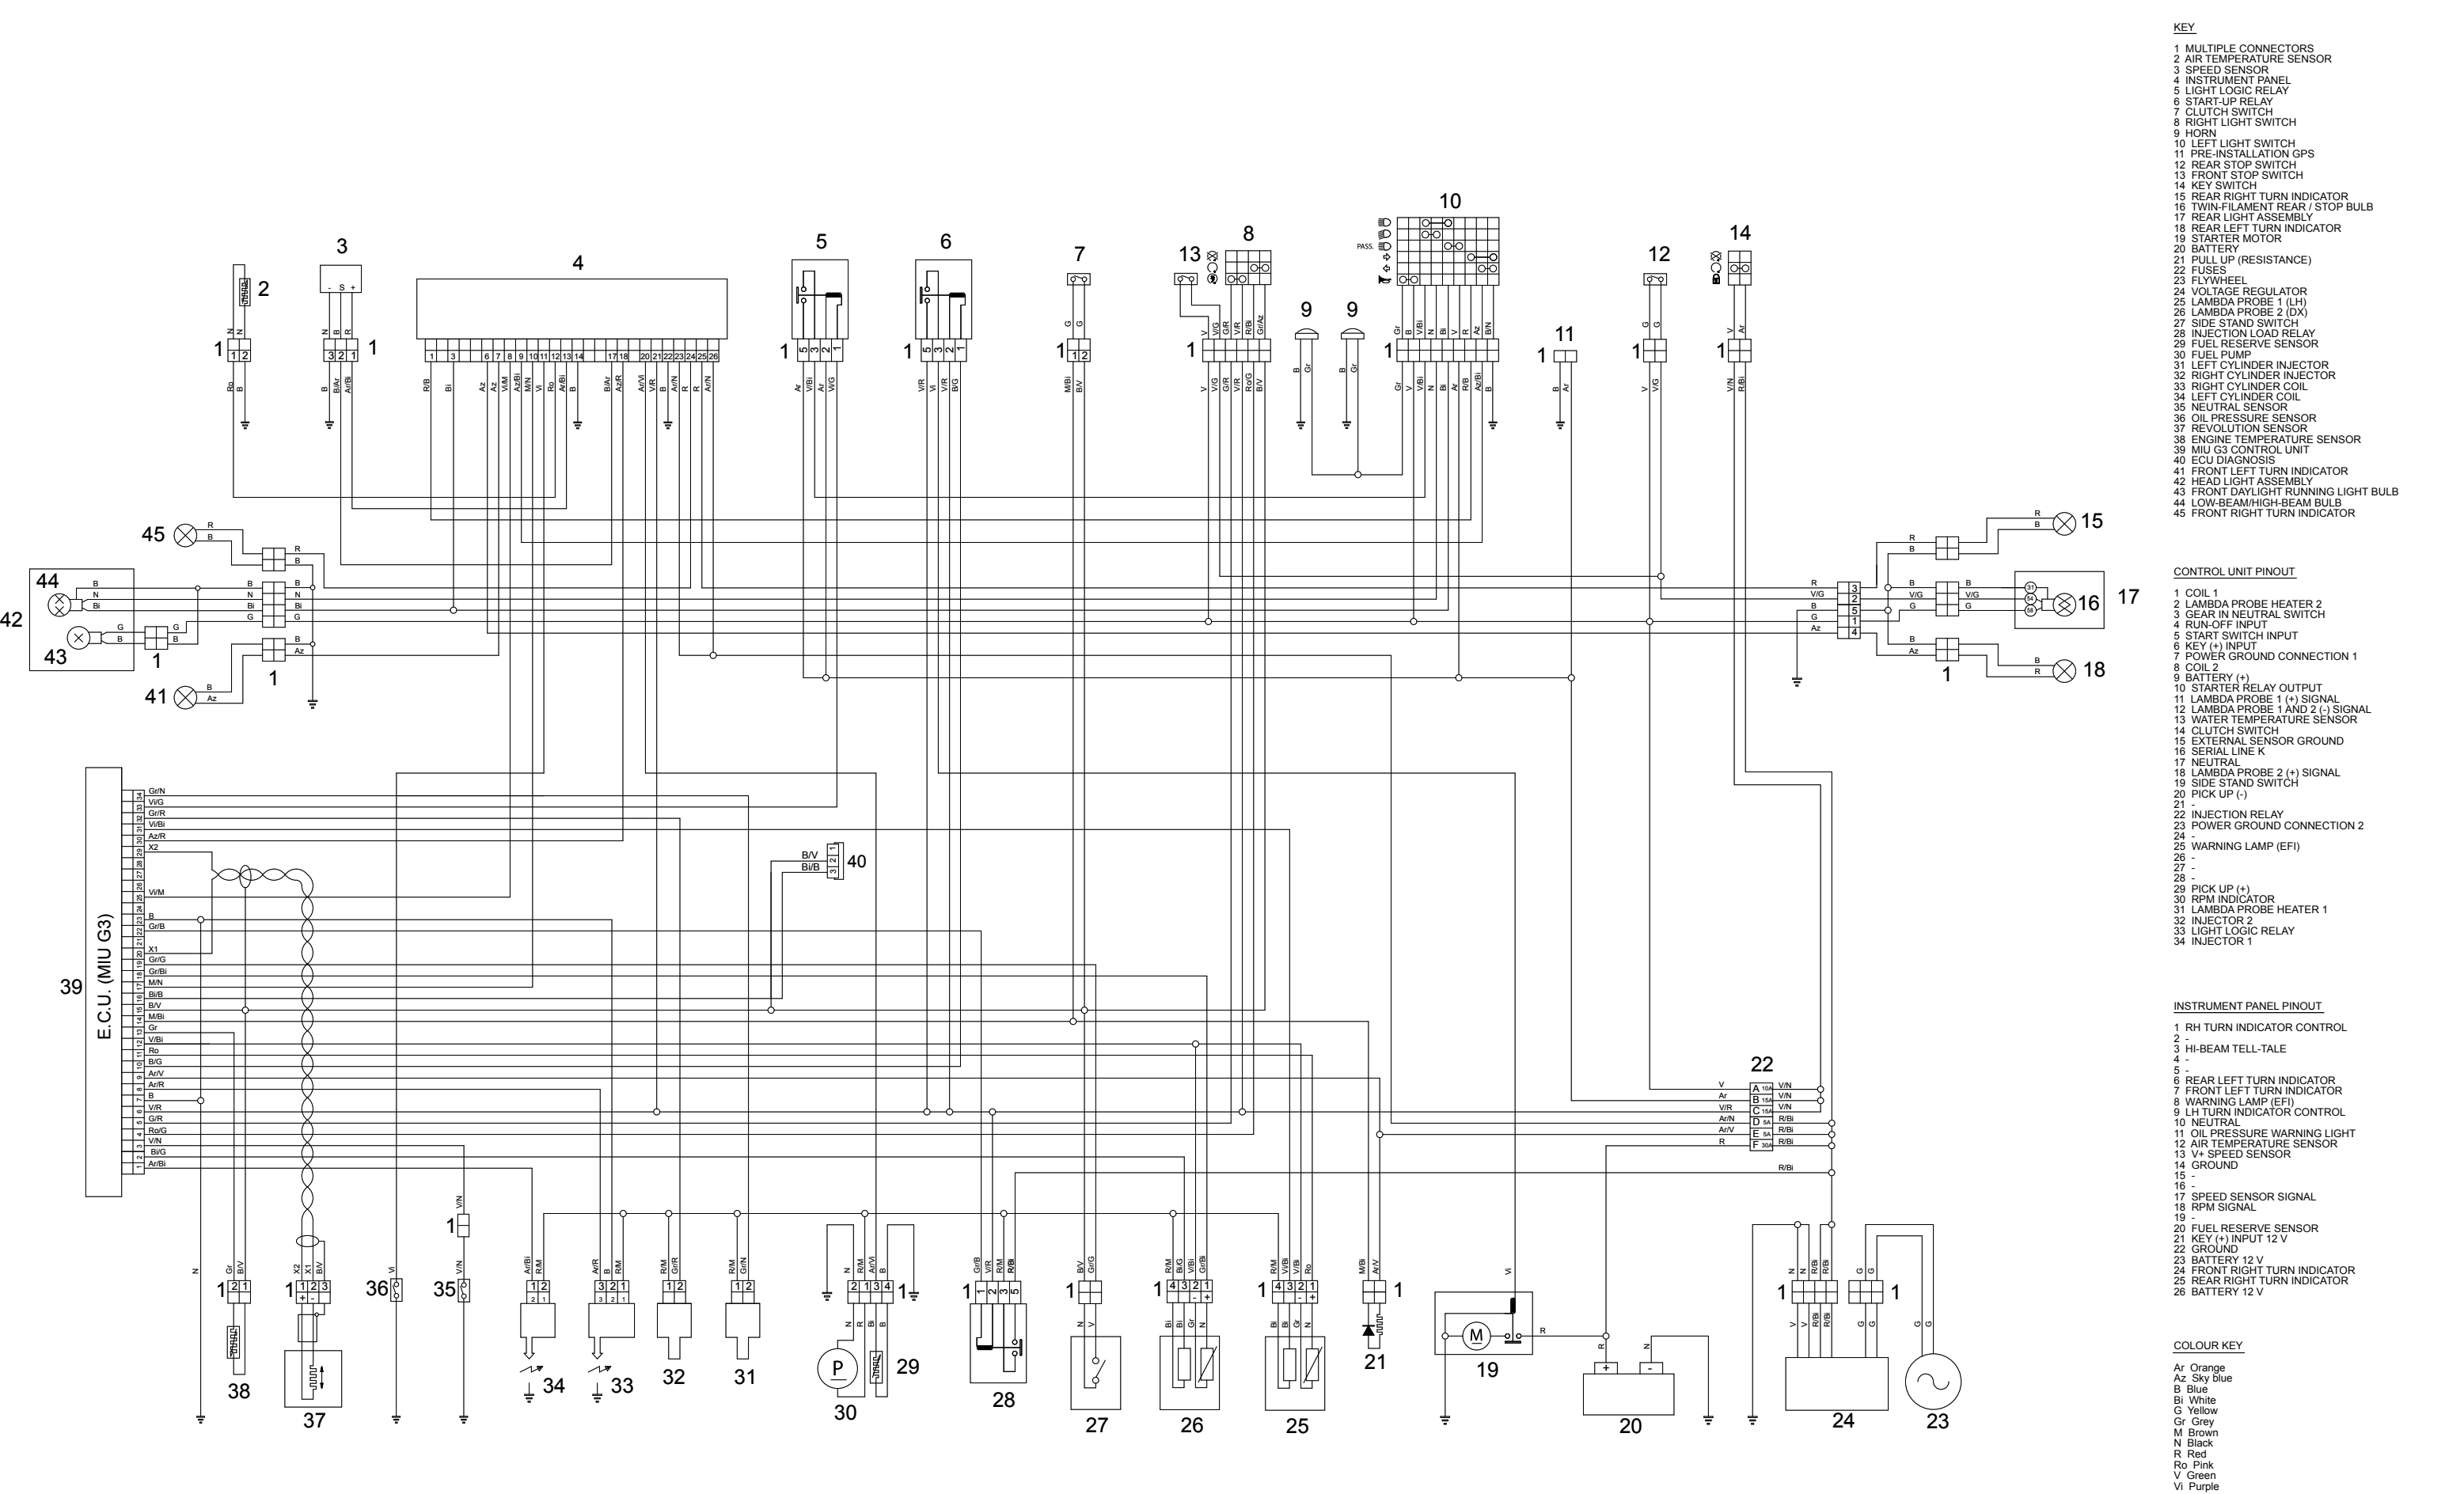

- KEY**
- 1 MULTIPLE CONNECTORS
 - 2 AIR TEMPERATURE SENSOR
 - 3 SPEED SENSOR
 - 4 INSTRUMENT PANEL
 - 5 LIGHT LOGIC RELAY
 - 6 START-UP RELAY
 - 7 CLUTCH SWITCH
 - 8 RIGHT LIGHT SWITCH
 - 9 HORN
 - 10 LEFT LIGHT SWITCH
 - 11 PRE-INSTALLATION GPS
 - 12 REAR STOP SWITCH
 - 13 FRONT STOP SWITCH
 - 14 KEY SWITCH
 - 15 REAR RIGHT TURN INDICATOR
 - 16 TWIN-FILAMENT REAR / STOP BULB
 - 17 REAR LIGHT ASSEMBLY
 - 18 REAR LEFT TURN INDICATOR
 - 19 STARTER MOTOR
 - 20 BATTERY
 - 21 PULL UP (RESISTANCE)
 - 22 FUSES
 - 23 FLYWHEEL
 - 24 VOLTAGE REGULATOR
 - 25 LAMBDA PROBE 1 (LH)
 - 26 LAMBDA PROBE 2 (DX)
 - 27 SIDE STAND SWITCH
 - 28 INJECTION LOAD RELAY
 - 29 FUEL RESERVE SENSOR
 - 30 FUEL PUMP
 - 31 LEFT CYLINDER INJECTOR
 - 32 RIGHT CYLINDER INJECTOR
 - 33 RIGHT CYLINDER COIL
 - 34 LEFT CYLINDER COIL
 - 35 NEUTRAL SENSOR
 - 36 OIL PRESSURE SENSOR
 - 37 REVOLUTION SENSOR
 - 38 ENGINE TEMPERATURE SENSOR
 - 39 MIU G3 CONTROL UNIT
 - 40 ECU DIAGNOSIS
 - 41 FRONT LEFT TURN INDICATOR
 - 42 HEAD LIGHT ASSEMBLY
 - 43 FRONT DAYLIGHT RUNNING LIGHT BULB
 - 44 LOW-BEAM/HIGH-BEAM BULB
 - 45 FRONT RIGHT TURN INDICATOR

- CONTROL UNIT PINOUT**
- 1 COIL 1
 - 2 LAMBDA PROBE HEATER 2
 - 3 GEAR IN NEUTRAL SWITCH
 - 4 RUN-OFF INPUT
 - 5 START SWITCH INPUT
 - 6 KEY (+) INPUT
 - 7 POWER GROUND CONNECTION 1
 - 8 COIL 2
 - 9 BATTERY (+)
 - 10 STARTER RELAY OUTPUT
 - 11 LAMBDA PROBE 1 (+) SIGNAL
 - 12 LAMBDA PROBE 1 AND 2 (+) SIGNAL
 - 13 WATER TEMPERATURE SENSOR
 - 14 CLUTCH SWITCH
 - 15 EXTERNAL SENSOR GROUND
 - 16 SERIAL LINE K
 - 17 NEUTRAL
 - 18 LAMBDA PROBE 2 (+) SIGNAL
 - 19 SIDE STAND SWITCH
 - 20 PICK UP (-)
 - 21
 - 22 INJECTION RELAY
 - 23 POWER GROUND CONNECTION 2
 - 24 -
 - 25 WARNING LAMP (EFI)
 - 26 -
 - 27 -
 - 28 -
 - 29 PICK UP (+)
 - 30 RPM INDICATOR
 - 31 LAMBDA PROBE HEATER 1
 - 32 INJECTOR 2
 - 33 LIGHT LOGIC RELAY
 - 34 INJECTOR 1

- INSTRUMENT PANEL PINOUT**
- 1 RH TURN INDICATOR CONTROL
 - 2 -
 - 3 HI-BEAM TELL-TALE
 - 4 -
 - 5 -
 - 6 REAR LEFT TURN INDICATOR
 - 7 FRONT LEFT TURN INDICATOR
 - 8 WARNING LAMP (EFI)
 - 9 LH TURN INDICATOR CONTROL
 - 10 NEUTRAL
 - 11 OIL PRESSURE WARNING LIGHT
 - 12 AIR TEMPERATURE SENSOR
 - 13 V+ SPEED SENSOR
 - 14 GROUND
 - 15 -
 - 16 -
 - 17 SPEED SENSOR SIGNAL
 - 18 RPM SIGNAL
 - 19
 - 20 FUEL RESERVE SENSOR
 - 21 KEY (+) INPUT 12 V
 - 22 GROUND
 - 23 BATTERY 12 V
 - 24 FRONT RIGHT TURN INDICATOR
 - 25 REAR RIGHT TURN INDICATOR
 - 26 BATTERY 12 V

- COLOUR KEY**
- Ar Orange
 - Az Sky blue
 - B Blue
 - Bi White
 - G Yellow
 - Gr Grey
 - M Brown
 - N Black
 - R Red
 - Ro Pink
 - V Green
 - Vi Purple

- DIAGRAM COLOURS - KEY**
- POWER SUPPLY
 - GROUND
 - ENABLING/ SIGNAL
 - ENABLING/ SIGNAL

